

SERVICE MANUAL

P770DM / P771DM / P770DM-G / P771DM-G

notebook



Notebook Computer

P770DM / P771DM / P770DM-G / P771DM-G

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
September 2015

Trademarks

Intel and **Intel Core** are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *P770DM* / *P771DM* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.
Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19.5V, 11.8A (**230** Watts) minimum AC/DC Adapter.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

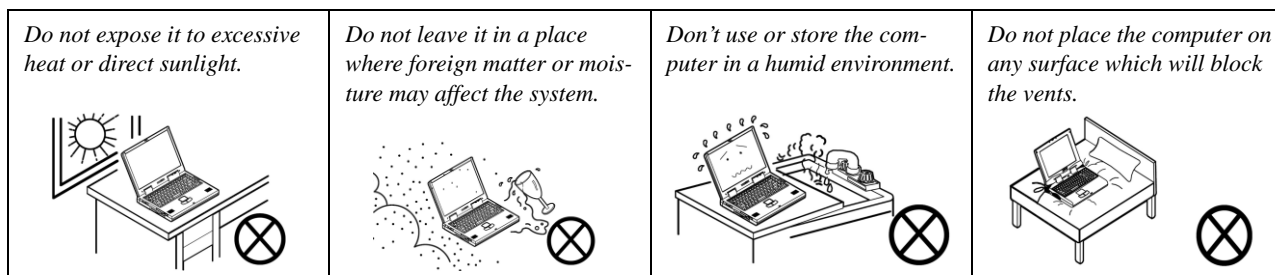

3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

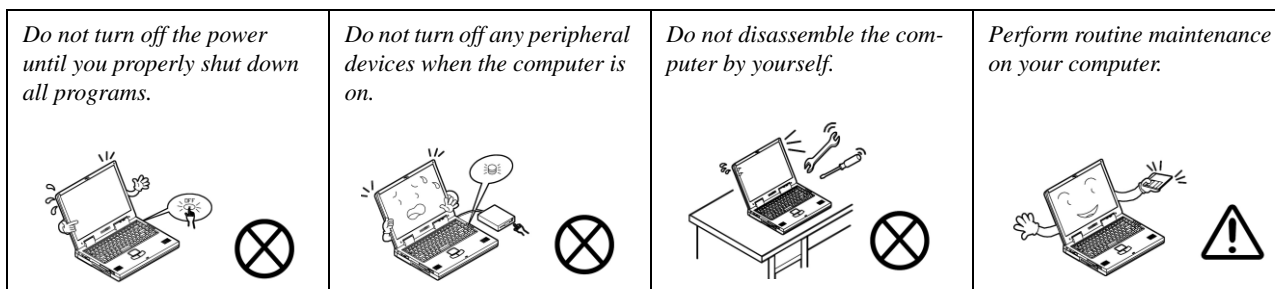

Preface



Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before restoring power to the system.

Also note the following when the cover is removed:


- Hazardous moving parts.
- Keep away from moving fan blades

Power Safety Warning


Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). You must also remove your battery in order to prevent accidentally turning the machine on.

4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

Use only approved brands of peripherals.

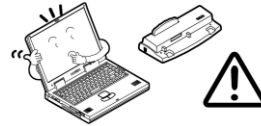

Unplug the power cord before attaching peripheral devices.

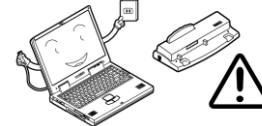

Power Safety


The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.


Do not plug in the power cord if you are wet.



Do not use the power cord if it is broken.

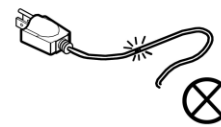

Do not place heavy objects on the power cord.

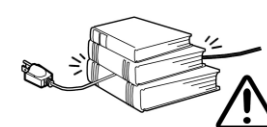

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.





Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon   in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on Disc

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter (**make sure you use the adapter when first setting up the computer**, as to safeguard the computer during shipping the battery will be locked to not power the system until first connected to the AC/DC adapter).
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not to exceed **135** degrees); use the other hand (as illustrated in **Figure 1**) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

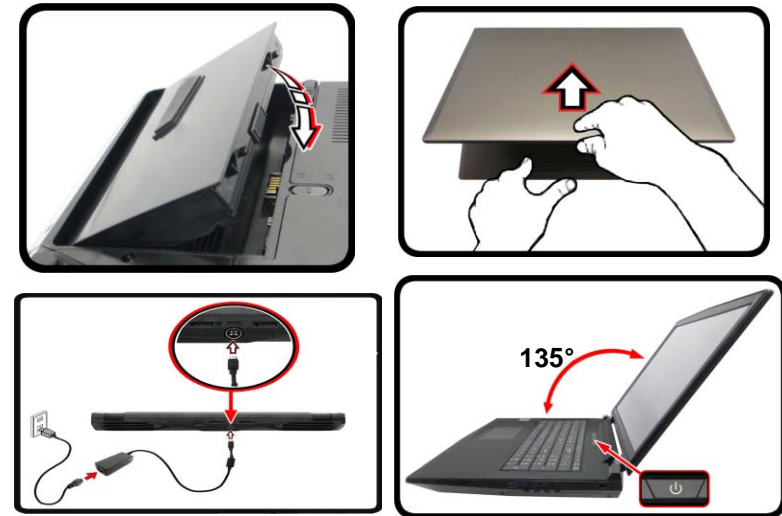


Figure 1
**Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In**

Contents

Introduction1-1

Overview	1-1
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing and Installing the Hard Disk Drive	2-6
Removing the M.2 SSD Module	2-10
Removing the Primary System Memory (RAM)	2-11
Removing the System Memory (RAM) from Under the Keyboard ..	2-13
Removing and Installing the Processor	2-15
Removing the Wireless LAN Module	2-18
Wireless LAN, Combo Module Cables	2-19
Removing the M.2 SATA Module	2-20
Removing and Installing the Video Card	2-22

Part ListsA-1

Part List Illustration Location	A-2
---------------------------------------	-----

Top	A-3
Bottom	A-4
LCD	A-5
MB	A-6
HDD	A-7

Schematic Diagrams.....B-1

Block Diagram	B-2
Processor 1/5	B-3
Processor 2/5	B-4
Processor 3/5	B-5
Processor 4/5	B-6
Processor 5/5	B-7
DDR4 CHA SO-DIMM_0	B-8
DDR4 CHA SO-DIMM_1	B-9
DDR4 CHB SO-DIMM_0	B-10
DDR4 CHB SO-DIMM_1	B-11
Panel, Inverter, CRT	B-12
Display Port A	B-13
Display Port B	B-14
HDMI	B-15
MXM PCI-E	B-16
Lynix Point 1/7	B-17
Lynix Point 2/7	B-18
Lynix Point 3/7	B-19
Lynix Point 4/7	B-20
Lynix Point 5/7	B-21
Lynix Point 6/7	B-22
Lynix Point 7/7	B-23
USB + eSATA, USB Charging	B-24
CCD, USB Port3	B-25

Preface

M.2 3G+USB & WLAN+BT	B-26
M.2 PCIE4X SSD1 & SSD2	B-27
Realtek ALC892	B-28
PCM1861 + TAS5766DCA	B-29
Subwoofer	B-30
Audio Jack	B-31
EC IT8587	B-32
Second EC IT8587	B-33
Backlight Keyboard	B-34
LID SW, Fan, LED Conn	B-35
TP, FP, Multi-Con	B-36
LAN E2400	B-37
PS8338B + PS8330B	B-38
TBT	B-39
Power	B-40
TPS65982	B-41
Cardreader RTS5250	B-42
TPM SLB9655TT & NPCT420	B-43
VCCIO / 1P0A	B-44
DDR 1.2V/0.6VS/VCCPLL_OC	B-45
VDD3, VDD5	B-46
12V, 5VS, 3.3VS, 3.3VA	B-47
5VS_2	B-48
VCore / VCCGT	B-49
VCore Output Stage	B-50
VCCSA / VCCGT	B-51
Power Charger, DC-In	B-52
P750DM HDD Board	B-53
P750DM Power LED Board	B-54
P750DM Click Board	B-55
P750DM Audio Board	B-56
P750DM Charge LED Board	B-57

P750DM LID Switch Board	B-58
P750DM Finger Sensor Board	B-59
P770DM Charge LED Board	B-60
P750DM BOT LED Board	B-61
P775DM Power LED Board	B-62
Power On Sequence	B-63


Updating the FLASH ROM BIOS..... C-1

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **P770DM / P771DM / P770DM-G / P771DM-G** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in *User's Manual*. That manual is shipped with the computer.

Operating systems (e.g. *Windows 8.1*, etc.) have their own manuals as do application software (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **P770DM / P771DM / P770DM-G / P771DM-G** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please note the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

Intel® Core™ i7 Processor

i7-6700K (4.00GHz)*

8MB L3 Cache, 14nm, DDR4-2133MHz, TDP 91W

Intel® Core™ i5 Processor

i5-6600K (3.50GHz)*

6MB L3 Cache, 14nm, DDR4-2133MHz, TDP 91W

i5-6500 (3.20GHz)

6MB L3 Cache, 14nm, DDR4-2133MHz, TDP 65W

i5-6400 (2.70GHz)

6MB L3 Cache, 14nm, DDR4-2133MHz, TDP 65W

*Support Intel® XTU over-clocking technology

LCD Options

17.3" (43.94cm), 16:9, FHD (1920x1080)

Video Adapter Options

NVIDIA® GeForce GTX 980M PCIe Video Card

8GB GDDR5 Video RAM on board

NVIDIA® GeForce GTX 970M PCIe Video Card

6GB GDDR5 Video RAM

NVIDIA® GeForce GTX 965M PCIe Video Card

4GB GDDR5 Video RAM

Core Logic

Intel® Z170 Chipset

BIOS

AMI BIOS (64Mb SPI Flash-ROM)

Memory

Four 260 Pin SO-DIMM Sockets Supporting **DDR4 2133MHz** Memory

(The real memory operating frequency depends on the FSB of the processor.)

Memory Expandable from **4GB (minimum)** up to **64GB (maximum)**

Pointing Device

Built-in Touchpad (scrolling key functionality integrated)

Keyboard

Full Color **Illuminated** Full-size Winkey Keyboard (with numeric keypad and anti-ghost keys)

Audio

High Definition Audio Compliant Interface

S/PDIF Digital Output

Two Speakers

Sound Blaster Audio

ANSP™ 3D Sound Technology on Headphone Output

Built-In Array Microphone

Sub-Woofer

External 7.1CH Audio Output Supported by Headphone, Microphone, Line-In and S/PDIF Out Jacks

Storage

Two changeable 2.5" (6cm) 7.0mm (h)/ 9.5mm (h) SATA (Serial) Hard Disk Drives/Solid State Drives (SSD) supporting RAID level 0/1

(Factory Option) Two M.2 **SATA** 2280 SSDs supporting RAID level 0/1

Or

(Factory Option) Two M.2 **PCIe**

Gen3 x4 2280 SSDs supporting RAID level 0/1

Security

Security (Kensington® Type) Lock Slot

BIOS Password

(Factory Option) Fingerprint Reader Module

Trusted Platform Module 2.0

Interface

One USB 3.1 Port/Thunderbolt Port
Three USB 3.0 Ports
One eSATA/Powered 3.0 USB Port
One HDMI-Out Port
Two DisplayPorts (1.2)
One S/PDIF Out Jack
One Headphone/Speaker-Out Jack
One Microphone-In Jack
One Line-In Jack
One RJ-45 LAN Jack
One DC-In Jack

M.2 Slots

Slot 1 for **Combo WLAN and Bluetooth** Module
Slot 2 for **SATA or PCIe Gen3 x4 SSD**
Slot 3 for **SATA or PCIe Gen3 x4 SSD**

Communication

Built-In Gigabit Ethernet LAN
2.0M FHD PC Camera Module

WLAN/ Bluetooth M.2 Modules:

(**Factory Option**) Intel® Wireless-N 7265 Wireless LAN
(**802.11b/g/n**) + Bluetooth **4.0**
(**Factory Option**) Intel® Wireless-AC 3165 Wireless LAN
(**802.11ac**) + Bluetooth **4.0**
(**Factory Option**) Intel® Wireless-AC 8260 Wireless LAN
(**802.11ac**) + Bluetooth **4.1**
(**Factory Option**) Qualcomm® Atheros Killer™ Wireless-AC
1535 Wireless LAN (**802.11ac**) + Bluetooth **4.1**
(**Factory Option**) Third-Party Wireless LAN **802.11b/g/n** +
Bluetooth **4.0**

Card Reader

Embedded Multi-In-1 Push-Push Card Reader
MMC (MultiMedia Card) / RS MMC
SD (Secure Digital) / Mini SD / SDHC/ SDXC (up to UHS-II)

Environmental Spec

Temperature

Operating: 10°C - 35°C
Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%
Non-Operating: 10% - 90%

Power

Removable 8-cell Smart Lithium-Ion Battery Pack, 82WH

Full Range AC/DC Adapter

AC Input: 100 - 240V, 50 - 60Hz

DC Output: 19.5V, 11.8A (**230W**)

(**Factory Option**) DC Output: 19.5V, 16.9A (**330W**)

Dimensions & Weight

418mm (w) * 282mm (d) * 16 - 38.9mm (h)


3.9kg (Barebone System with Video Card and 82WH Battery)

Introduction

Figure 1
Top View

External Locator - Top View with LCD Panel Open

1. PC Camera
2. PC Camera LED
3. Built-In Microphone
4. LCD
5. Speakers
6. Power Button
7. LED Lock Indicators
8. Keyboard
9. TouchPad and Buttons
10. Fingerprint Reader (Optional)

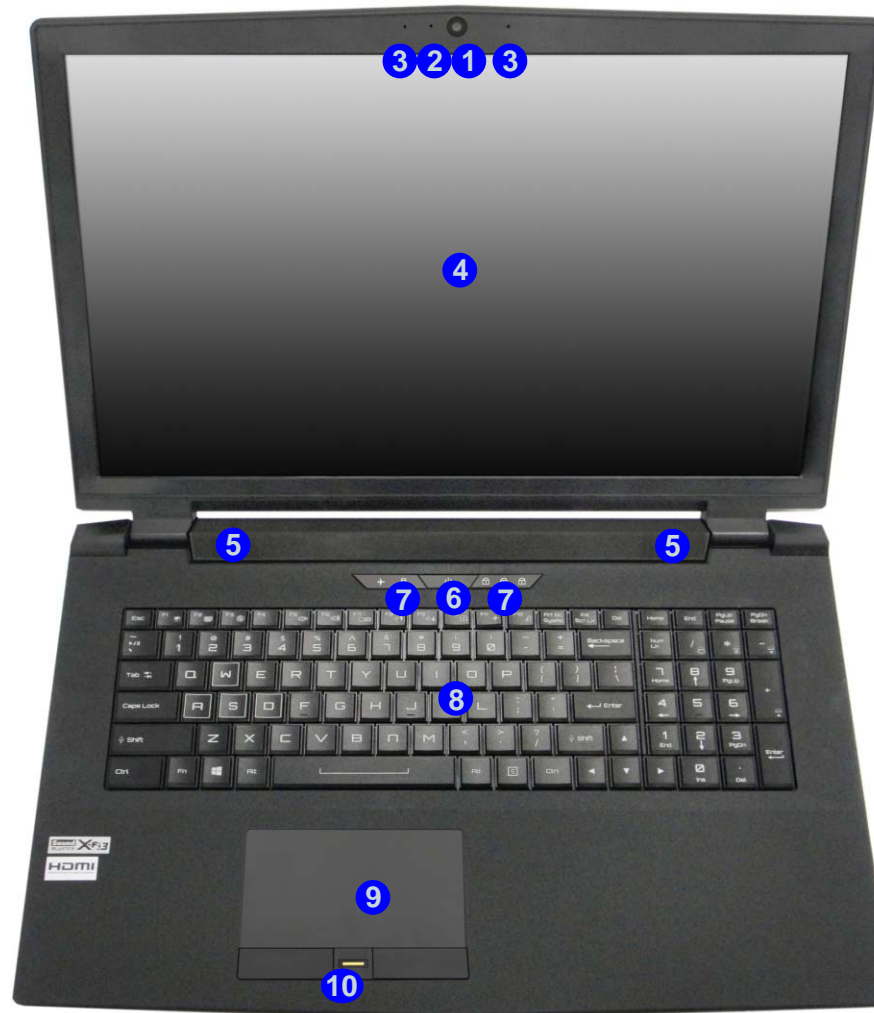

External Locator - Front & Right side Views

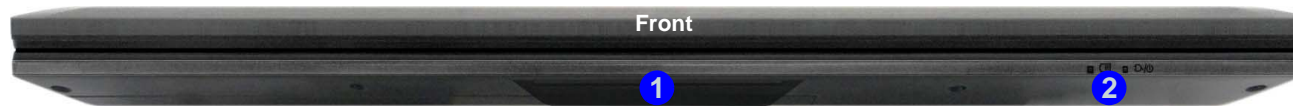


Figure 2
Front Views

1. Light Bar
2. LED Power Indicators



Figure 3
Right Side Views

1. USB 3.0 Port
2. S/PDIF-Out Jack
3. Headphone Jack
4. Microphone Jack
5. Line-In Jack
6. Security Lock Slot

Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. RJ-45 LAN Jack
2. USB 3.0 Ports
3. USB 3.1 Port
4. Multi-in-1 Card Reader
5. Combined eSATA/Powered USB 3.0 Port



Figure 5
Rear View

1. Vent/Fan Intake
2. HDMI-Out Port
3. Display Ports
4. DC-In Jack



External Locator - Bottom View



Figure 6
Bottom View

1. Vent
2. Battery
3. Sub Woofer
4. HDD Bay



Overheating


To prevent your computer from overheating make sure nothing blocks the vent/fan intakes while the computer is in use.

Introduction

Figure 7
**Mainboard Top
Key Parts**

1. Memory Slots
DDR3L SO-DIMM
2. Platform
Controller Hub

Mainboard Overview - Top (Key Parts)

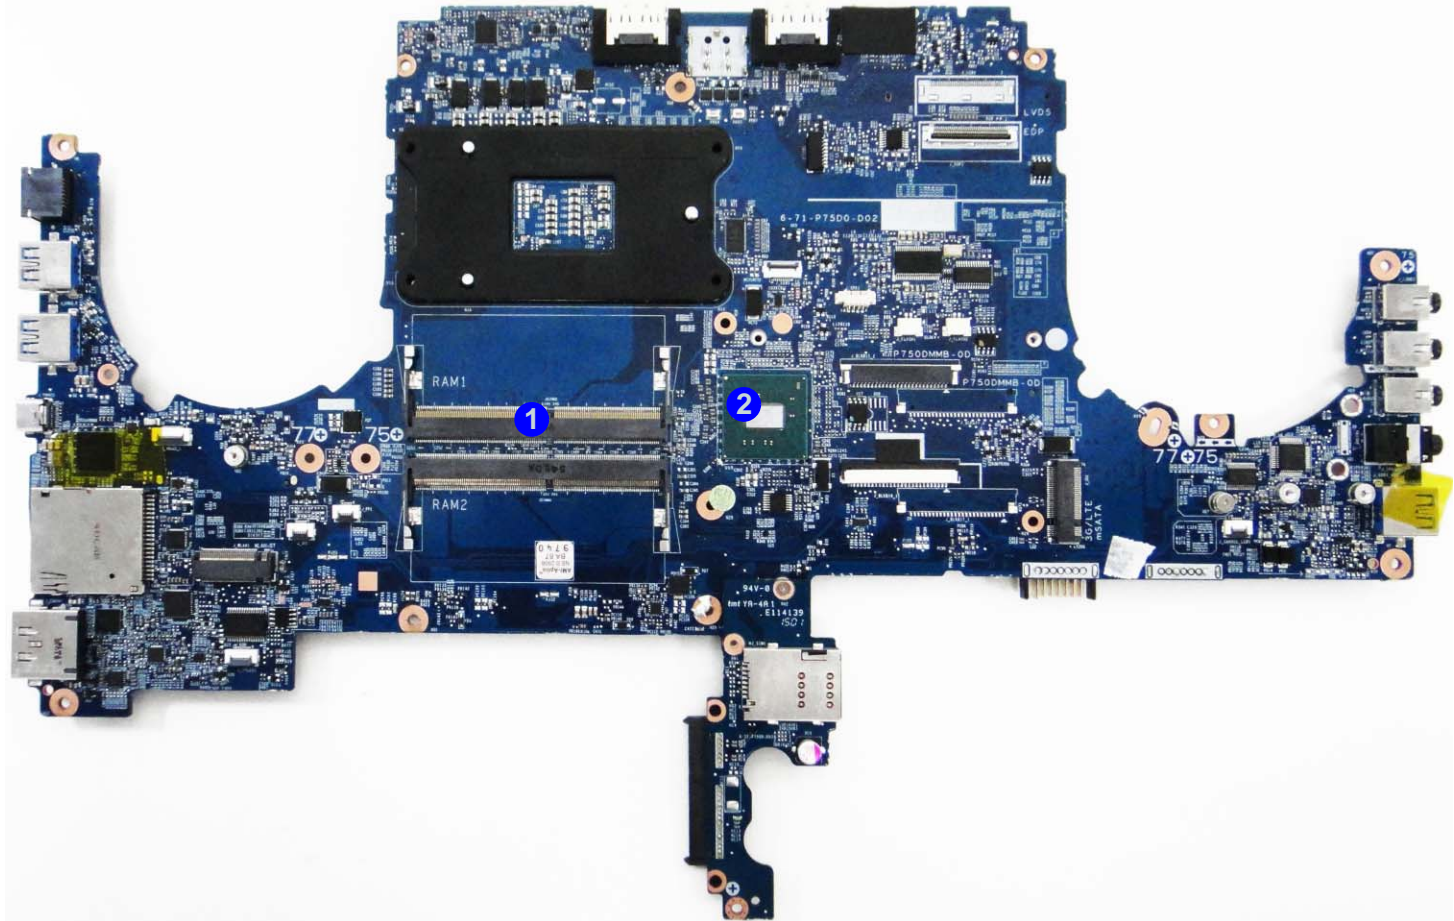

Mainboard Overview - Bottom (Key Parts)

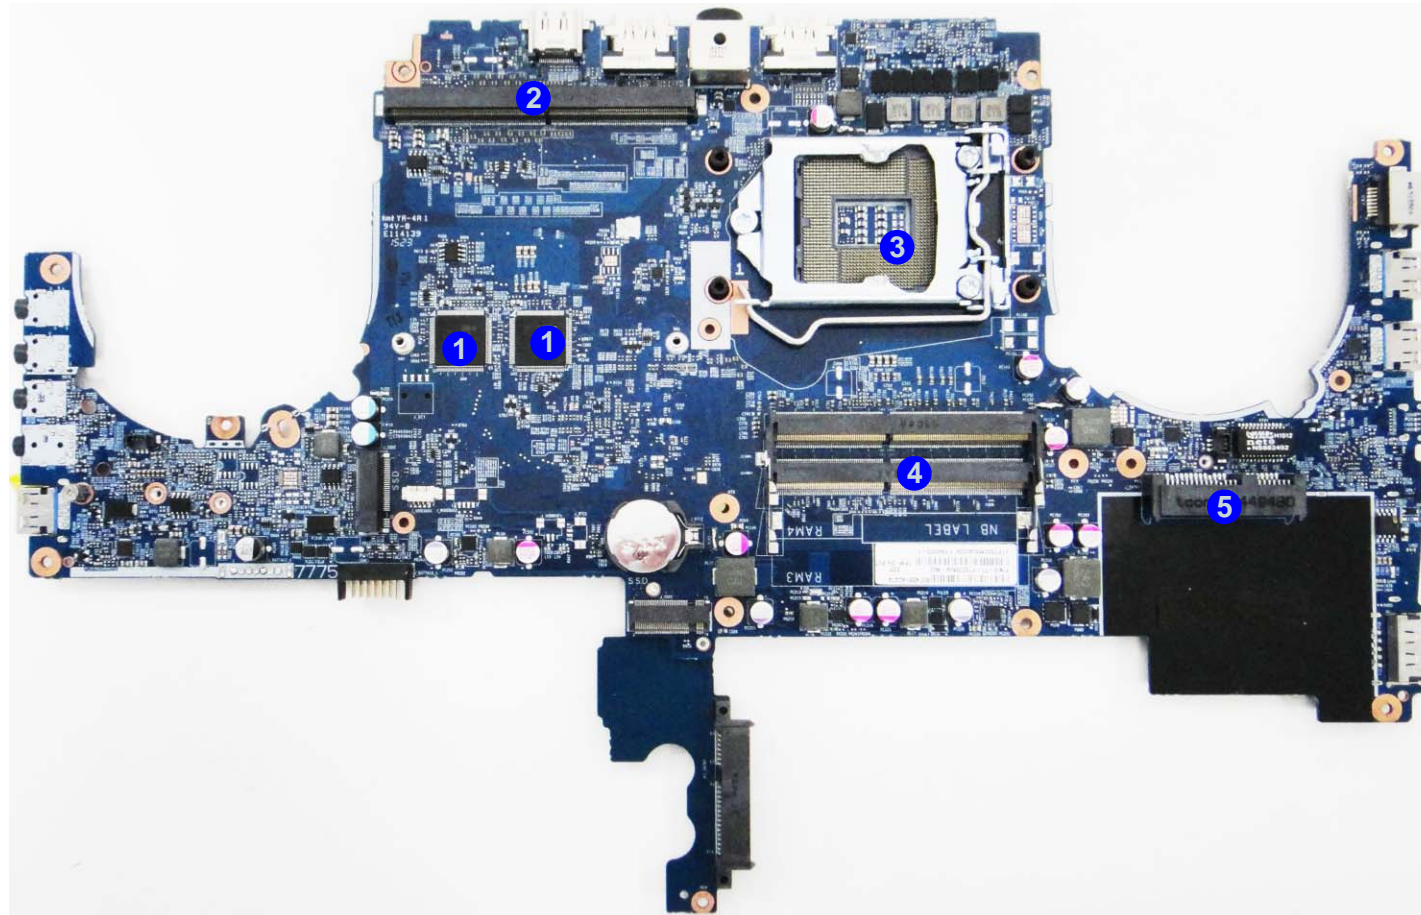


Figure 8
**Mainboard Bottom
Key Parts**


1. KBC ITE IT8587
2. VGA-Card Connector
3. CPU Socket (no CPU installed)
4. Memory Slots DDR3L SO-DIMM (Primary)
5. Hard Disk Connector

Introduction

Mainboard Overview - Top (Connectors)

Figure 9
**Mainboard Top
Connectors**

1. RJ-45 LAN Jack
2. USB 3.0 Port
3. USB 3.1 Port
4. Multi-in-1 Card Reader
5. USB 3.0 Port / e-SATA
6. KB LED Connector
7. WLAN Card Connector
8. Button LED Connector
9. TP FFC Cable Connector
10. Panel Cable Connector
11. Keyboard Cable Connector
12. Battery Connector
13. S/PDIF-Out Jack
14. Headphone Jack
15. Microphone Jack
16. Line-In Jack

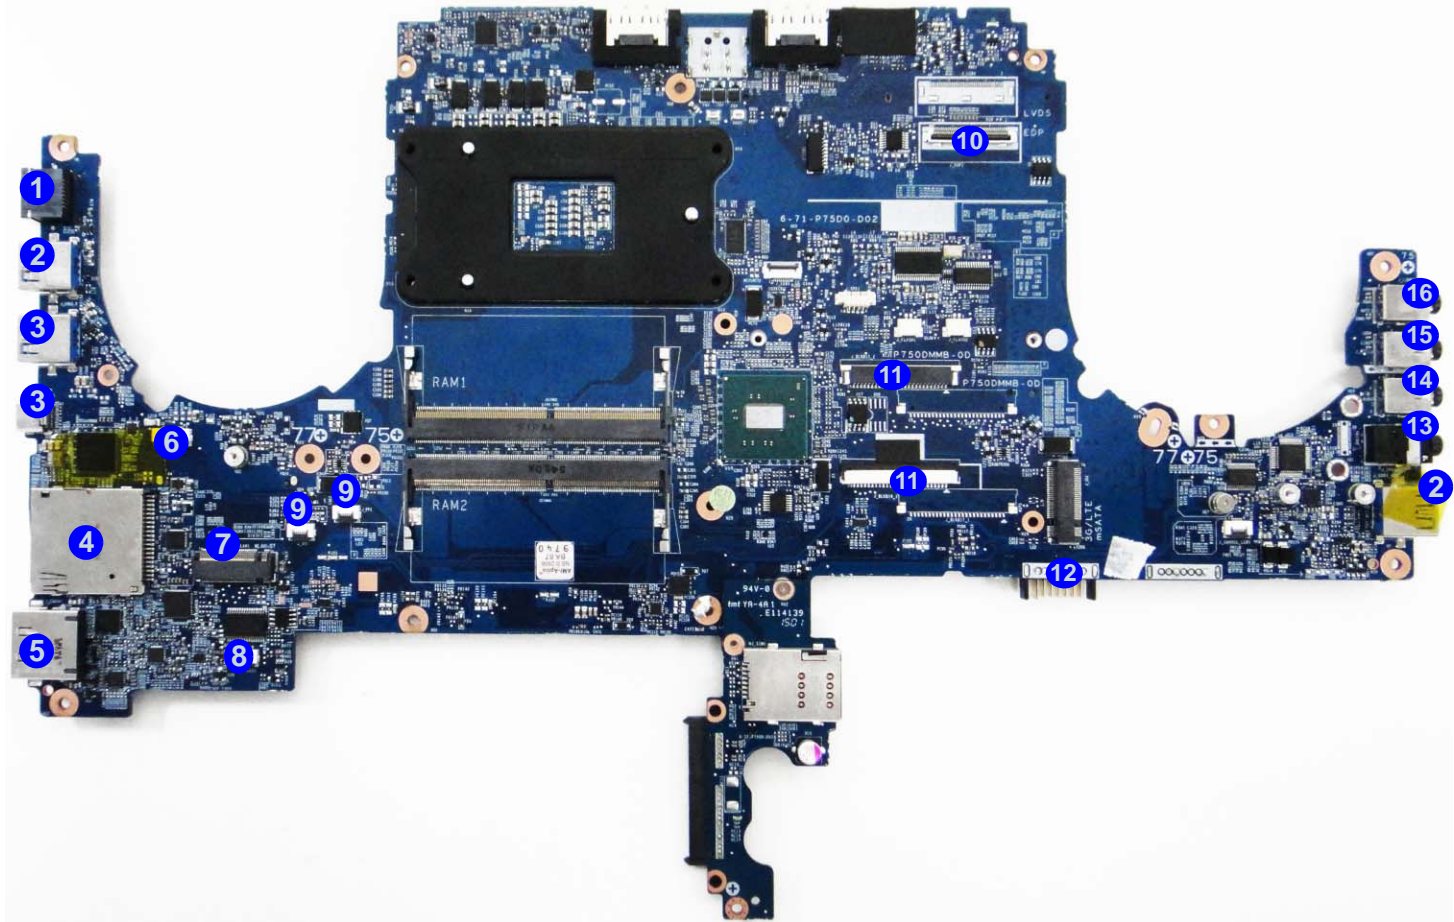

Mainboard Overview - Bottom (Connectors)

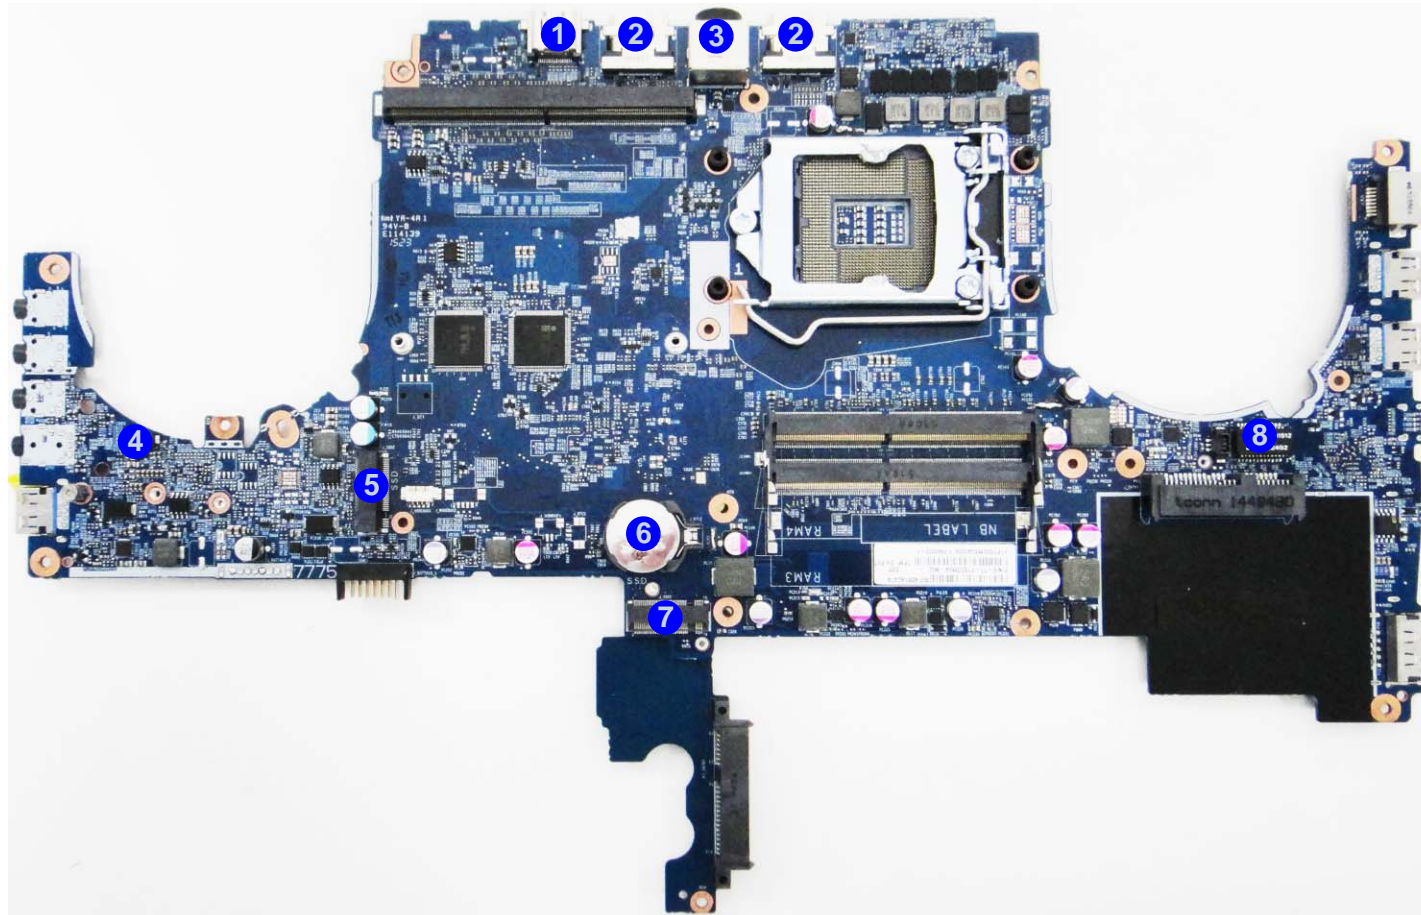


Figure 10
**Mainboard Bottom
Connectors**

1. HDMI-Out Port
2. Display Port
3. DC-In Jack
4. VGA Fan Cable Connector
5. 3G / SSD Connector
6. CMOS Battery
7. SSD Connector
8. CPU Fan Cable Connector


Chapter 2: Disassembly



Overview

This chapter provides step-by-step instructions for disassembling the *P770DM / P771DM / P770DM-G / P771DM-G* series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).



We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

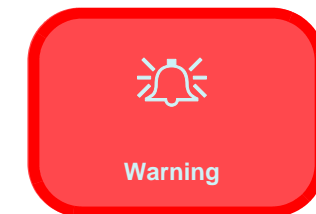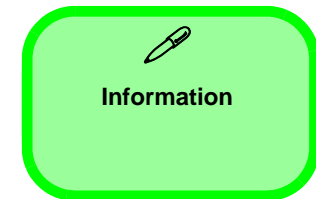

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). You must also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery [page 2 - 5](#)

To remove the HDD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Install the HDD [page 2 - 8](#)

To remove the M.2 SSD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Remove the M.2 SSD [page 2 - 10](#)

To remove the Primary System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the system memory [page 2 - 11](#)

To remove the System Memory under the Keyboard:

1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 13](#)
3. Remove the system memory [page 2 - 14](#)

To remove and install the Processor:

1. Remove the battery [page 2 - 5](#)
2. Remove the system memory [page 2 - 11](#)
3. Remove the processor [page 2 - 15](#)
4. Install the processor [page 2 - 17](#)

To remove the WLAN Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 11](#)
3. Remove the wireless LAN [page 2 - 18](#)

To remove and install the M.2 SATA:

1. Remove the battery [page 2 - 5](#)
2. Remove the system memory [page 2 - 11](#)
3. Remove the M.2 SATA [page 2 - 20](#)
4. Install the M.2 SATA [page 2 - 21](#)

To remove and install the Video Card:

1. Remove the battery [page 2 - 5](#)
2. Remove the video card [page 2 - 22](#)
3. Install the video card [page 2 - 23](#)

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow, and hold it in place (*Figure 1a*).
4. Lift the battery in the direction of the arrow **3**.
5. Lift the battery **4** out of the compartment (*Figure 1c*).



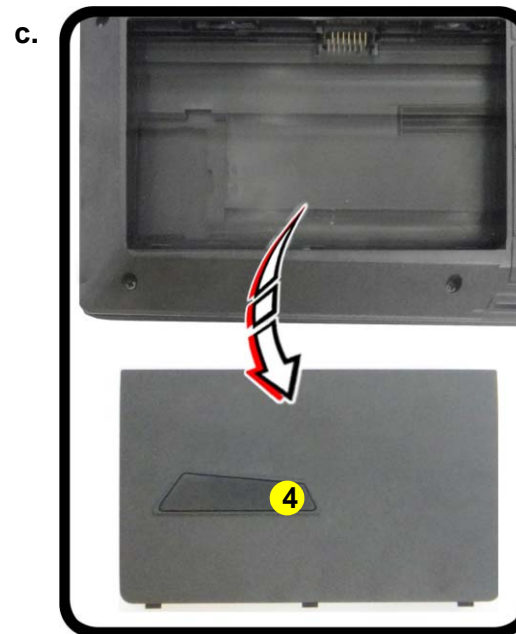


Figure 1
Battery Removal

- a. Slide the latch and hold in place.
- b. Lift the battery up toward the direction of the arrow.
- c. Lift the battery out.

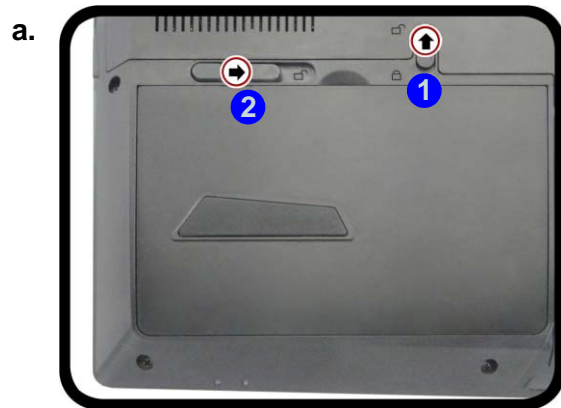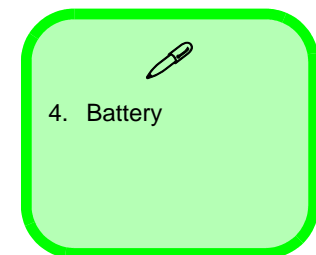

Disassembly

Figure 2
**HDD Assembly
Removal**

- Locate the HDD bay cover and remove the screws.
- Remove the hard disk bay cover by sliding the cover at point ③.

Removing and Installing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 7mm/ 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.


Hard Disk Removal Process

- Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
- Locate the hard disk bay cover and remove screws ① - ② ([Figure 2a](#)).
- Remove the hard disk bay cover by sliding the cover at point ③ ([Figure 2b](#)).

a.



b.

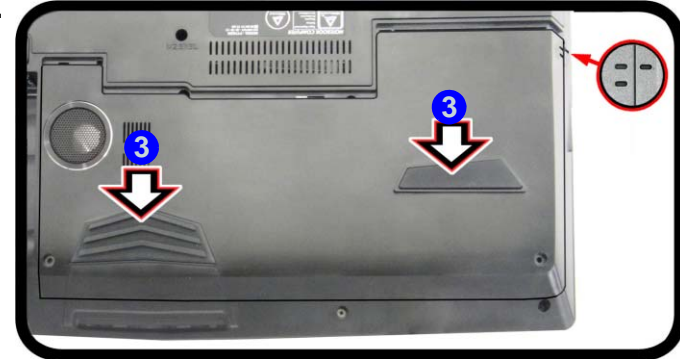

- 2 Screws



HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

4. Lift the hard disk bay cover **4** off the computer (*Figure 3c*)
5. Slightly lift and pull the HDD-1 assembly in the direction of the arrow **5** to remove the hard disk assembly **6** (*Figure 3d*).
6. Slightly lift and pull the HDD-2 assembly (if available) in the direction of the arrow **7** to remove the hard disk assembly **8** (*Figure 3e*).
7. Remove screws **9** - **12** and the adhesive cover **13** from the hard disk **14** (*Figure 3f*).
8. Reverse the process to install a new hard disk (do not forget to replace all the screws and covers).





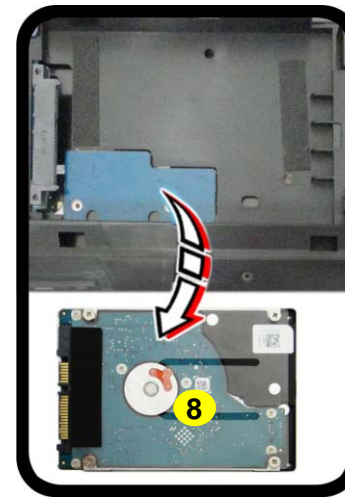


Figure 3
HDD Assembly Removal (cont'd.)

- c. Remove the HDD bay cover.
- d. Lift and pull the HDD-1 assembly in the direction of the arrow to remove the hard disk assembly.
- e. Lift and pull the HDD-2 assembly in the direction of the arrow to remove the hard disk assembly.
- f. Remove the screws and the adhesive cover.

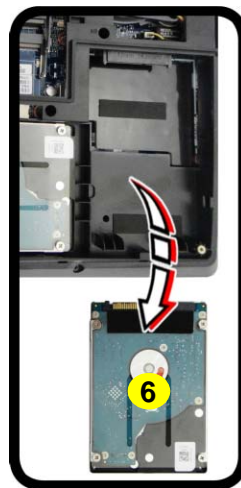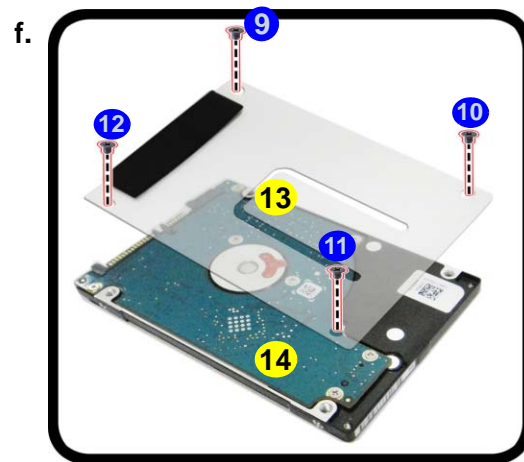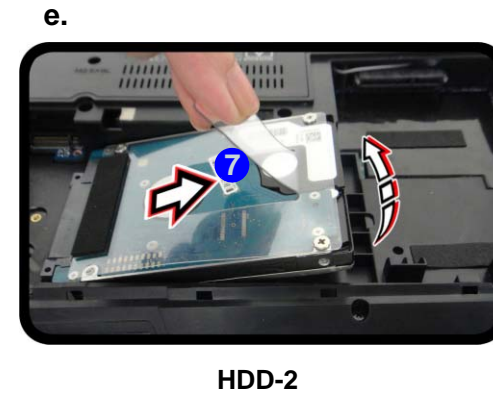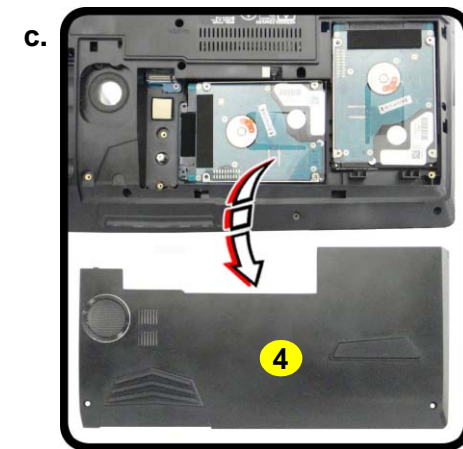

- 4. HDD Bay Cover
- 6. HDD-1 Assembly
- 8. HDD-2 Assembly
- 13. Adhesive Cover
- 14. HDD
- 4 Screws





Disassembly

Figure 4 HDD Assembly Installation

- Insert the HDD-2 assembly in the direction of the arrow to install the hard disk assembly.
- Place the rubber foam insert as shown
- Insert the HDD-1 assembly in the direction of the arrow to install the hard disk assembly.

Hard Disk Installation Process


- Turn off the computer, and remove the battery ([page 2 - 5](#)).
- Insert the HDD-2 assembly **1** (if available) in the direction of the arrow **2** to install it ([Figure 3a](#)).
- After installing HDD-2 assembly, place the rubber foam insert **3** as shown ([Figure 3b](#)).
- Insert the HDD-1 assembly **4** in the direction of the arrow **5** to install it ([Figure 3c](#)).
- Replace the hard disk bay cover and screws (see [page 2 - 6](#)).

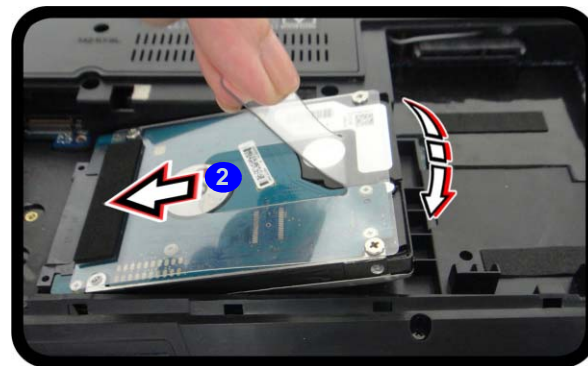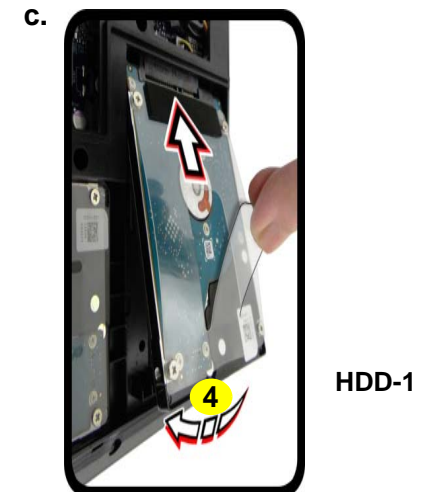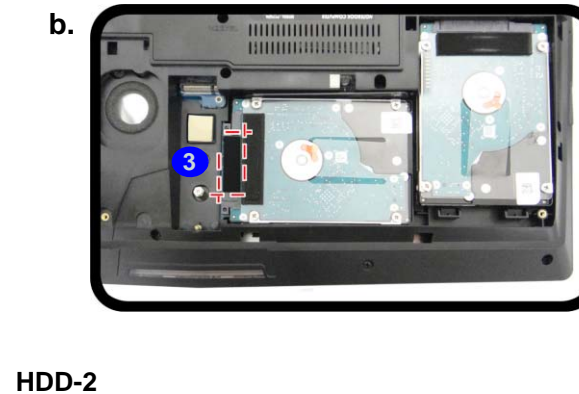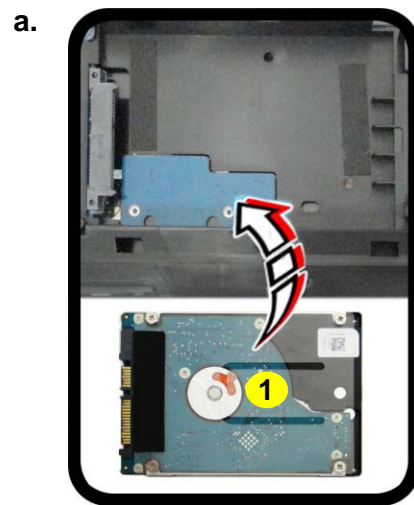

- HDD-1 Assembly
- HDD-2 Assembly

Hard Disk Size Note (Foam Rubber Insert)

Note that the hard disks pictured on the following pages are all 9.5mm(H) hard disk drives. In some cases 7mm(H) hard disk drives will be installed.

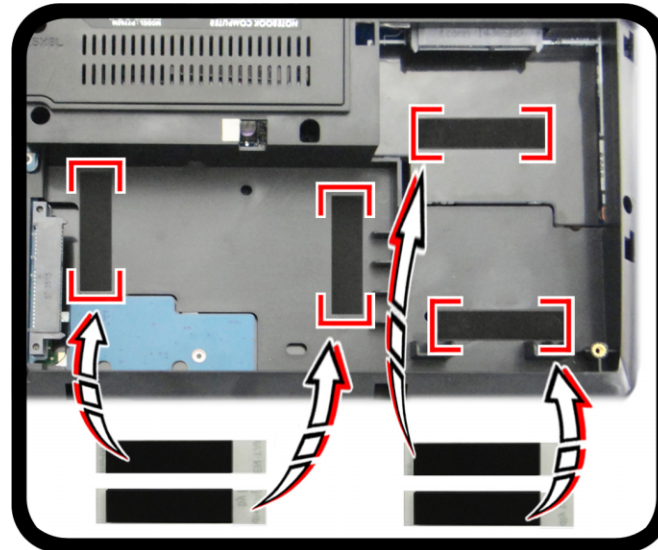

HDD-2

HDD-1

Figure 5
**Foam Rubber
Insert for 7mm(H)
HDDs**

- If you are replacing a 9.5mm(H) HDD with a 7mm(H) HDD then insert the foam rubber insert.
- If you are replacing a 7mm(H) HDD with a 9.5mm(H) HDD then remove the foam rubber insert.


Figure 6
M.2 SSD Module Removal

- Remove the screws.
- The module will pop up.
- Lift the module out.

Removing the M.2 SSD Module

Note that the SSD (if installed) is beside the HDD bay.

- Turn **off** the computer, and turn it over, remove the battery ([page 2 - 5](#)).
- Remove the screw **1** from the SSD ([Figure 6a](#)).
- The M.2 SSD module **2** will pop-up ([Figure 6b](#)).
- Lift the M.2 SSD module **2** up and off the computer ([Figure 6c](#)).
- Reverse the process to install a new SSD (make sure that the hexagonal screw **3** is in the correct location depending upon the size of the module).

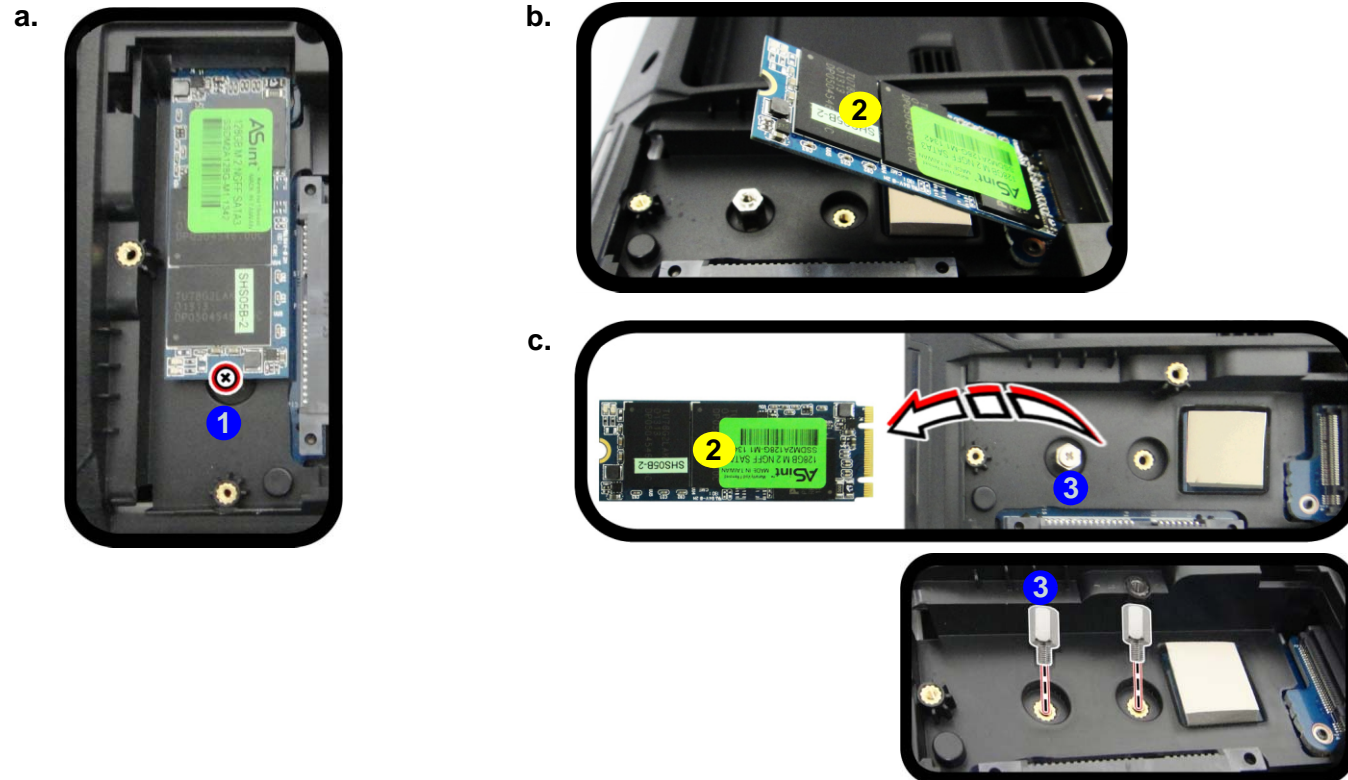

2. M.2 SSD Module

- 1 Screw

Removing the Primary System Memory (RAM)

The computer has **four** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDR 3L** type memory modules. The total memory size is automatically detected by the POST routine once you turn on your computer.


Note that **four SO-DIMMs are only supported by Quad-Core CPUs; Dual-Core CPUs support two SO-DIMMs maximum.**

Two primary memory sockets are located under component bay cover (the bottom case cover), and two secondary memory sockets are located under the keyboard (not user upgradable). If you are installing only two RAM modules then they should be installed in the primary memory sockets under the component bay cover.

Note that the RAM located under the keyboard is not user upgradable.

Memory Upgrade Process


1. Turn **off** the computer, and turn it over, remove the battery ([page 2 - 5](#)).
2. Remove screws **1** - **4**.
3. Slide the bottom cover until the cover and case indicators **5** are aligned ([Figure 7a](#)).

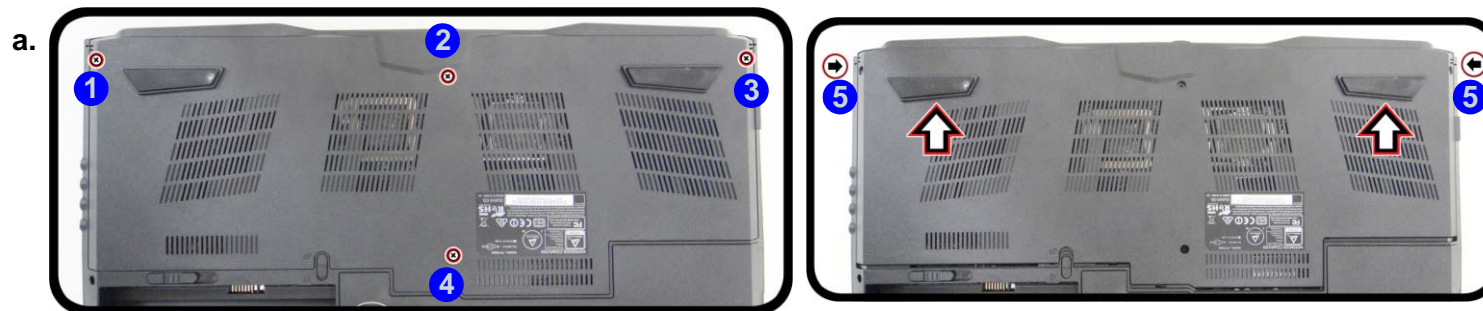

- Note that the size of screw **4** is M2.5 x 8L.

Figure 7
RAM Module Removal

- a. Remove the screws. Slide the bottom cover until the cover and case indicators are aligned.


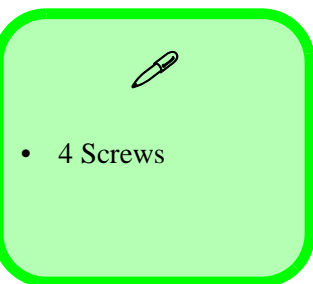


Disassembly

Figure 8 RAM Module Removal (cont'd.)

- c. Lift the component bay cover off the computer case. The modules will be visible at point 7.
- d. Gently pull the two release latches on the sides of the memory socket(s) in the direction indicated below.
- e. The RAM module will pop-up, and you can remove it.

4. Lift the component bay cover 6 off the computer case. The modules will be visible at point 7 (Figure 8c).
5. Gently pull the two release latches (8 & 9) on the sides of the memory socket(s) in the direction indicated below (Figure 8d).
6. The RAM module 10 will pop-up, and you can remove it (Figure 8e).
7. Pull the latches to release the second module if necessary.
8. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
9. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE the module; it should fit without much pressure.
10. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
11. Replace the bay cover and screws.
12. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

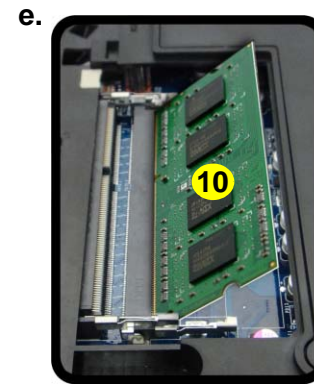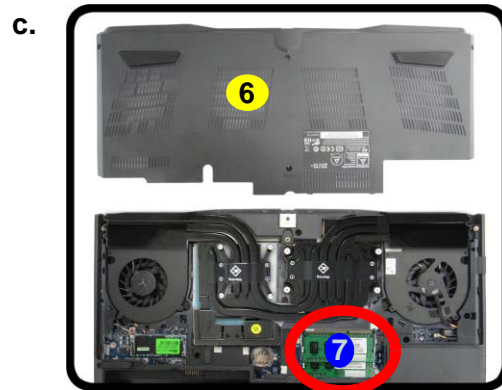

6. Component Bay Cover
10. RAM Module

- 4 Screws



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

Removing the System Memory (RAM) from Under the Keyboard

The computer has **four** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) DDR 3L type memory modules. The total memory size is automatically detected by the POST routine once you turn on your computer.


Two primary memory sockets are located under component bay cover (the bottom case cover), and two secondary memory sockets are located under the keyboard. If you are installing only two RAM modules then they should be installed in the primary memory sockets under the component bay cover.

Memory Upgrade Process

1. Turn **off** the computer, and turn it over, remove the battery ([page 2 - 5](#)).
2. Remove screws **1** - **4** and the component bay cover **5** ([Figure 9a](#)).
3. Remove screws **6** - **8** from the bottom of the computer ([Figure 9b](#)).
4. Open it up with the LCD on a flat surface before pressing at point **9** to release the keyboard module (use an eject stick **10** to do this with a diameter no bigger than 2.5mm) while releasing the keyboard in the direction of the arrow **11** as shown ([Figure 9c](#)).

Figure 9
Keyboard Removal

- a. Remove the screws and component bay cover.
- b. Remove the screws.
- c. Eject the keyboard using a special eject stick to push the keyboard out while releasing the keyboard as shown.

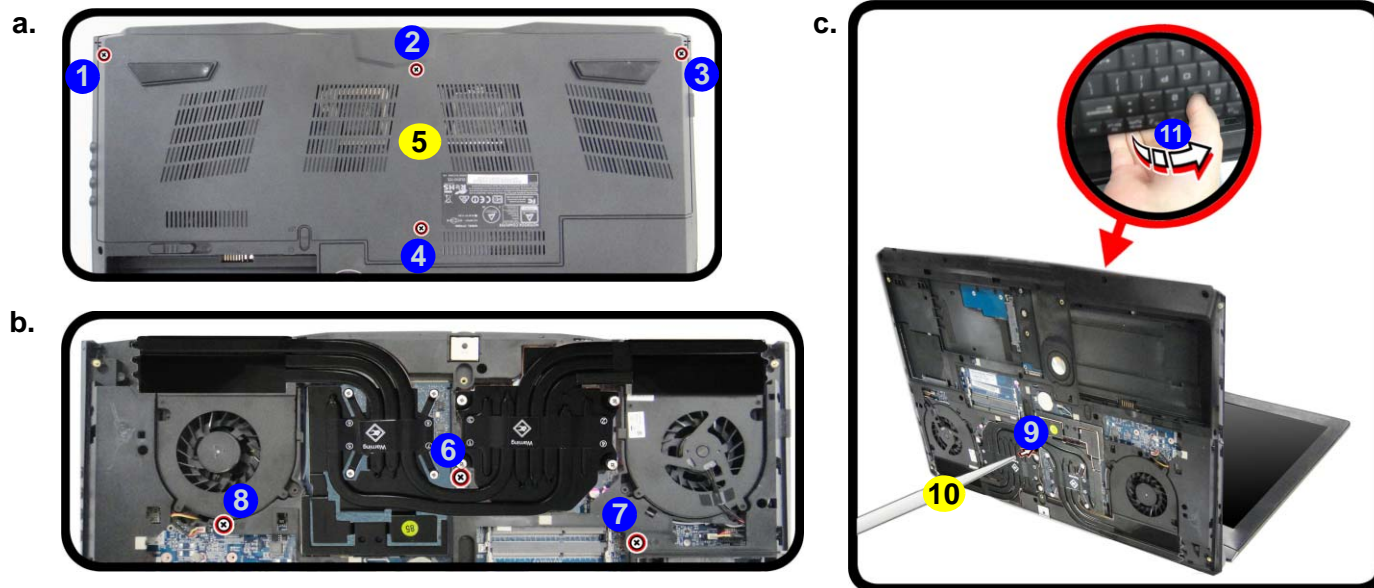





5. Top Cover Module
10. Eject Stick

- 7 Screws

Disassembly

Figure 10
RAM Module Removal

- d. Lift the keyboard up, and disconnect the keyboard ribbon cable from the locking collar socket.
 - e. Remove the keyboard and the memory sockets will be visible.
 - f. Pull the two release latches on the sides of the memory socket in the direction indicated.
5. Carefully lift the keyboard **12** up, being careful not to bend the keyboard ribbon cables **13** - **15**.
 6. Disconnect the keyboard ribbon cables **13** - **15** from the locking collar socket **16** by using a small flat-head screwdriver to pry the locking collar pins **17** away from the base (*Figure 10d*).
 7. Remove the keyboard and the memory sockets **18** & **19** will be visible.
 8. Gently pull the two release latches (**20** & **21**) on the sides of the memory socket(s) in the direction indicated below.
 9. The RAM module **22** will pop-up, and you can remove it.
 10. Pull the latches to release the second module if necessary.
 11. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
 12. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE** the module; it should fit without much pressure.
 13. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
 14. Replace the bay cover and screws.
 15. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

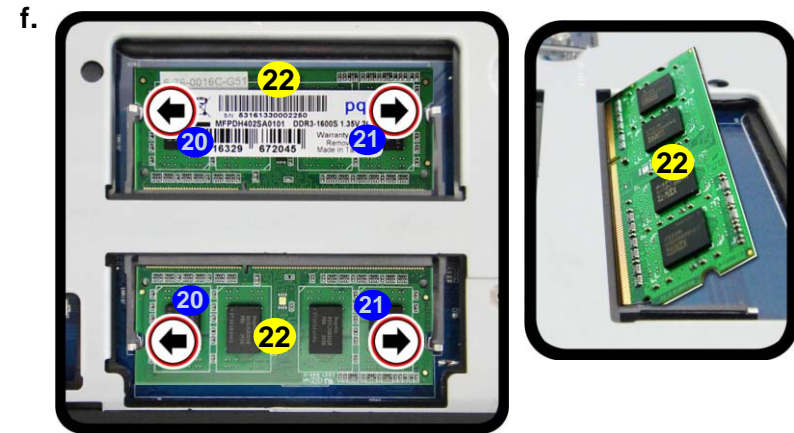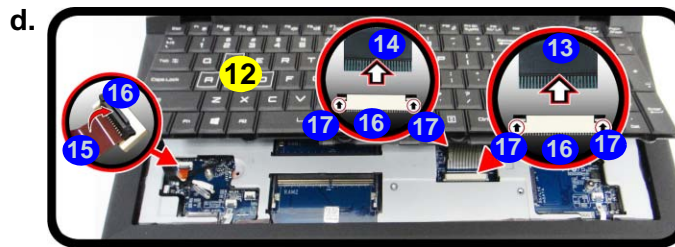

12. Keyboard
22. RAM Modules



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.


Removing and Installing the Processor

Processor Removal Procedure


1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 11](#)).
2. Remove screws **1** - **8** from the heat sink unit in the order indicated on the label (i.e screw **8** first through to screw **1** last [Figure 11a](#)).
3. Carefully (it may be hot) remove the heat sink unit **9** ([Figure 11b](#)).


Figure 11
Processor Removal Procedure

- a. Remove the screws in the correct order.
- b. Carefully remove the heat sink unit.

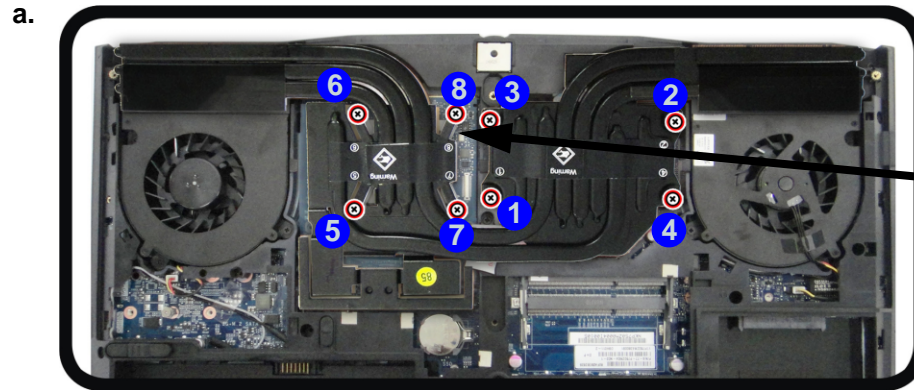

Note:
Loosen the screws in the reverse order 8-7-6-5-4-3-2-1 as indicated.

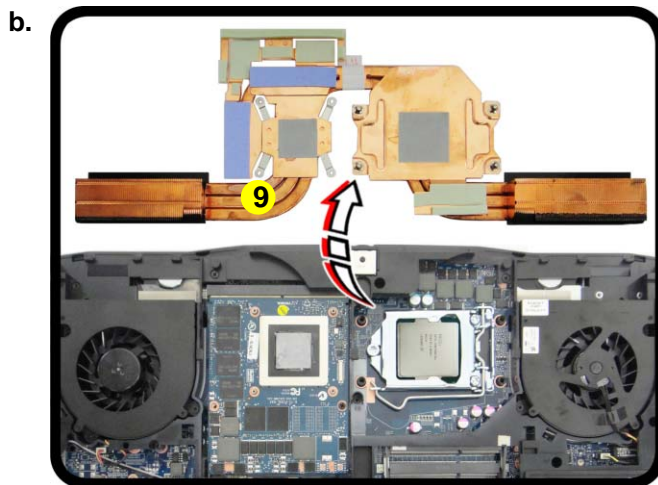



9. Heat Sink Unit

- 8 Screws



Disassembly

Figure 12 Processor Removal (cont'd)

- c. Move the latch and bracket fully in the direction indicated to unlock the CPU.
- d. Lift the CPU out of the socket.


4. Press down and hold the latch **10** (with the latch held down you will be able to release it).
5. Move the latch **10** and bracket **11** fully in the direction indicated to unlock the CPU (*Figure 12c*).
6. Carefully (it may be hot) lift the CPU **A** up out of the socket (*Figure 12d*).
7. See [page 2 - 17](#) for information on inserting a new CPU.
8. When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!).

c.

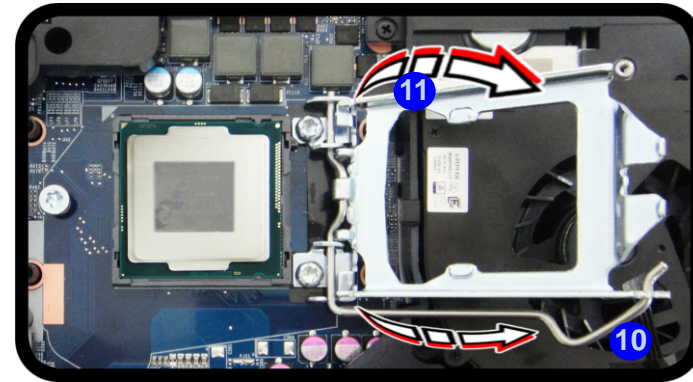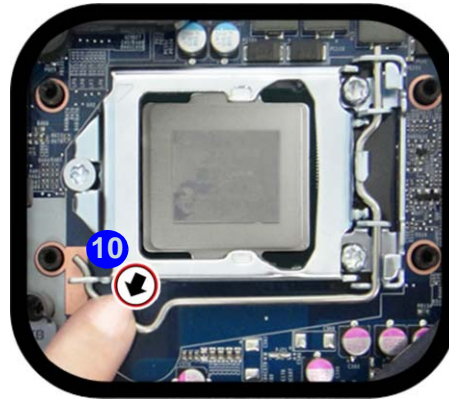

Unlock

d.

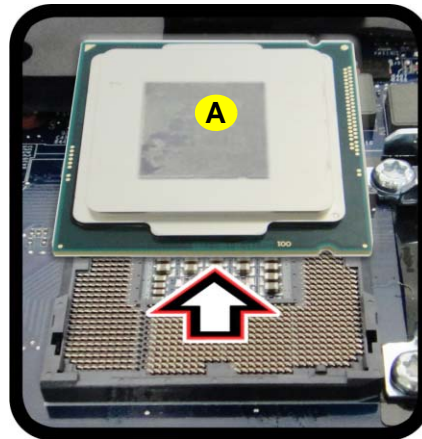

Caution

The heat sink, and CPU area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.







A. CPU

Processor Installation Procedure


1. Insert the CPU **A**; pay careful attention to the pin alignment (*Figure 13a*), it will fit only one way (DO NOT FORCE IT!).
2. Move the bracket **B** and latch **C** fully in the direction indicated to lock the CPU.
3. Apply the thermal grease **D** to the top of the CPU as shown (*Figure 13b*).
4. **Remove the sticker **E**** (*Figure 13c*) from the heat sink unit (if it is a new unit).
5. Insert the heat sink unit **F** as indicated in *Figure 13c*.
6. Tighten the CPU heat sink screws in the order **1** - **8** (the order as indicated on the label and *Figure 13d*).
7. Replace the CPU fan, component bay cover and tighten the screws (*page 2 - 15*).

Figure 13
Processor Installation

- a. Insert the CPU.
- b. Move the latch and bracket fully in the direction indicated to lock the CPU. Apply thermal grease.
- c. Remove the sticker from the heat sink unit and insert the heat sink.
- d. Tighten the screws.

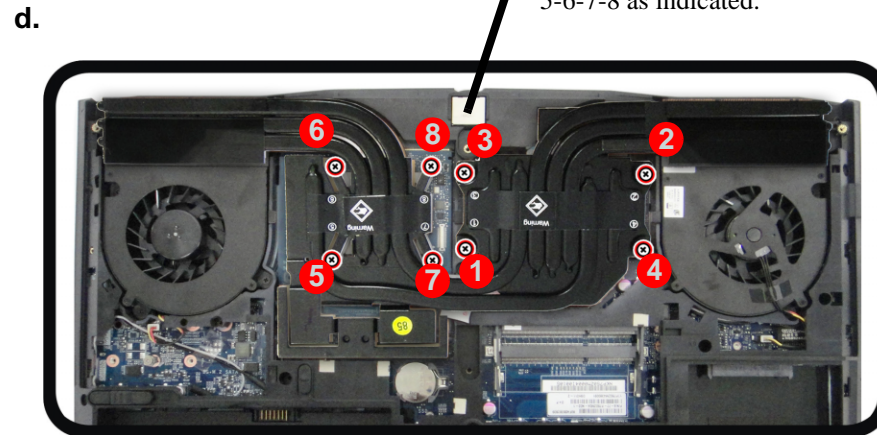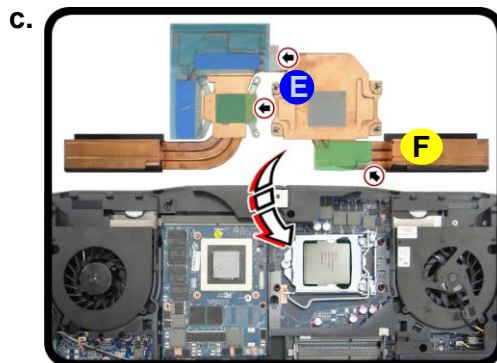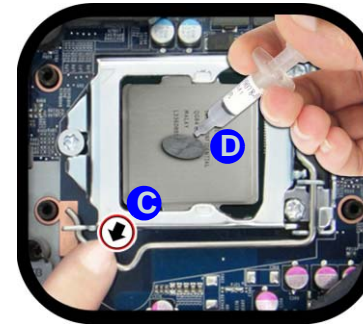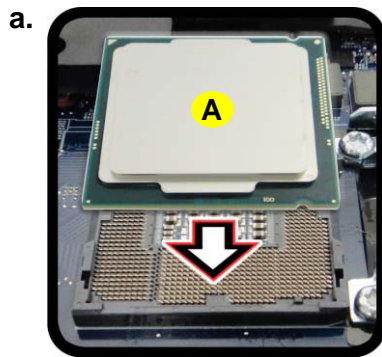

Note:
Tighten the screws in the order 1-2-3-4-5-6-7-8 as indicated.



A. CPU
F. Heat Sink

- 8 Screws


Disassembly

Figure 14
Wireless LAN
Module Removal

- The Wireless LAN module will be visible at point 1 under the keyboard.
- Disconnect the cables and remove the screw.
- The WLAN module will pop up.
- Lift the WLAN module out.

Removing the Wireless LAN Module

- Turn off the computer, remove the battery (page 2 - 5) and the keyboard (page 2 - 13).
- The Wireless LAN module will be visible at point 1 under the keyboard (Figure 14a).
- Carefully disconnect cables 2 - 3, then remove screw 4 from the module socket (Figure 14b).
- The Wireless LAN module 5 will pop-up (Figure 14c).
- Lift the Wireless LAN module (Figure 14d) up and off the computer.

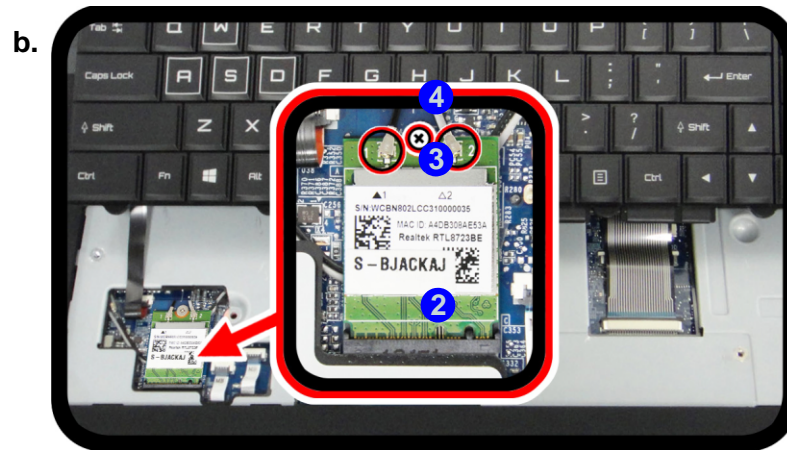

5. WLAN Module

- 1 Screw

Wireless LAN, Combo Module Cables

Note that the cables for connecting to the antennae on WLAN, WLAN & Bluetooth Combo, 3G and LTE modules are not labelled. The cables/covers (each cable will have either a black or transparent cable cover) are color coded for identification as outlined in the table below.

Module Type	Antenna Type	Cable Color	Cable Cover Type
WLAN/WLAN & Bluetooth Combo	WM 1	Black	Transparent
	WM 2	Gray	
	WM 3	White	


Cable 1 is usually connected to antenna 1 (Main) on the module, and cable 2 to antenna 2 (Aux).

Disassembly

Figure 15
M.2 SATA Module Removal

Removing the M.2 SATA Module

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 11](#)).
 2. Locate the module; it is visible at point **1** ([Figure 15a](#)).
 3. Carefully remove the screw **2** from the module ([Figure 15b](#)).
 4. The M.2 SATA module **3** will pop-up ([Figure 15c](#)).
 5. Lift the M.2 SATA module **3** up and off the computer ([Figure 15d](#)).
 6. Reverse the process to install a new SSD (make sure that the hexagonal screw **4** is in the correct location).
- a. Locate the module.
b. Remove the screw.
c. The module will pop-up.
d. Lift the module up off the socket.

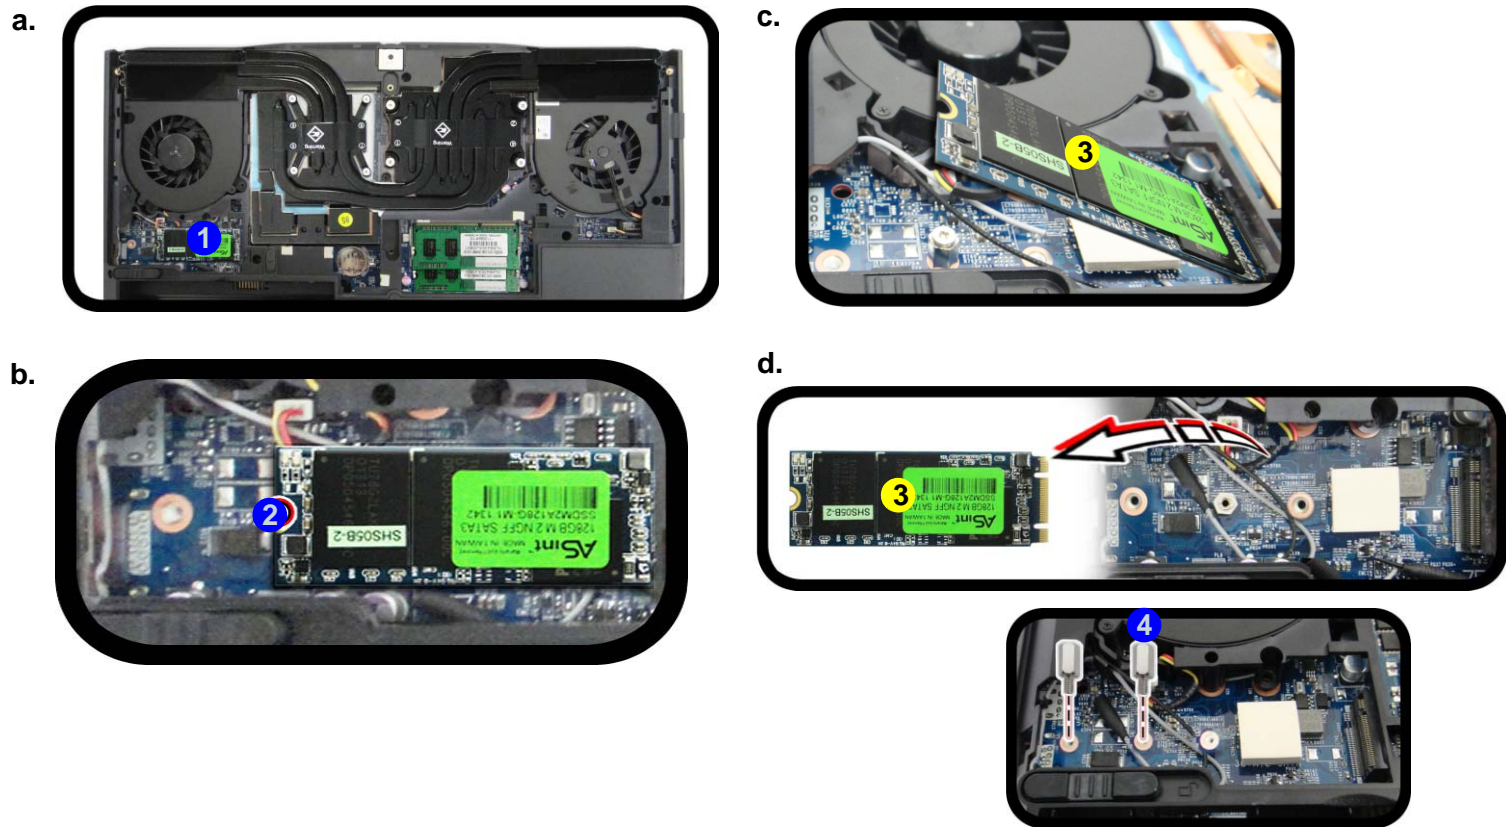

3. MSATA Module



- 1 Screw


M.2 SATA Installation Procedure

1. Place the thermal pad **1** on the computer as shown (*Figure 16a*).
2. Insert the module **2** in the computer. Make sure that the hexagonal screw **3** is in the correct location (*Figure 16b*).
3. Tighten the screw **4** to secure it in place (*Figure 16c*).

Figure 16
M.2 SATA Module Installation

- a. Place the thermal pad.
- b. Insert the module.
- c. Tighten the screw.

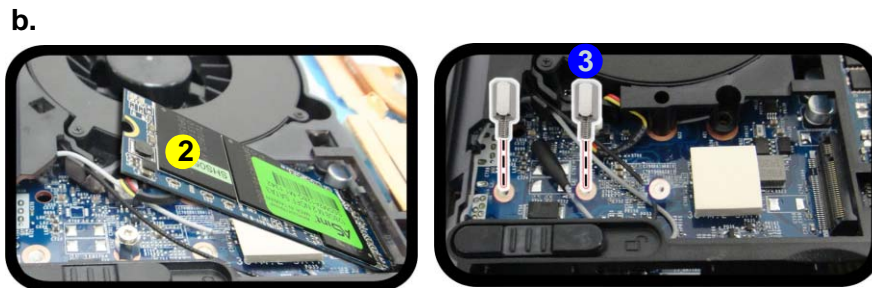
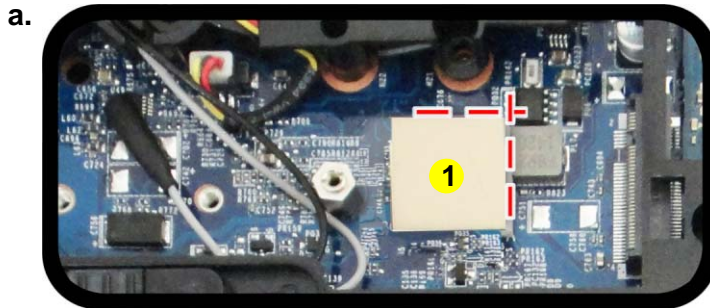




Thermal Pad

Make sure you place the thermal pad's adhesive side down onto the computer surface as illustrated.

The usage of the thermal pad will depend upon the thickness of the module being used.

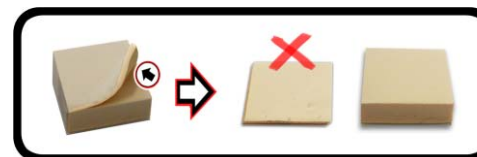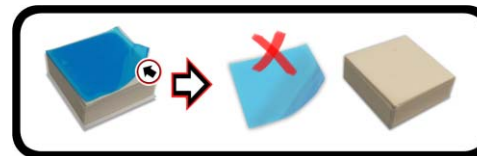- If you are using the thinner module, then apply the whole thermal pad provided on the computer.
- If you are using the thicker module, separate the pad into its two parts. Use the larger part and place the adhesive side onto the computer (discard the smaller part that you have separated).





1. Thermal Pad
2. M.2 SATA Module

- 1 Screw

Disassembly


Figure 17 Video Card Removal Procedure

- Remove the screws in the correct order.
- Carefully remove the heat sink units.
- Remove the video card screws. The video card will pop up.
- Remove the video card.

Removing and Installing the Video Card

Video Card Removal Procedure

- Turn **off** the computer, turn it over and remove the battery ([page 2 - 5](#)) and component cover ([page 2 - 11](#)).
- Remove screws **1** - **8** from the heat sink unit in the order indicated on the label (i.e screw **8** first through to screw **1** last) ([Figure 17a](#)).
- Carefully (**it may be hot**) remove the heat sink unit **9** ([Figure 17b](#)).
- Remove screws **10** & **11** from the video card. The video card **12** will pop up ([Figure 17c](#)).
- Remove the video card **12** ([Figure 17d](#)).

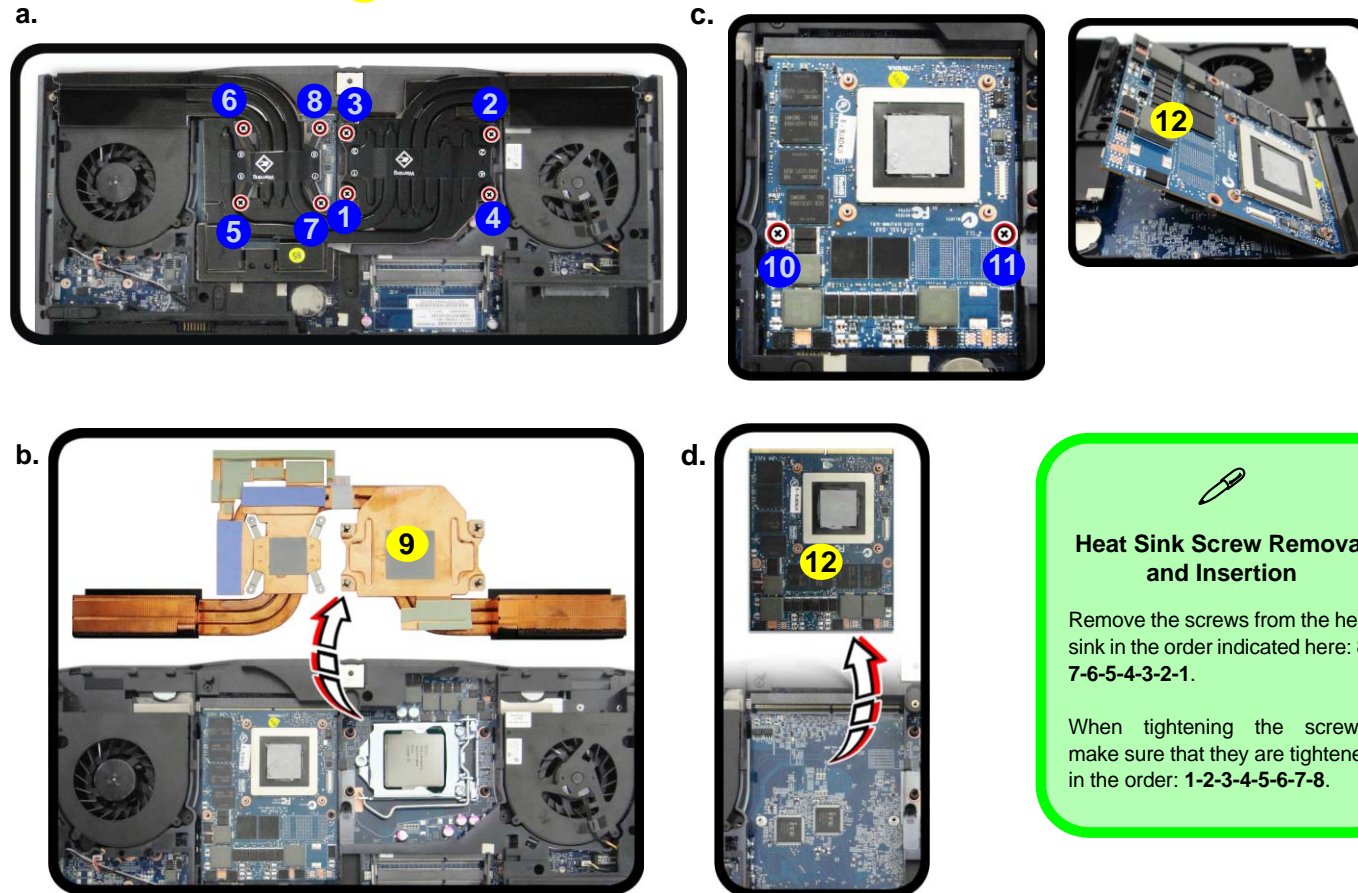

Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



9. Heat Sink Units
12. Video Card

- 10 Screws





Heat Sink Screw Removal and Insertion

Remove the screws from the heat sink in the order indicated here: **8-7-6-5-4-3-2-1**.

When tightening the screws, make sure that they are tightened in the order: **1-2-3-4-5-6-7-8**.

Installing a New Video Card

1. Prepare to fit the video card **12** into the slot by holding it at about a 30° angle (*Figure 18e*).
2. The card needs to be fully into the slot, and the video card and socket have a guide-key and pin which align to allow the card to fit securely (*Figure 18f*).
3. Fit the connectors firmly into the socket, straight and evenly.

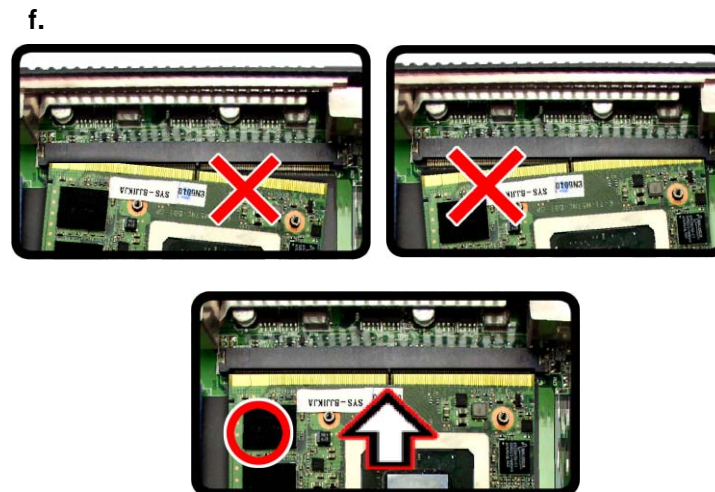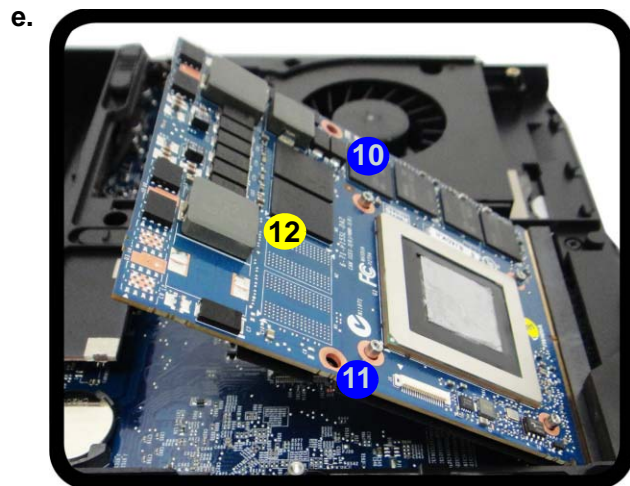

4. DO NOT attempt to push one end of the card in ahead of the other.
5. The card's pin alignment will allow it to only fit one way. **Make sure the module is seated as far into the socket as it will go.** DO NOT FORCE the card; it should fit without much pressure.
6. Secure the card with screws **10** & **11** (*Figure 17 on page 2 - 22*).
7. Place the heat sink back on the card, and secure the screws in the order indicated in *Figure 17 on page 2 - 22*.
8. Reinsert the component bay cover, and secure with the screws as indicated in *Figure 9 on page 2 - 13*.

Figure 18
Installing a New Video Card

- e. Insert the video card at a 30 degree angle.
- f. Fit the connectors straight and even, and secure the card with the screws.



Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



12. Video Card

- 2 Screws

Appendix A: Part Lists

This appendix breaks down the *P770DM / P771DM / P770DM-G / P771DM-G* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.


Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A-1
**Part List Illustration
Location**

Parts	
Top	<i>page A - 3</i>
Bottom	<i>page A - 4</i>
LCD	<i>page A - 5</i>
MB	<i>page A - 6</i>
HDD	<i>page A - 7</i>

Top

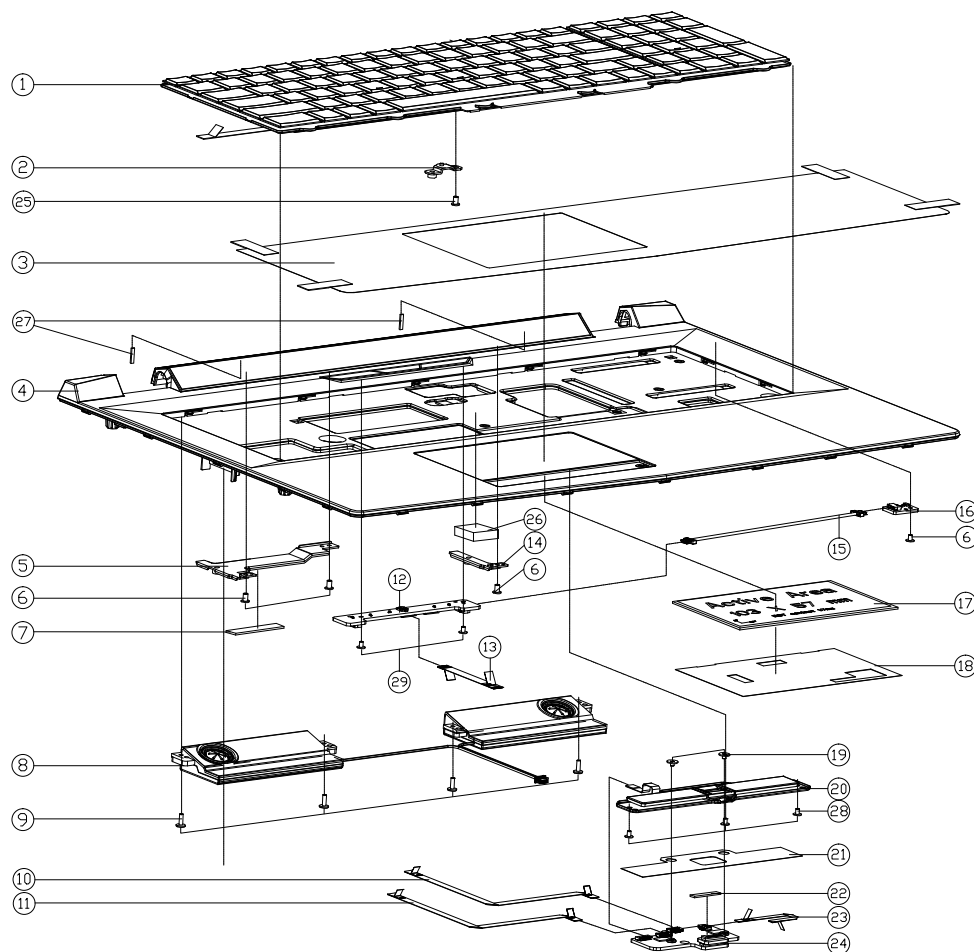


ITEM	PART NAME	PART NO	REMARK
1	MTL R. B. GR VISION G P7500 BKT SECC WITH KEY CTZ GLOW REFLECTOR PLND	6-80-P7500-013-3	
2	TOP KB BKT SECC P770ZM	6-33-P7702-011	
3	TOP CASE PROTECT MYLAR PET P770ZM	6-40-P7708-040	
4	TOP CASE MIDDLE CONKYD SPEAKER P770ZM	6-39-P7702-016-N	
5	TOP THERMAL BKT L SECC P770ZM	6-33-P7702-023	
6	SCREW M2*3L KI NI ICT NY (DD=4.5,DT=0.4)	6-35-B1120-3RE	
7	THERMAL PAD BKT MDS PAD T-FLEX 340 30*74.75 P750ZM	6-48-P7503-031	
8	SPK CABLE FRONT RLL R 30MM L 160MM 2V 41 E60220A P750ZM	6-23-5P750-0S4	
9	SCREW M2*5L KI CT=0.8 D=4.0 BK/Z ICT NY	6-35-B6120-5R0	
10	FFC CABLE FOR CLKX TO MB 160MM 5V 6P P770DM	6-43-P77D0-011	ONLY FOR W/FINGER
11	FFC CABLE FOR CLKX TO MB 160MM 5V 6P P770DM	6-43-P77D0-011	
12	POWER LED BOARD V1.0 P770DM	6-77-P75DC-D01-A	
13	FFC CABLE FOR POWER DD TO MB 54MM 9V 12PIN P750ZM	6-43-P7500-022	
14	TOP CASE BKT SECC P750ZM	6-33-P7502-024	
15	WVC CABLE FOR HALL SENSOR TO MB 160MM 5V 3PIN (R/L) P750ZM	6-43-P7500-012-1	
16	LTD SWITCH BOARD V1.0 P750DM	6-77-P75DS-D01	
17	TOUCH PAD SYNAPTICS TM-E063-001 P750DM (00646MM)	6-49-P75D3-010	
18	TOP TP MYLAR PET P750ZM	6-40-P7502-051	
19	SCREW M2*2L KI BK/Z ICT NY(0.8,T=0.6)	6-35-B6120-2RE	
20	FUNCTION KEY FOR CLICK BUTTON MIDDLE W/FP P750DM	6-23-KP75D-011	FOR W/FINGER
20	FUNCTION KEY FOR CLICK BUTTON MIDDLE W/O FP P750DM	6-23-KP75D-021	FOR W/O FINGER
21	CLICK MYLAR FOR FINGER P770ZM	6-40-P7702-011	
22	TOP TP RUBBER (23*35*0.951) SILICONE P750ZM	6-47-P7502-021	ONLY FOR W/O FINGER
23	FFC CABLE FOR TP TO CLICK 70MM 5V 6P P770DM	6-43-P77D2-011	
24	CLICK BOARD V2.0 (W/FP) FINGER SENSOR BOARD V2.0 P750DM	6-77-P75DA-N02	ONLY FOR W/FINGER
24	CLICK BOARD V2.0 (W/O FP) P750DM	6-77-P75D2-D02-1	ONLY FOR W/O FINGER
25	SCREW M2.5*3L KI BZ ICT NY	6-35-B6125-3R0	
26	THERMAL PAD M4500 (1741*4.0mm) W650SR	6-48-W6503-010	
27	MYLAR(12*2*0.751) FOR W940SU2	6-40-00150-12D	
28	SCREW M2*2.5L KI NI ICT NY (04 T=0.5 I#	6-35-B1120-2R6	
29	SCREW M2*4L KI BZ ICT NY	6-35-B6120-4RA	

Figure A - 1
Top

A. Part Lists


Bottom

Figure A - 2
Bottom

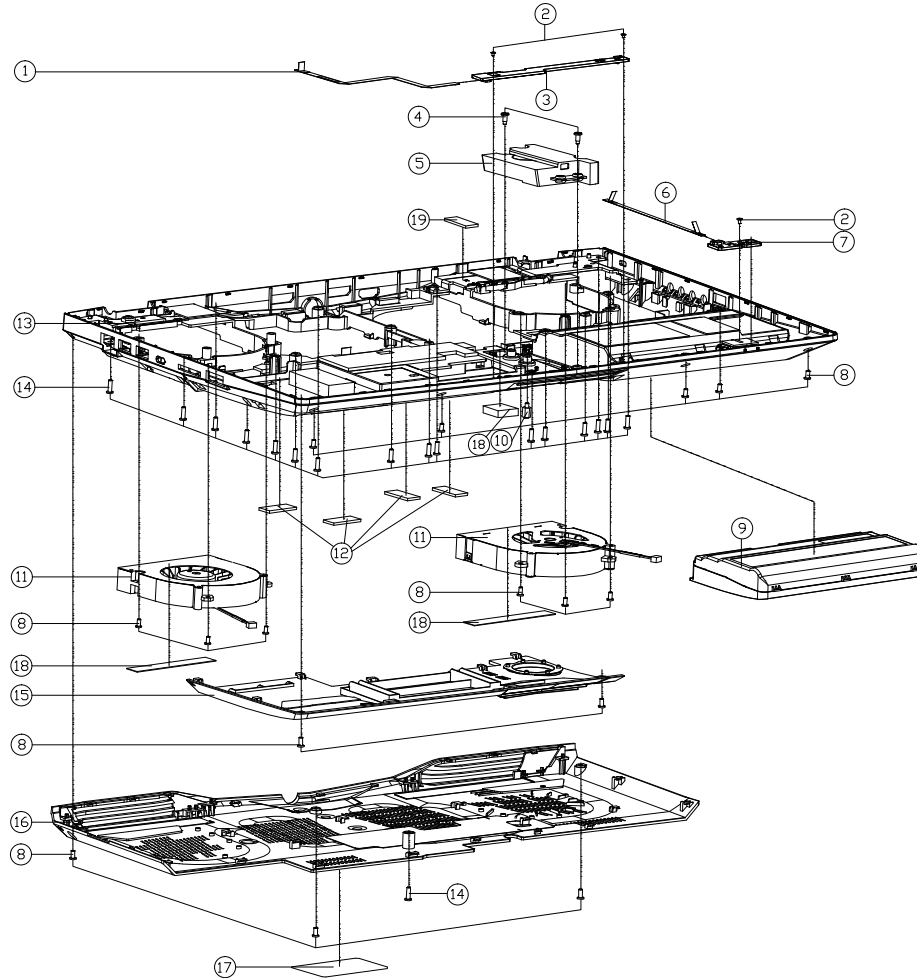

ITEM	PART NAME	PART NO	REMARK
1	FFC CABLE FOR BOTTOM LENS TO MB 1785MM 5V 9PIN P770ZM	6-43-P7700-011	
2	SCREW M2*4L KI BZ ICT NY	6-35-B6120-4RA	
3	BOT LED2 BOARD V2.0 P750DM	6-77-P75D5-D02	
4	SCREW M2*6.2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
5	SPK+CABLE SUBWOOFER 785*26MM 25W 41 8K3K3399A P370EM	6-23-5P37E-0W1	
6	FFC CABLE FOR FRONT LED TO MB 110MM 9V 6PIN P750ZM	6-43-P7502-012	
7	CHARGER LED BOARD V1.0 P770DM	6-77-P77DE-D01	
8	SCREW M2.5*5L 0.4MM KI BK/Z ICT NY	6-35-B6125-5R0	
9	FAN 5111MM56MM FROM THE NEW FLOOR FOR 50*50*20MM 5VDC 0.15A 1.5W	6-87-P750S-4U73	
9	FAN 5111MM56MM FROM THE NEW FLOOR FOR 50*50*20MM 5VDC 0.15A 1.5W	6-87-P750S-4272	
10	SCREW M2.5*3L 0H*6.5 D=5 NI ICT NY FOR NGFF CARD	6-35-Z1125-3R0	
11	FAN MODULE (APOWER) P750ZM	6-31-P750S-102	
12	7MM HDD SPONGE(40*10*2.15T) CR4382 P750ZM	6-47-0019A-409	ONLY FOR 7MM HDD
13	BOTTOM CASE MODULE P770DM	6-39-P77D3-011	
14	SCREW M2.5*8L KI BK/Z NY ICT	6-35-B6125-8R0	
15	HDD COVER MODULE P770ZM	6-42-P770J-102	
16	CPU COVER MODULE P770ZM	6-42-P7708-102	
16	CPU COVER MODULE P771ZM	6-42-P7718-101	
17	PRODUCT LABEL FOR P770DM	6-45-P770DM03-010	
17	PRODUCT LABEL FOR P771DM	6-45-P771DM03-010	
17	PRODUCT LABEL FOR P770DM-G	6-45-P770DMG3-010	
17	PRODUCT LABEL FOR P771DM-G	6-45-P771DMG3-010	
17	SSD-5.8MM THERMAL PAD RS300 15*15*5.8MM P750ZM	6-48-P7503-051	
18	FAN SPONGE FOR SPK CR4382 (77*8*0.65T) P750ZM	6-47-0019A-773	
19	BOTTOM CASE SPONGE FOR SPK CR4382 (10*10*1.5T) P750ZM	6-47-0019A-30K	

LCD

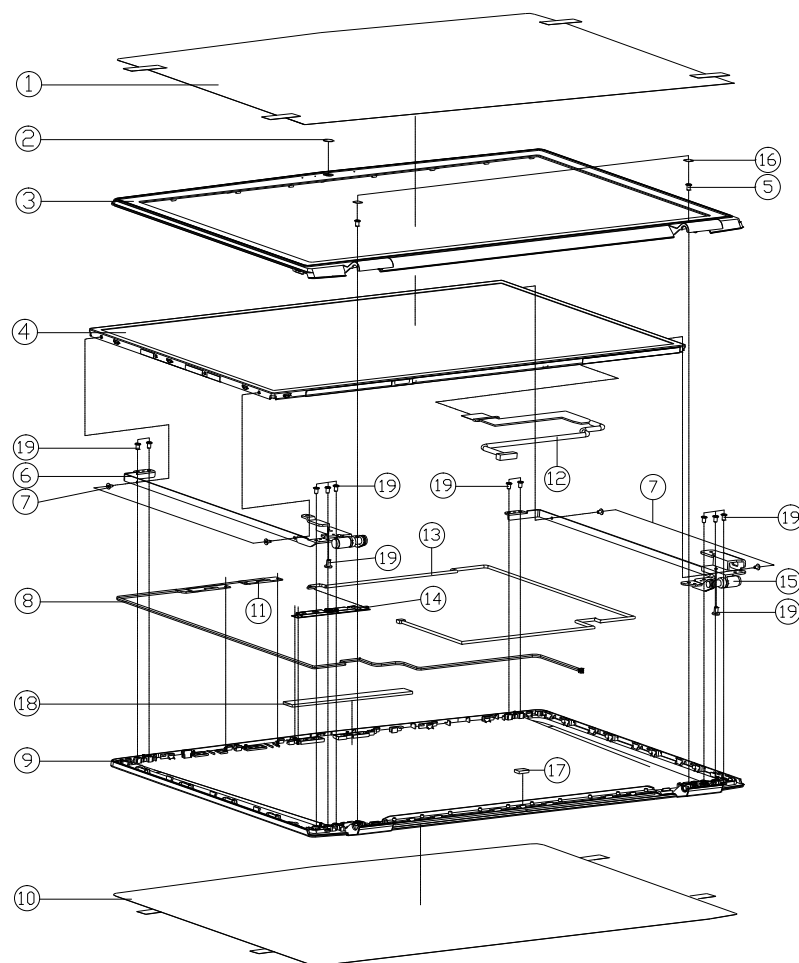

ITEM	PART NAME	PART NO	REMARK
1	FRONT COVER PROTECTION PET MYLAR P770ZM	6-40-P7701-020	
2	CCD LENS PMMA P750ZM	6-42-P7501-011	
3	LCD FRONT COVER MODULE P770ZM	6-39-P7701-012	
4	LCD 15.6" FHD (CFP) (GLARE TYPE) SHIP LINEAR LED (BROAD) 3840X2400 LED 330M	6-50-NB260-D01	
4	LCD 15.6" FHD (CFP) (GLARE TYPE) (PSP) (S) SAMUNG LINEAR LED-LIN LED 280M	6-50-NB260-G04	
4	LCD 15.6" FHD/IPS/EDP AU B156HAN01.2(AHVA) (LED) 32MM	6-50-NB260-D03	
4	LCD 12.3" FHD / IPS / EDP LG LP123M4-SPL * SUPPORT 5V G-SYNC * LED 62M	6-50-NB262-L00	
5	SCREW M2.5*5L (PH) 0.4MM KI BK/Z ICT NY	6-35-B6125-5R0	
6	LCD HINGE L NEW SECC P770ZM	6-33-P7701-2L2	FOR EDP
6	LCD HINGE L G SYNC SECC P770ZM	6-33-P7701-1L2	FOR G-SYNC
7	SCREW M2*3L KI NI ICT NY (DD=0.45,DT=0.4)	6-35-B1120-3RE	
8	ANTENNA IPEX-4 WLAN WGT WL-2 PCB 24G/5G WL-2-700M (BLACK CABLE) P770ZM	6-23-7P750-021	
9	LCD BACK COVER MODULE P770ZM	6-39-P7701-023	
9	LCD BACK COVER G-SYNC MODULE (PAINT) P770ZM	6-39-P7701-122-W	
9	LCD BACK COVER G-SYNC MODULE (PAINT) P770ZM (KAPOR)	6-39-P7701-124-W	
10	BACK COVER PROTECTION PET MYLAR P770ZM	6-40-P7701-010	
11	ANTENNA IPEX-4 WLAN WGT WL-1 PCB 24G/5G WL-1-750M P770ZM	6-23-7P770-010	
12	WIRE CABLE FOR LVDS CABLE 499MM 30V 4HP (CM)/THL (CON) L09002	6-43-P7701-021-C	
12	WIRE CABLE FOR EDP CABLE 499MM 30V 3HP (CM)/THL (CON) L09003 P770ZM	6-43-P7701-011-C	
12	WIRE CABLE FOR EDP CABLE 30MM 30V 3P (C) (CM)/THL (CON) L09000 P770ZM	6-43-P7701-013-C	
13	WIRE CABLE FOR CCD TO MB 700MM 5V 8PIN (CM) P770ZM	6-43-P770T-012-1	
14	DC CAMERA BODY FOR DUAL/TH/EP 28 FHD 5m (0.274) F235E F235E W/LED W/IRY ME	6-88-P650C-4900	
15	LCD HINGE R NEW SECC P770ZM	6-33-P7701-2R2	FOR EDP
15	LCD HINGE R G SYNC SECC P770ZM	6-33-P7701-1R2	FOR G-SYNC
16	FRONT COVER SCREW MYLAR PC P750ZM	6-40-P7508-030	
17	RUBBER (8.0*4.1*3.5) 3M9888T A110EU	6-47-A11E1-080	ONLY FOR G-SYNC
18	BACK COVER SPONGE PANEL (150*15*1.5) CR4832 P770ZM	6-47-0019A-15P	ONLY FOR G-SYNC
19	SCREW M2*4L KI BZ ICT NY	6-35-B6120-4RA	

Figure A - 3
LCD

A.Part Lists

HDD

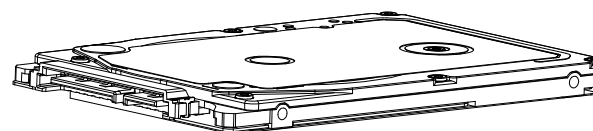
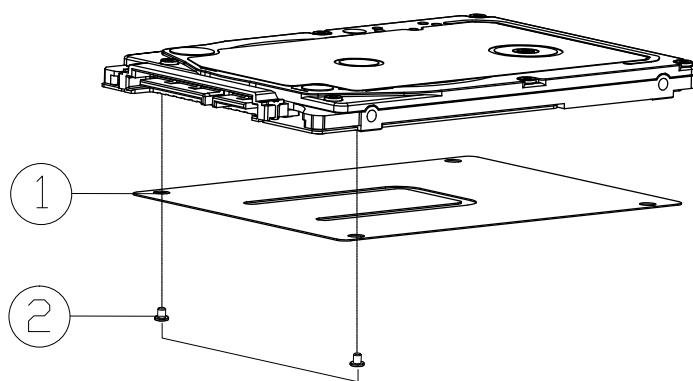


Figure A - 5
HDD

ITEM	PART NAME	PART NO	REMARK
1	HDD MYLAR (PET+CR) P750ZM	6-40-P750J-010	
2	SCREW M3*2.5L KI NI ICT NY	6-35-B1130-2R5	

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *P770DM / P771DM / P770DM-G / P771DM-G* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
Block Diagram - Page B - 2	Lynix Point 7/7 - Page B - 23	VCCIO / IP0A - Page B - 44
Processor 1/5 - Page B - 3	USB + eSATA, USB Charging - Page B - 24	DDR 1.2V/0.6VS/VCCPLL_OC - Page B - 45
Processor 2/5 - Page B - 4	CCD, USB Port3 - Page B - 25	VDD3, VDD5 - Page B - 46
Processor 3/5 - Page B - 5	M.2 3G+USB & WLAN+BT - Page B - 26	12V, 5VS, 3.3VS, 3.3VA - Page B - 47
Processor 4/5 - Page B - 6	M.2 PCIE4X SSD1 & SSD2 - Page B - 27	5VS_2 - Page B - 48
Processor 5/5 - Page B - 7	Realtek ALC892 - Page B - 28	VCore / VCCGT - Page B - 49
DDR4 CHA SO-DIMM_0 - Page B - 8	PCMI861 + TAS5766DCA - Page B - 29	VCore Output Stage - Page B - 50
DDR4 CHA SO-DIMM_1 - Page B - 9	Subwoofer - Page B - 30	VCCSA / VCCGT - Page B - 51
DDR4 CHB SO-DIMM_0 - Page B - 10	Audio Jack - Page B - 31	Power Charger, DC-In - Page B - 52
DDR4 CHB SO-DIMM_1 - Page B - 11	EC IT8587 - Page B - 32	P750DM HDD Board - Page B - 53
Panel, Inverter, CRT - Page B - 12	Second EC IT8587 - Page B - 33	P750DM Power LED Board - Page B - 54
Display Port A - Page B - 13	Backlight Keyboard - Page B - 34	P750DM Click Board - Page B - 55
Display Port B - Page B - 14	LID SW, Fan, LED Conn - Page B - 35	P750DM Audio Board - Page B - 56
HDMI - Page B - 15	TP, FP, Multi-Con - Page B - 36	P750DM Charge LED Board - Page B - 57
MXM PCI-E - Page B - 16	LAN E2400 - Page B - 37	P750DM LID Switch Board - Page B - 58
Lynix Point 1/7 - Page B - 17	PS8338B + PS8330B - Page B - 38	P750DM Finger Sensor Board - Page B - 59
Lynix Point 2/7 - Page B - 18	TBT - Page B - 39	P770DM Charge LED Board - Page B - 60
Lynix Point 3/7 - Page B - 19	Power - Page B - 40	P750DM BOT LED Board - Page B - 61
Lynix Point 4/7 - Page B - 20	TPS65982 - Page B - 41	P775DM Power LED Board - Page B - 62
Lynix Point 5/7 - Page B - 21	Cardreader RTS5250 - Page B - 42	Power On Sequence - Page B - 63
Lynix Point 6/7 - Page B - 22	TPM SLB9655TT & NPCT420 - Page B - 43	

Table B - 1
Schematic
Diagrams




Version Note


The schematic diagrams in this chapter are based upon version 6-7P-P75DB-001. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

Block Diagram

Sheet 1 of 62
Block Diagram

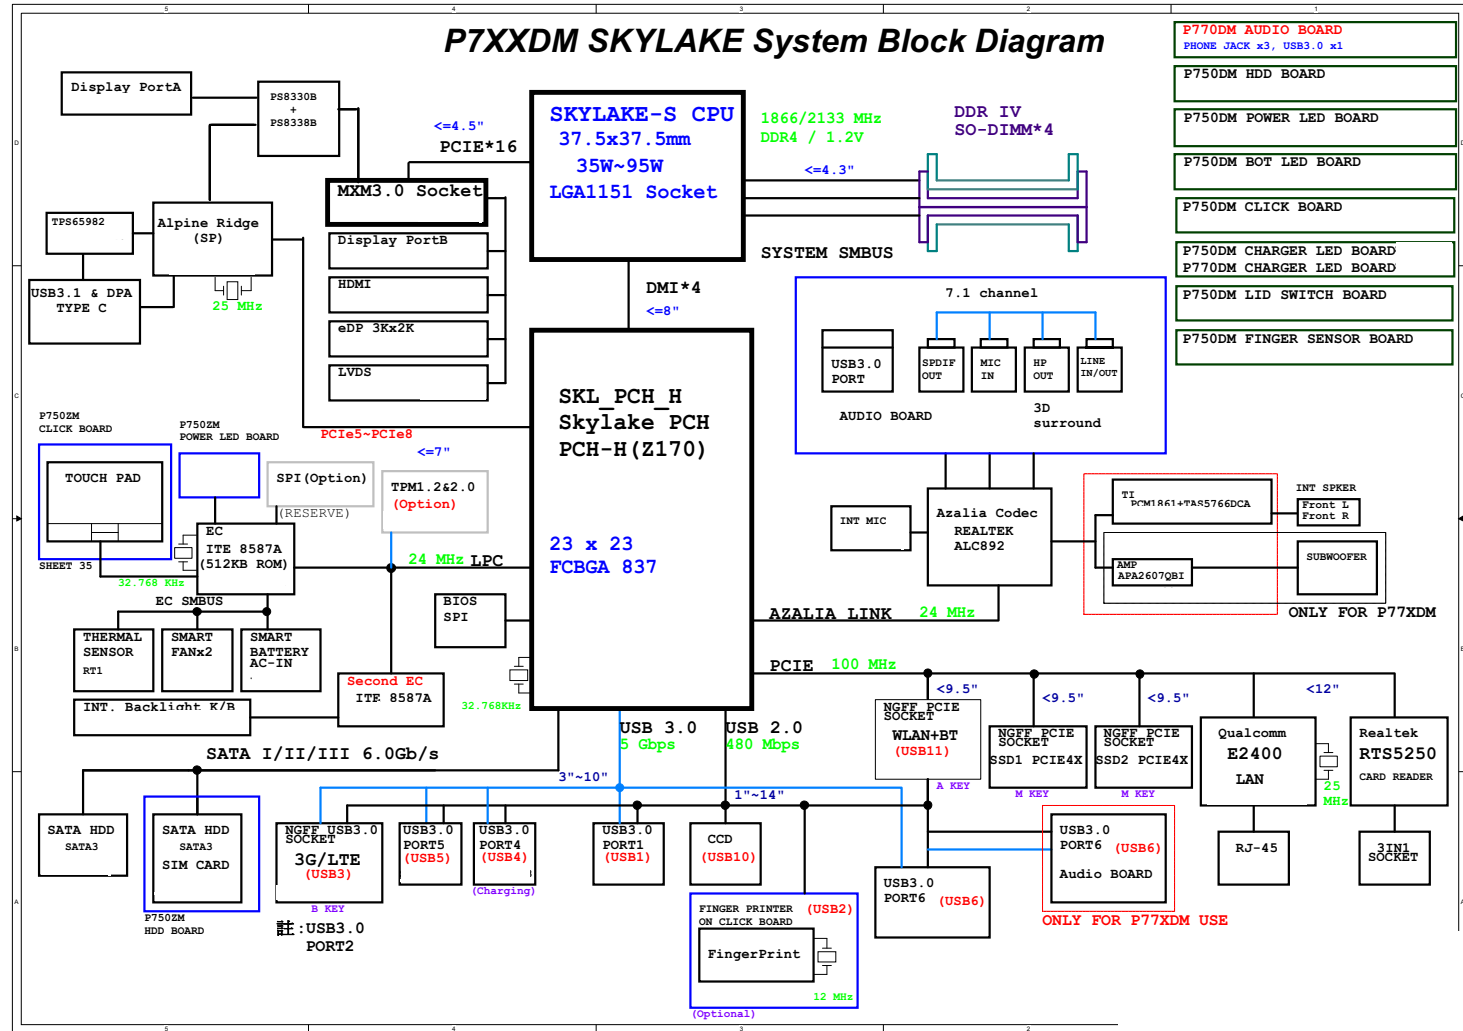

Processor 1/5

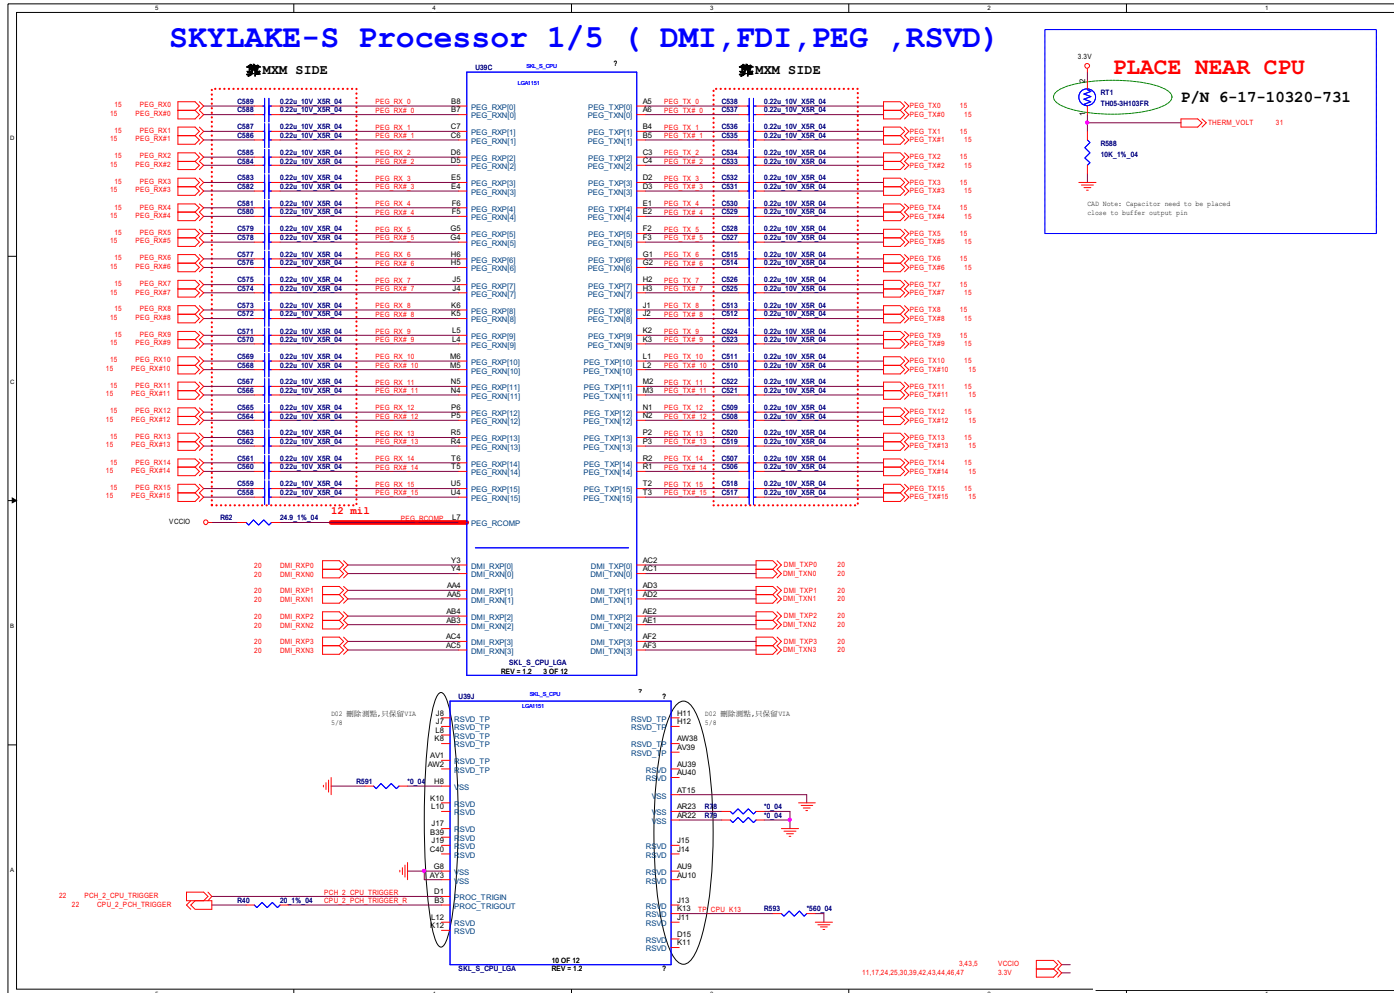

B.Schematic Diagrams


Sheet 2 of 62
Processor 1/5

Schematic Diagrams


Panel, Inverter, CRT

B.Schematic Diagrams

Sheet 11 of 62
Panel, Inverter,
CRT

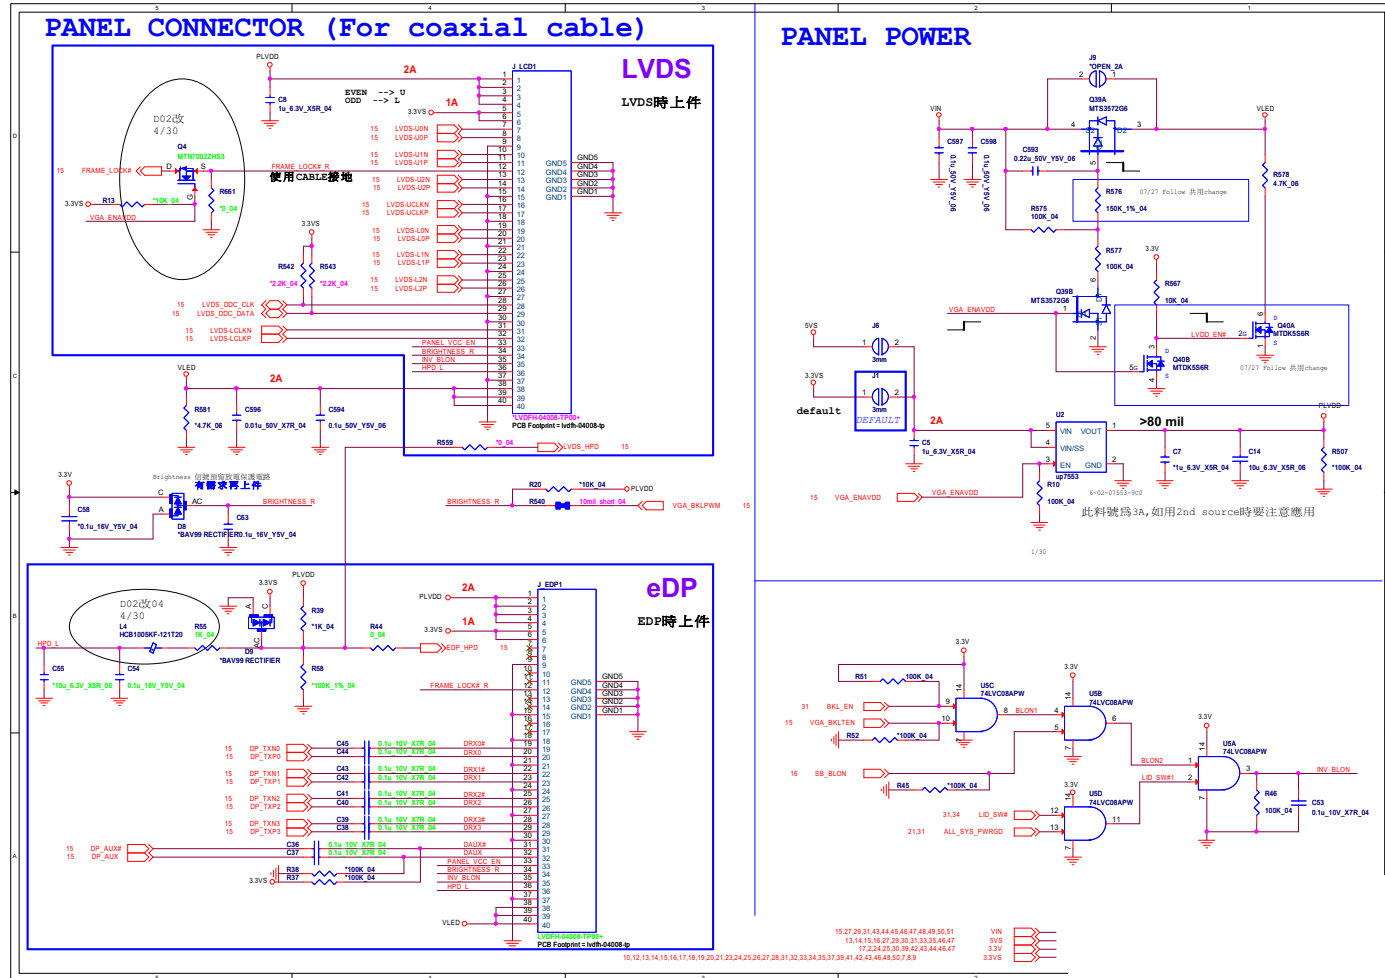

Display Port A

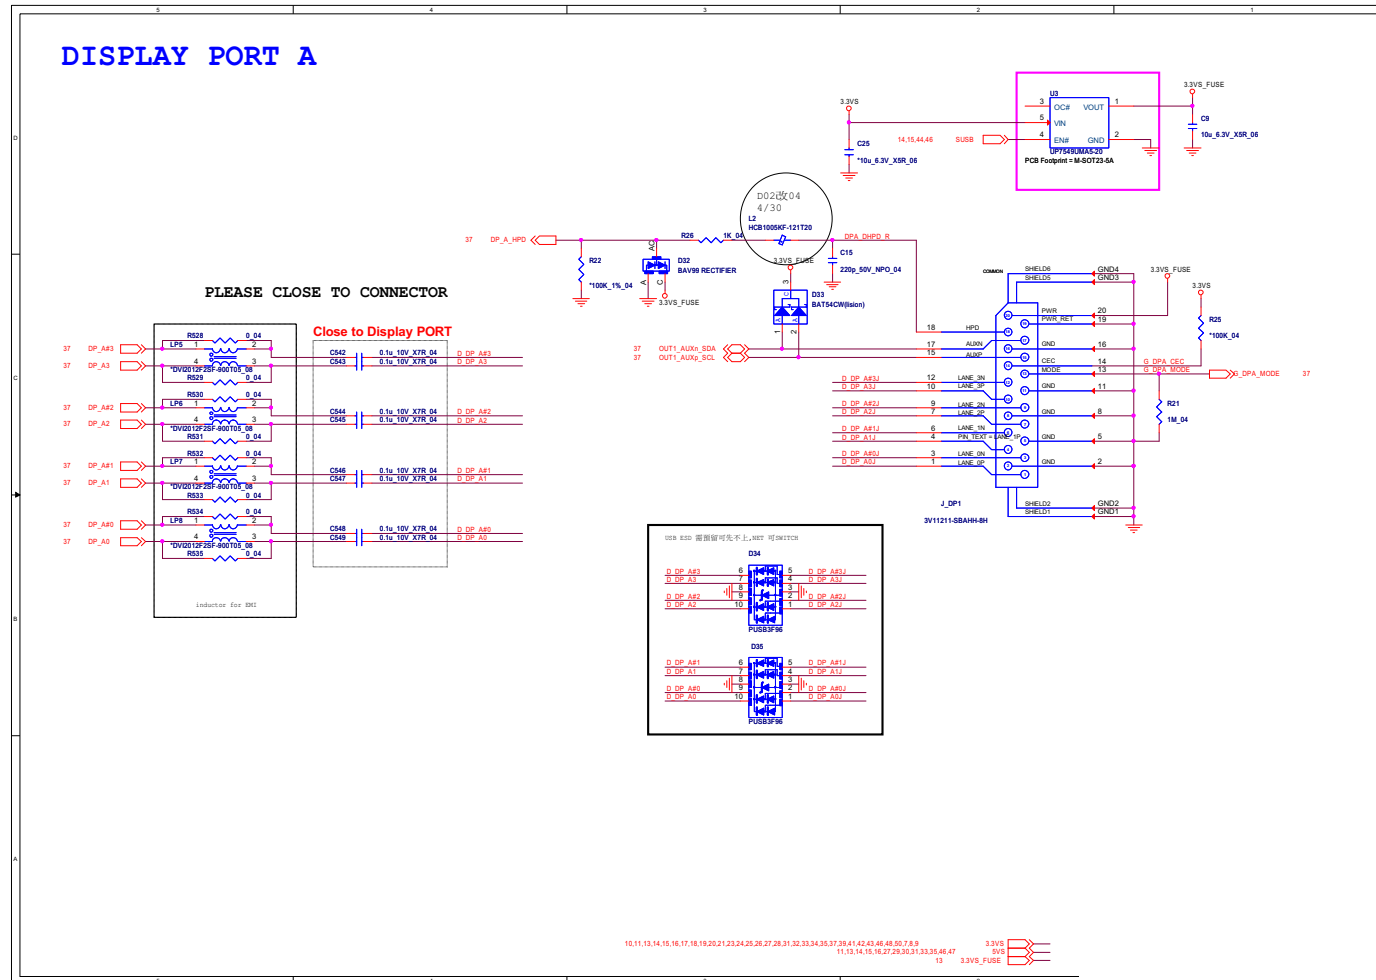


Sheet 12 of 62
Display Port A

B.Schematic Diagrams


Display Port B

Sheet 13 of 62
Display Port B

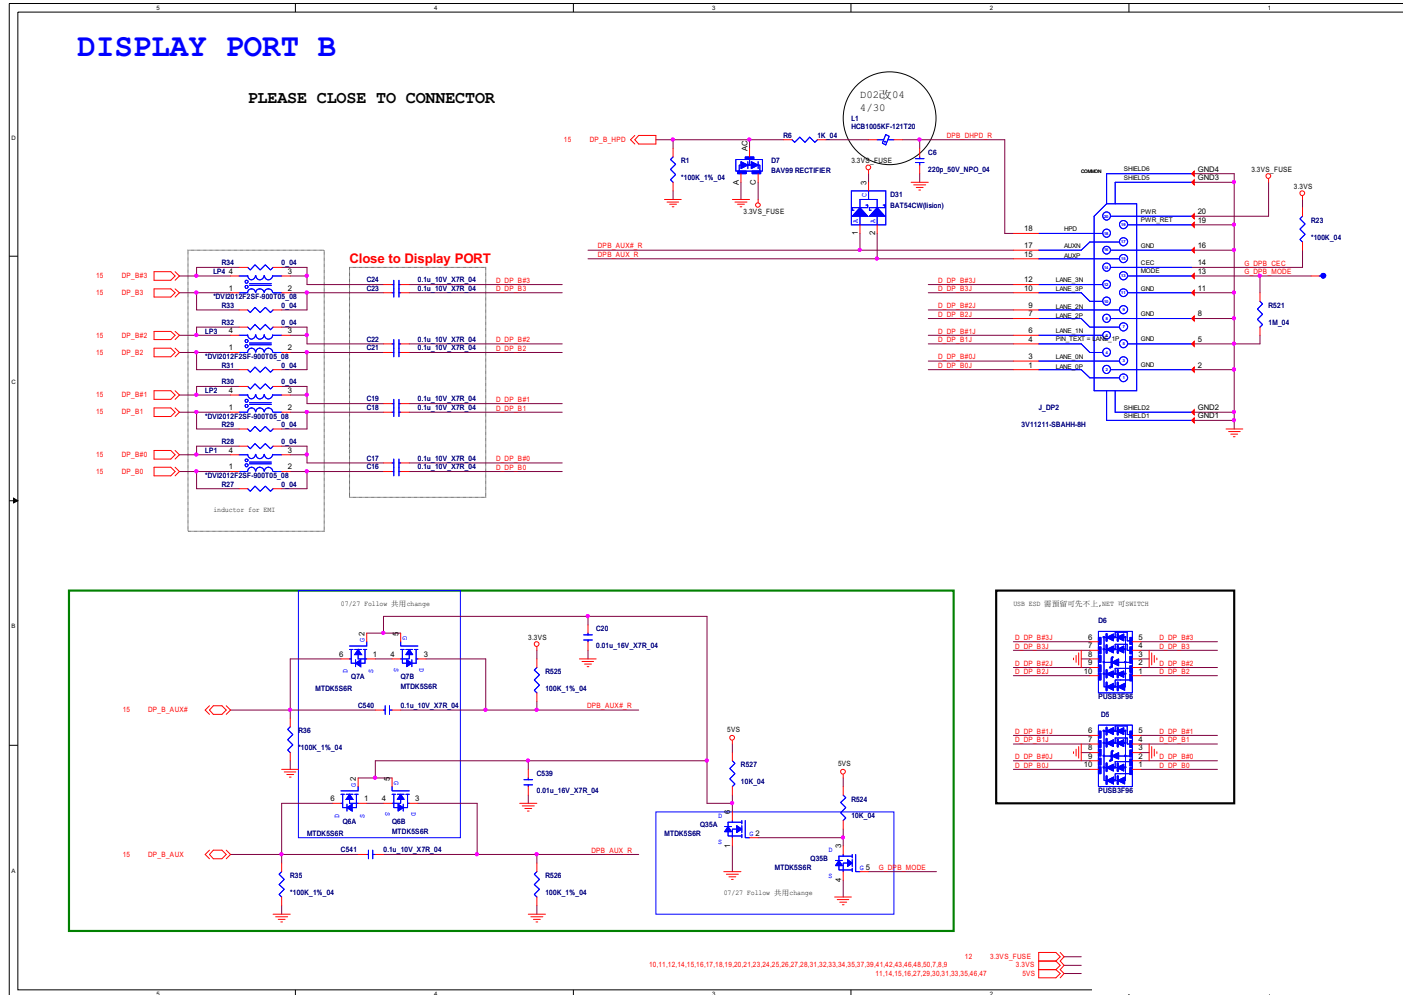

HDMI


B.Schematic Diagrams

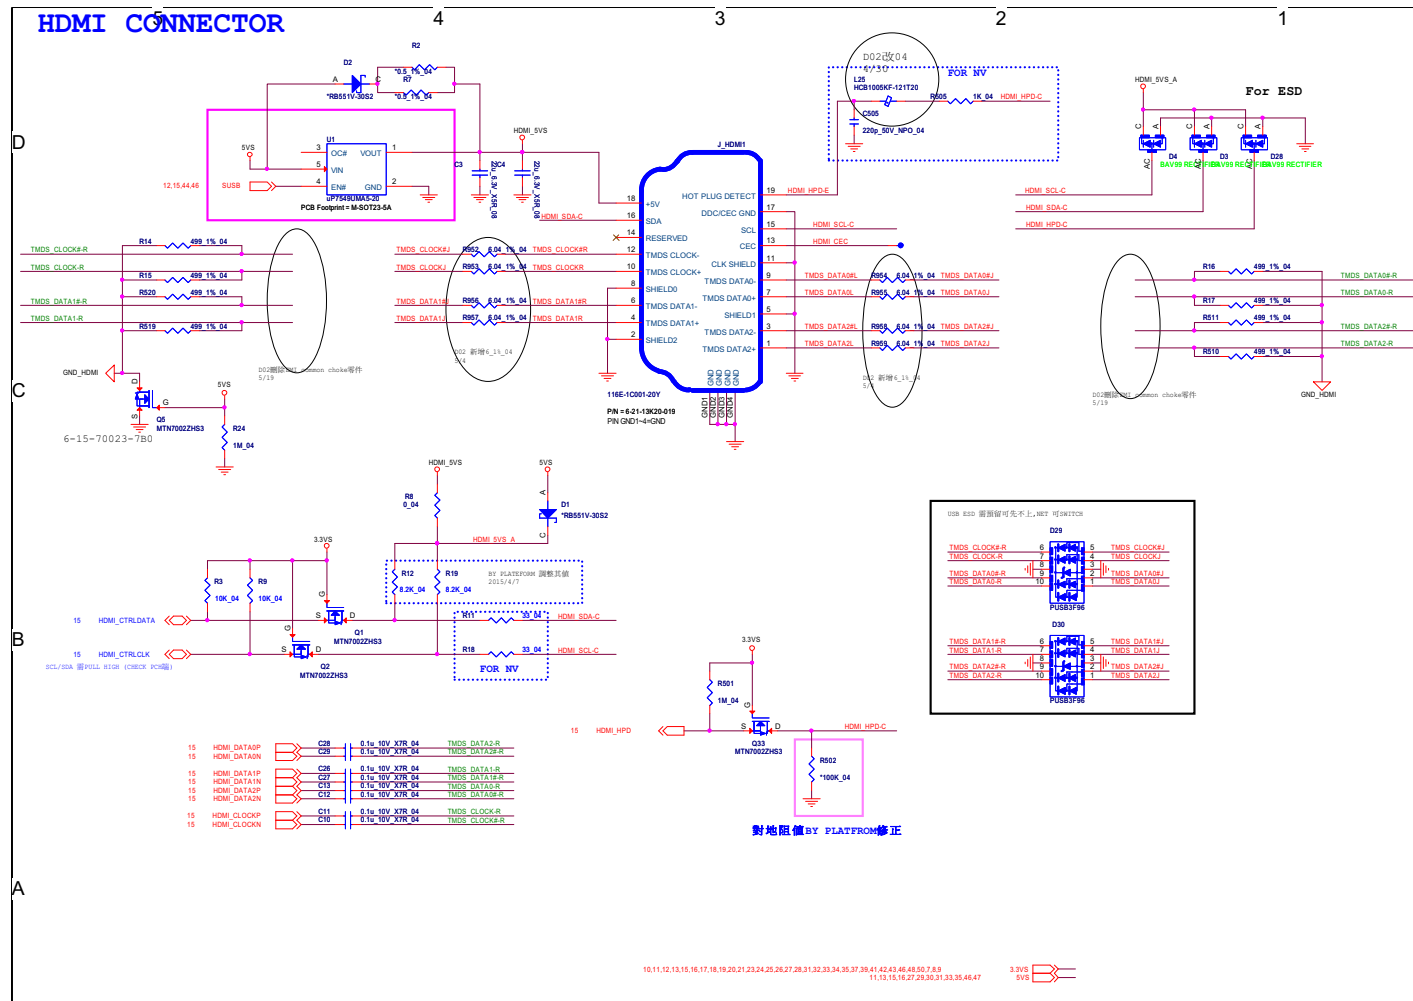

Sheet 14 of 62
HDMI


MXM PCI-E

Sheet 15 of 62
MXM PCI-e

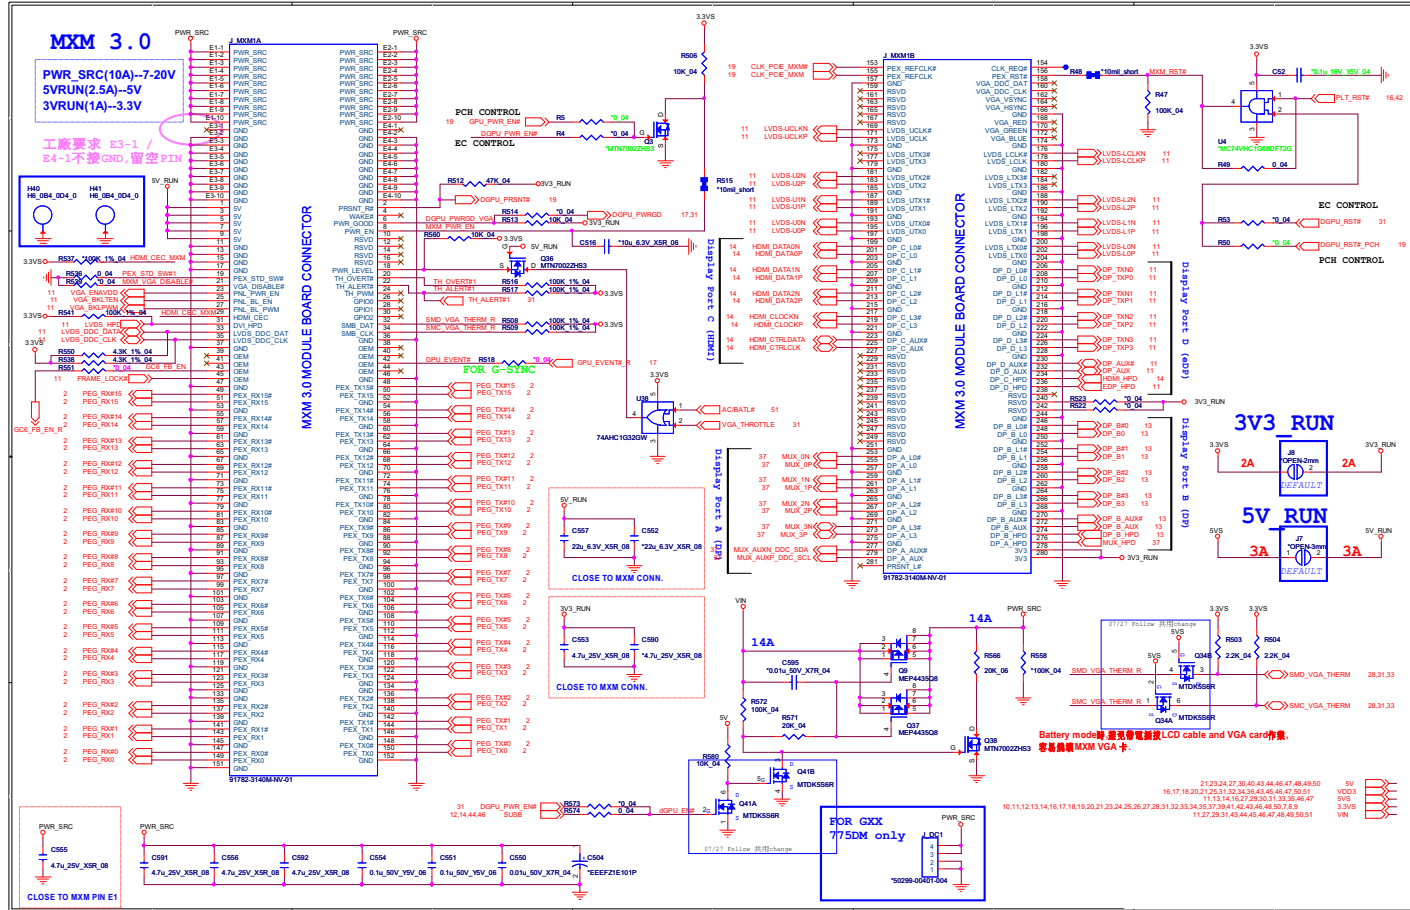


Lynx Point 2/7

Sheet 17 of 62
Lynx Point 2/7

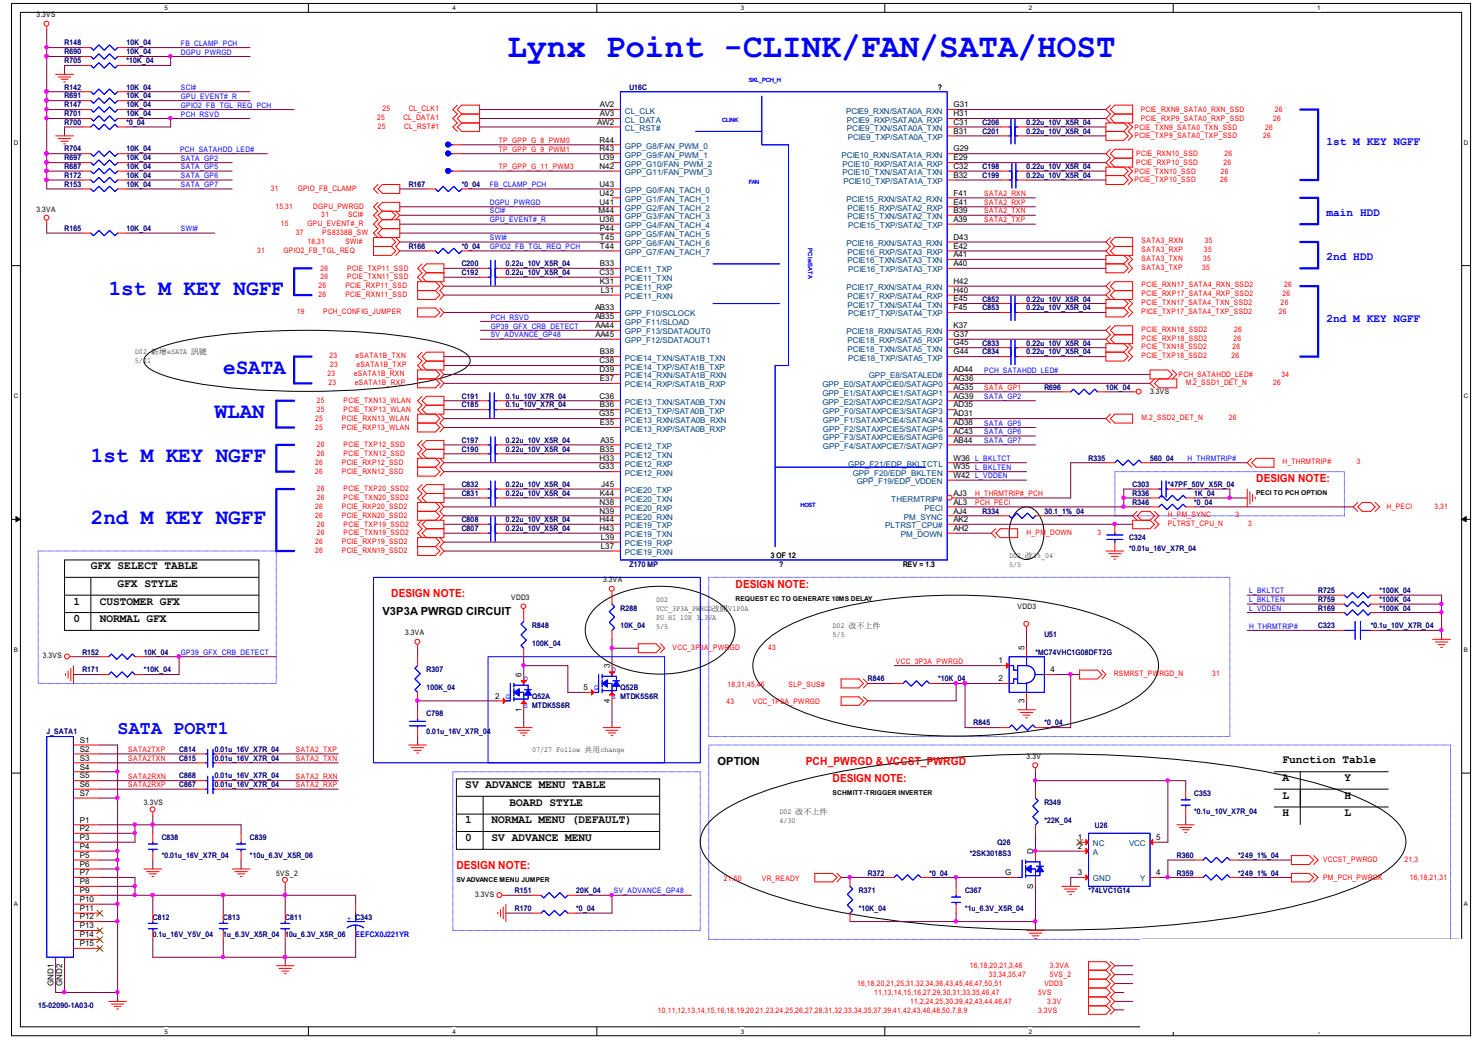


Lynix Point 3/7

B.Schematic Diagrams

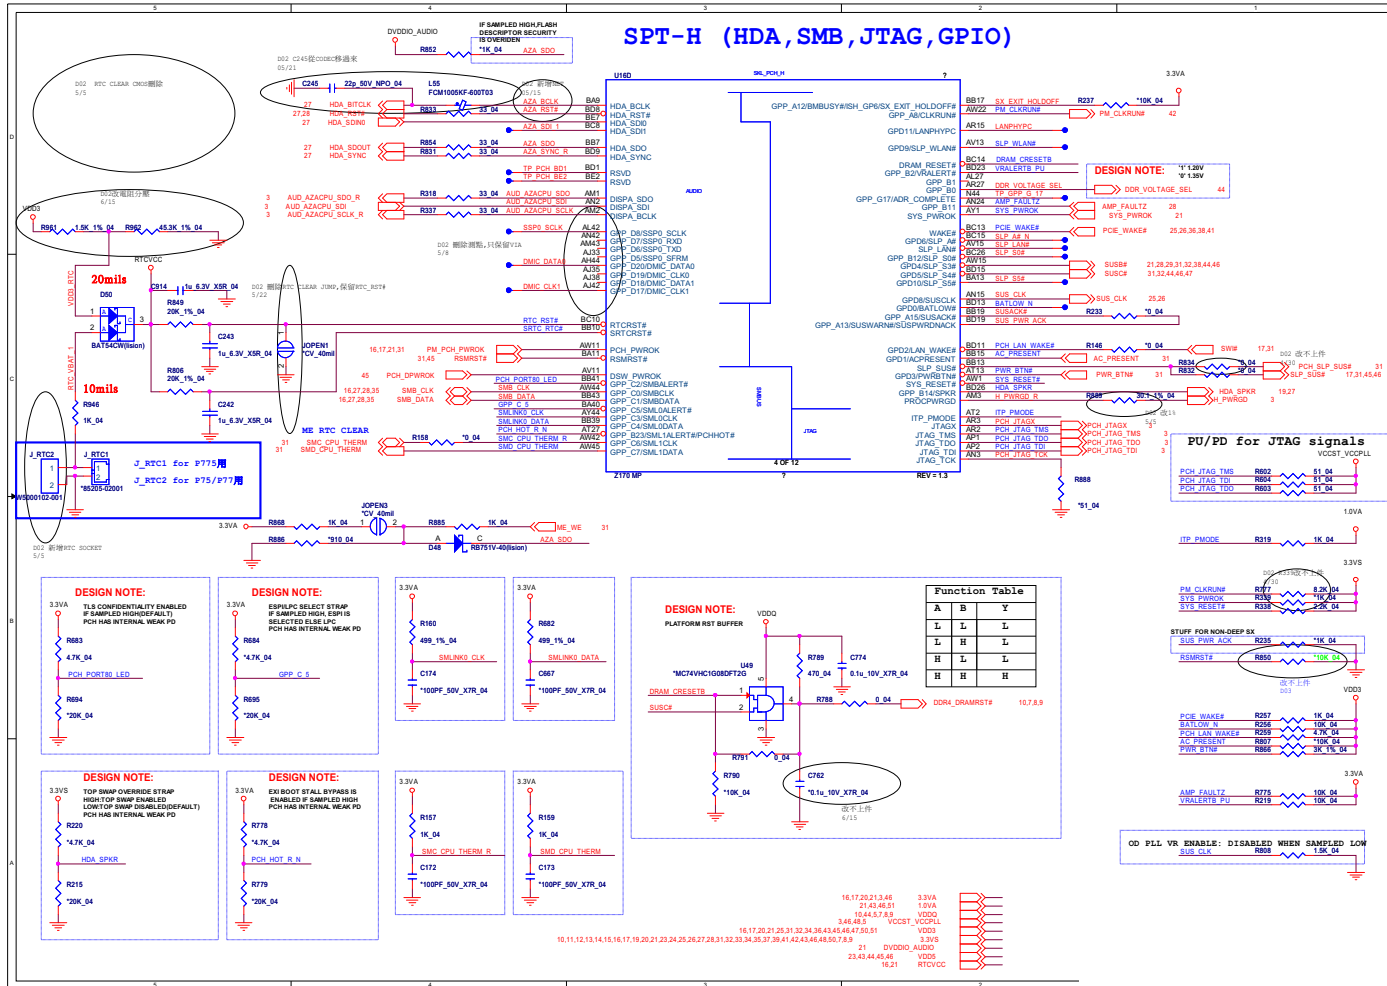


Sheet 18 of 62
Lynix Point 3/7

Lynx Point 4/7

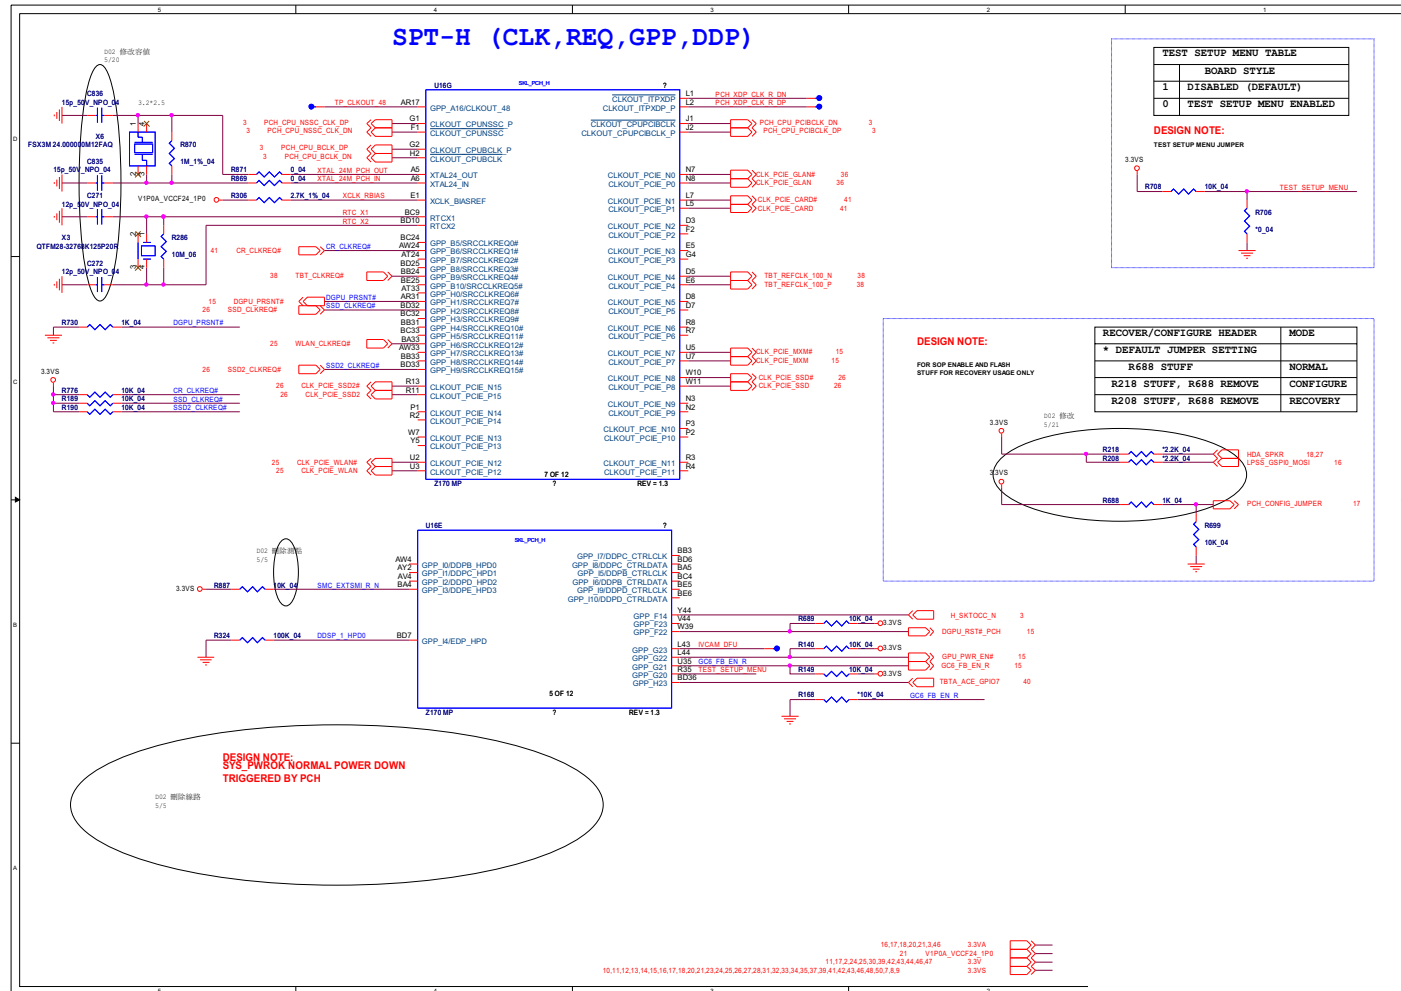


Lynx Point 5/7

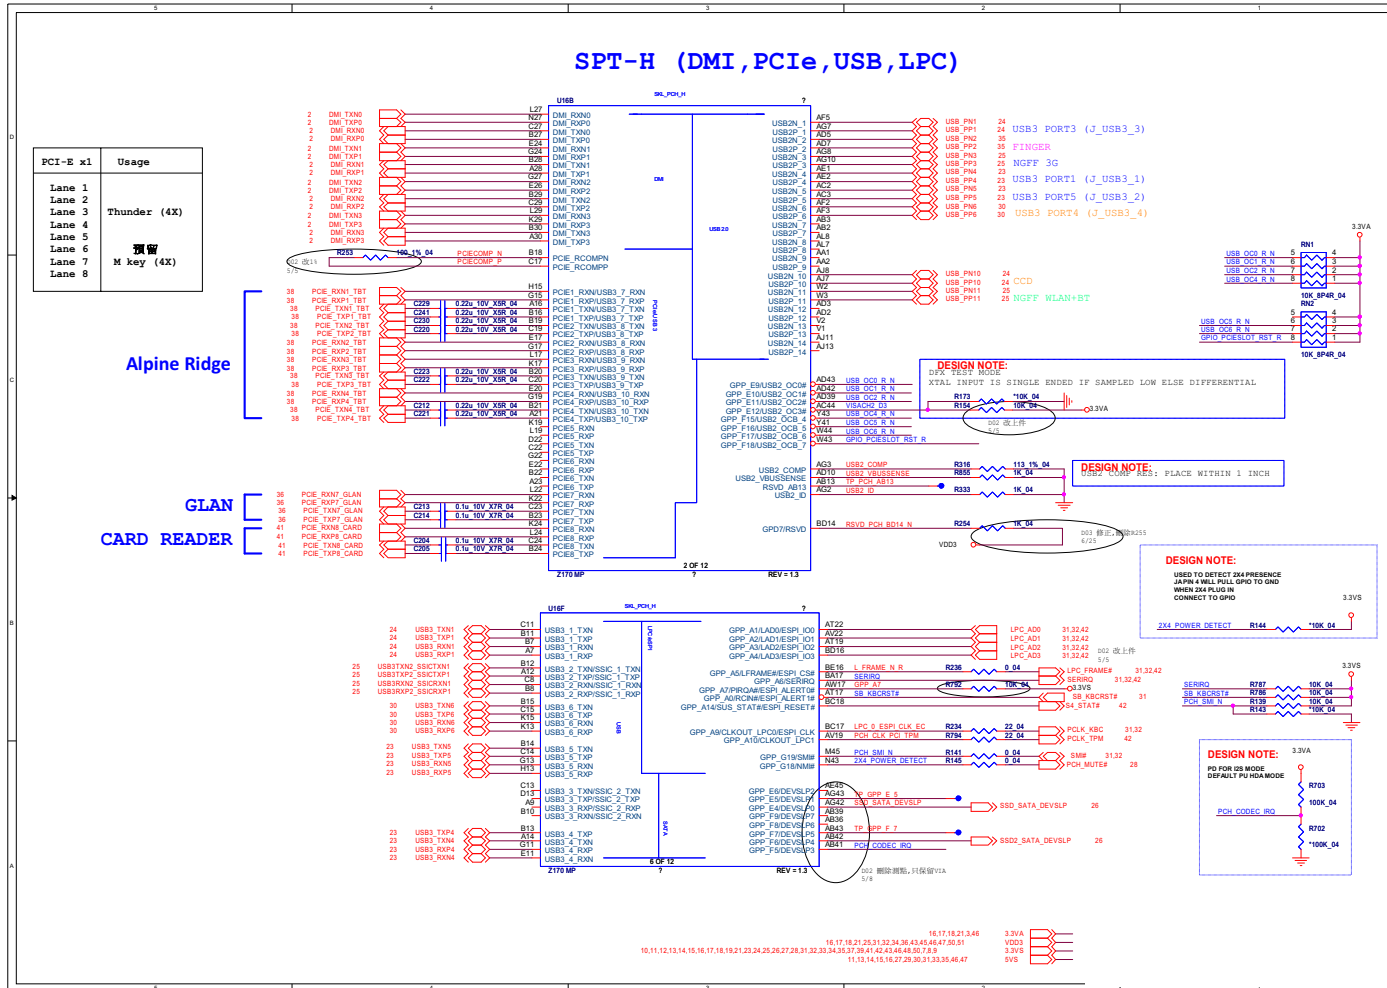

B.Schematic Diagrams

Sheet 20 of 62
Lynx Point 5/7


Lynx Point 7/7

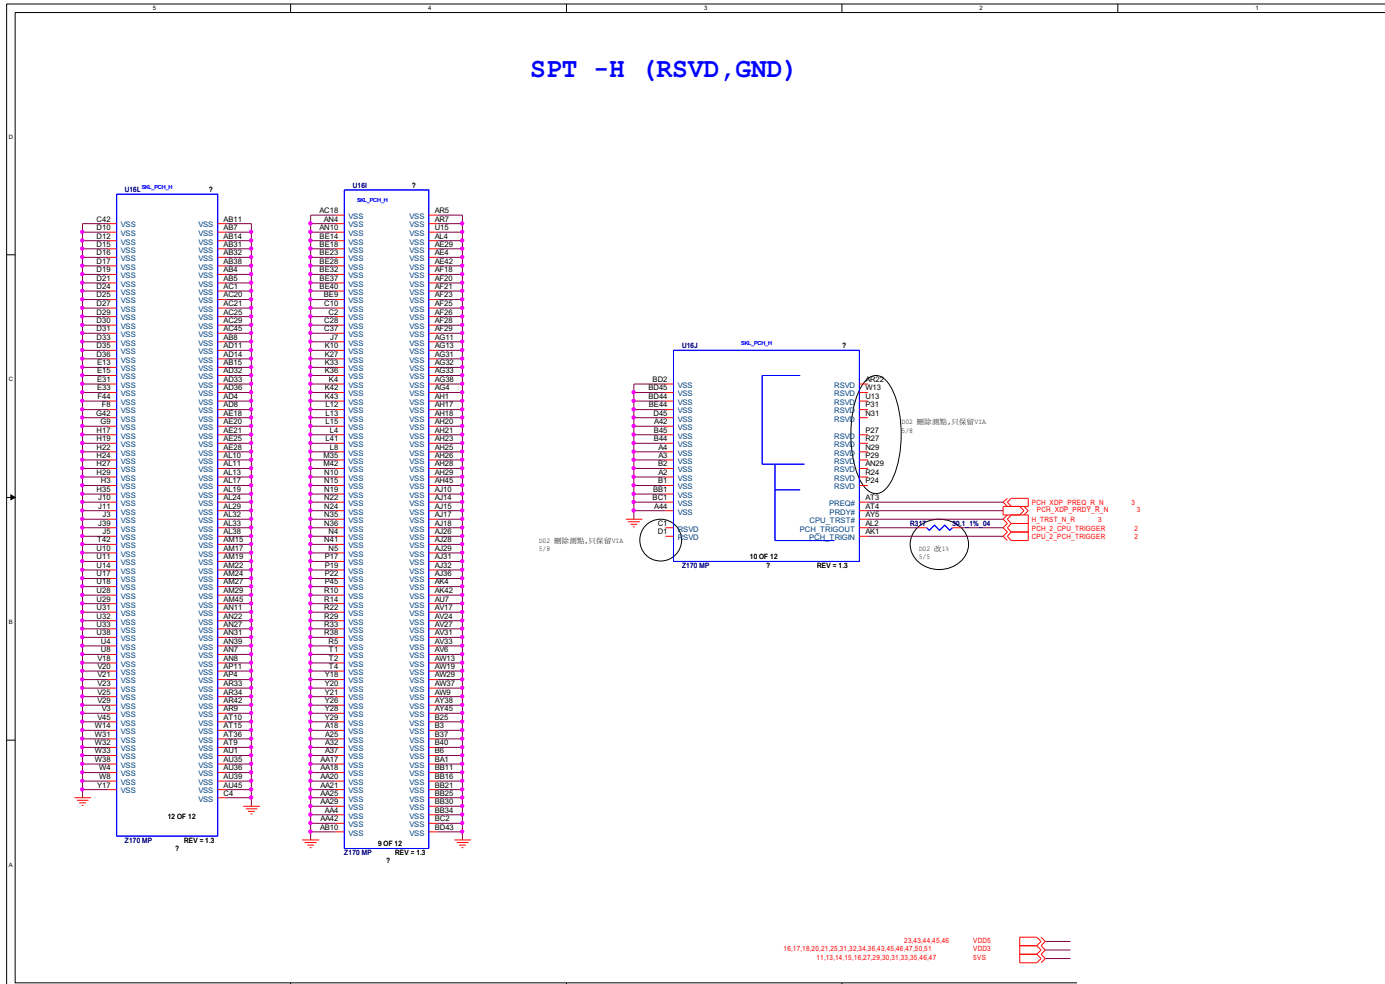


Sheet 22 of 62
Lynx Point 7/7

USB + eSATA, USB Charging

Sheet 23 of 62
USB + eSATA, USB
Charging

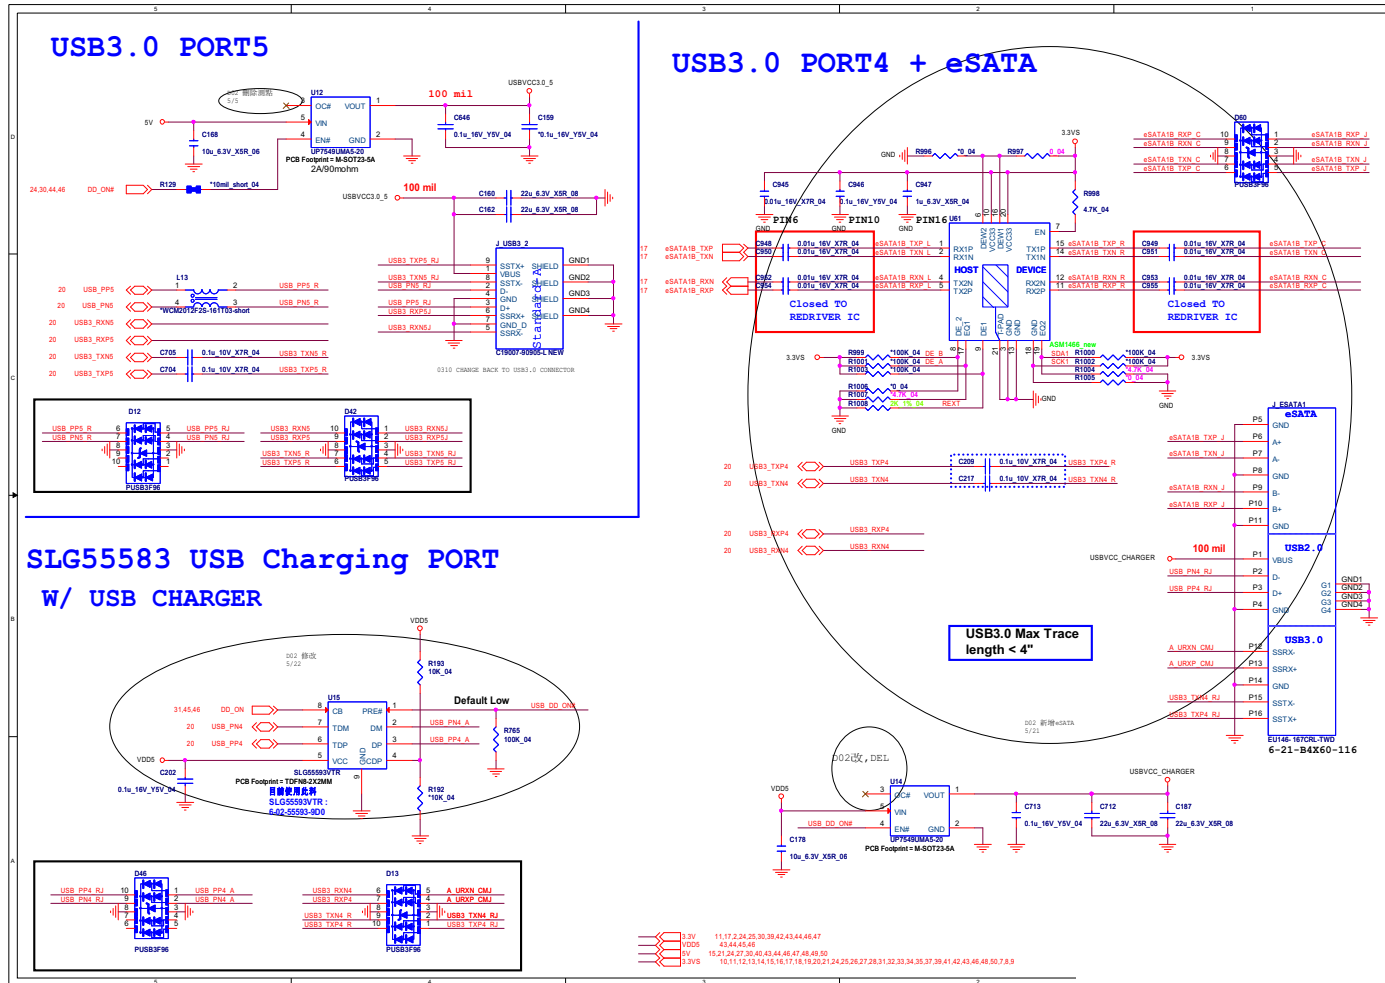

CCD, USB Port3

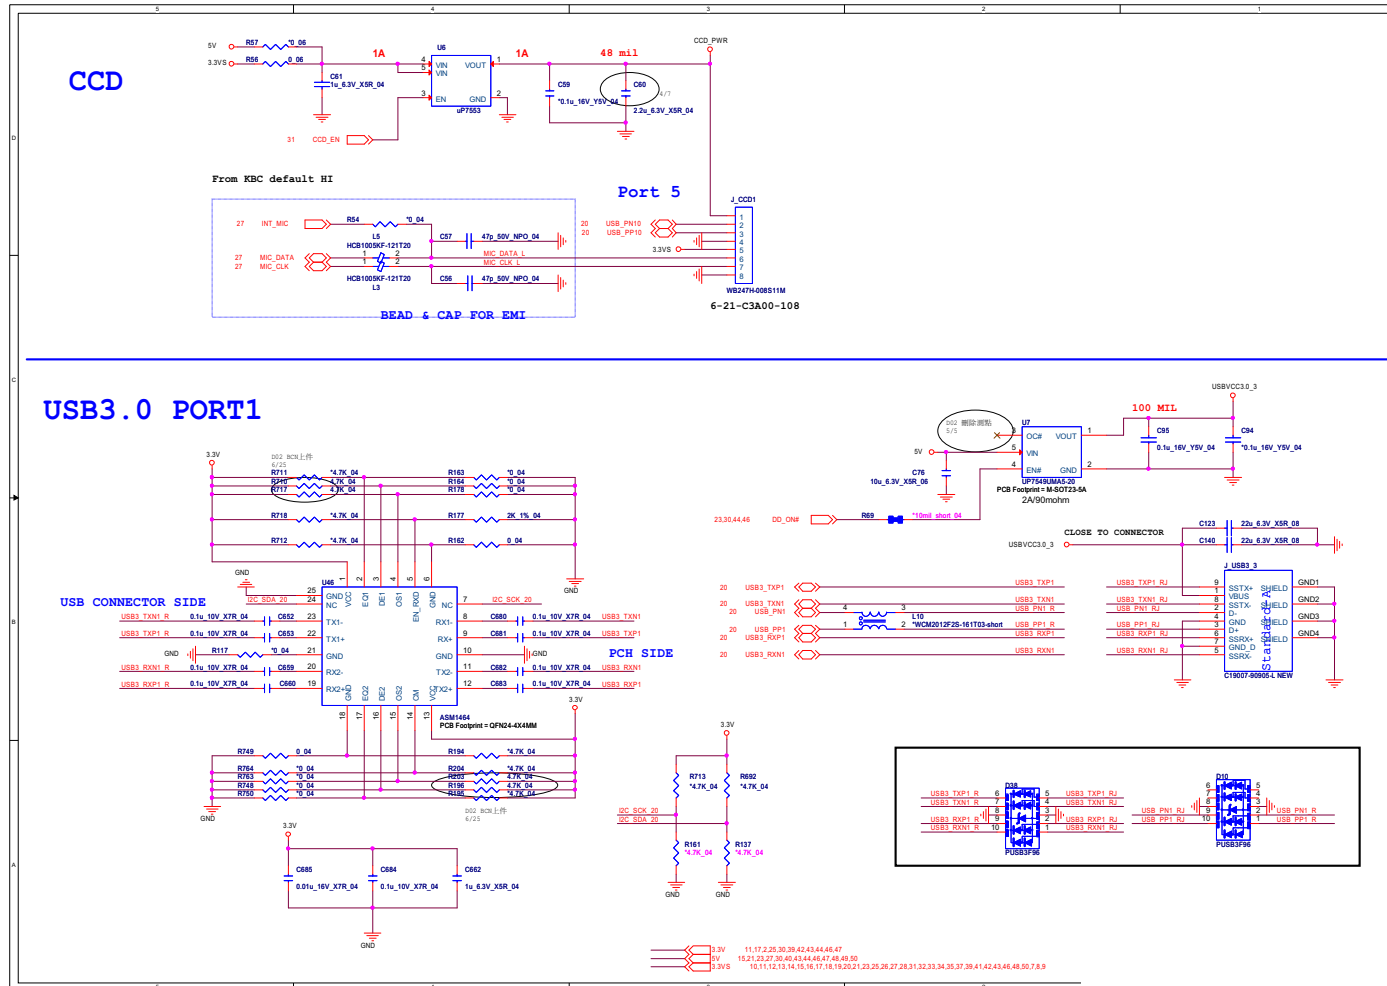


Sheet 24 of 62
 CCD, USB Port3


B.Schematic Diagrams

Realtek ALC892

Sheet 27 of 62
Realtek ALC892

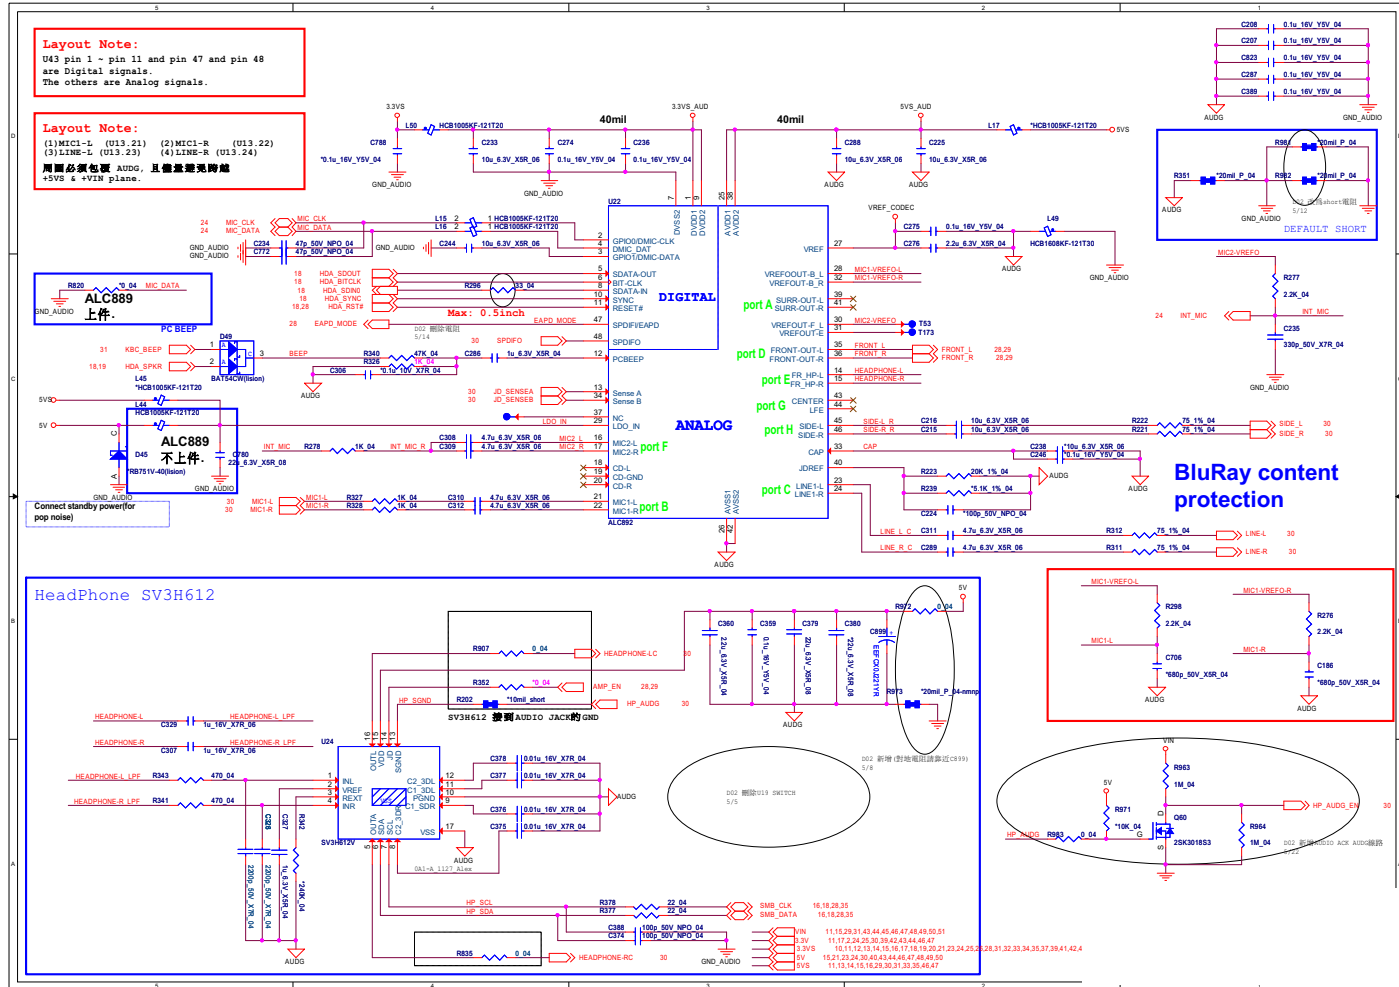


PCM1861 + TAS5766DCA

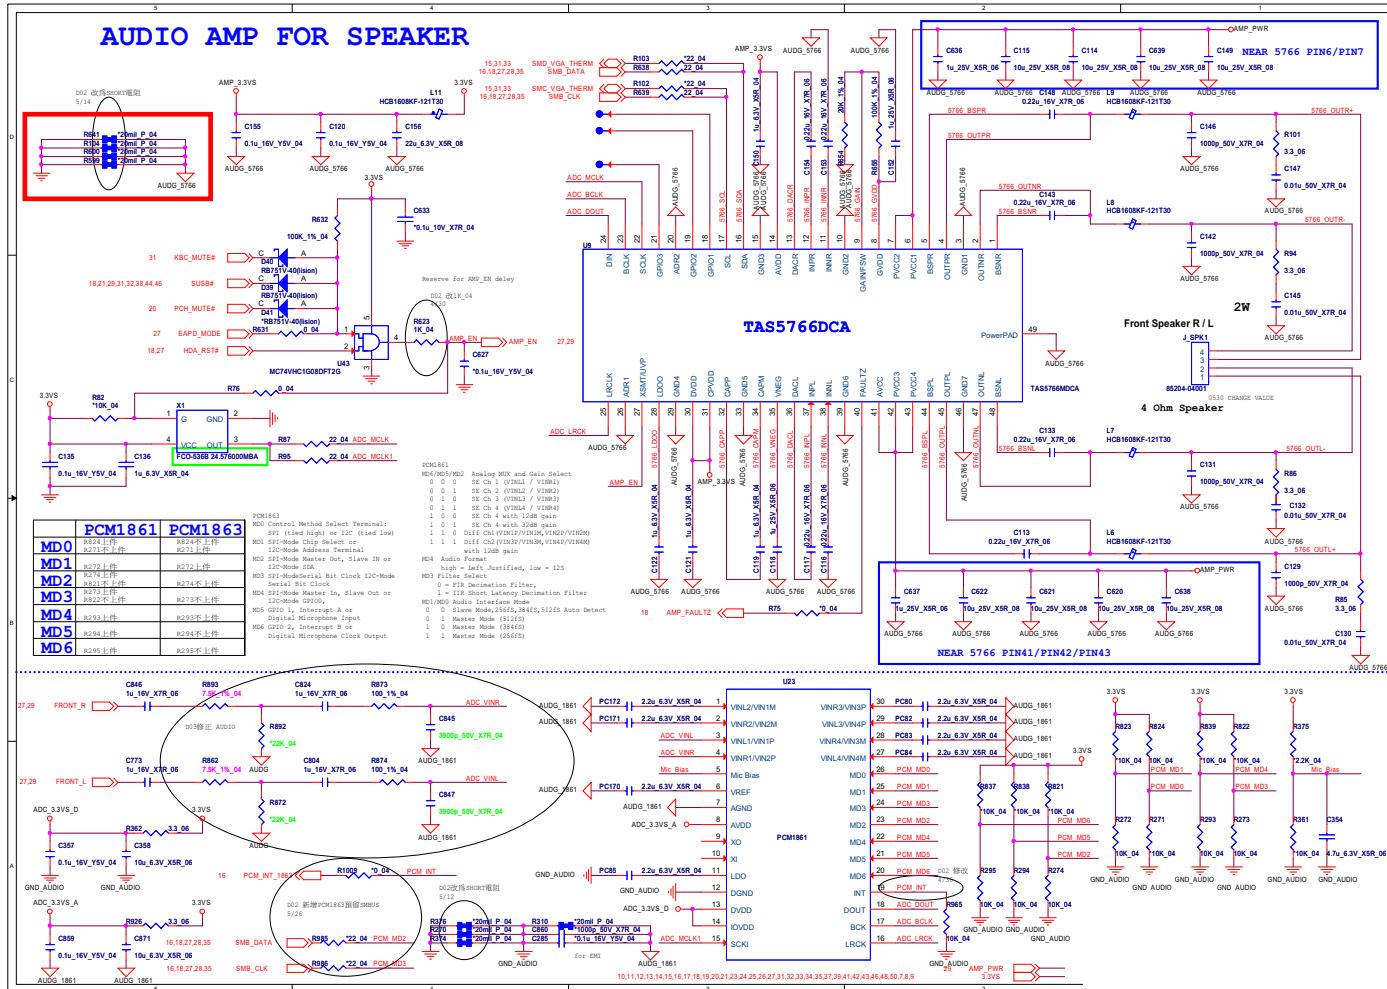

B.Schematic Diagrams

Sheet 28 of 62
PCM1861 +
TAS5766DCA


Subwoofer

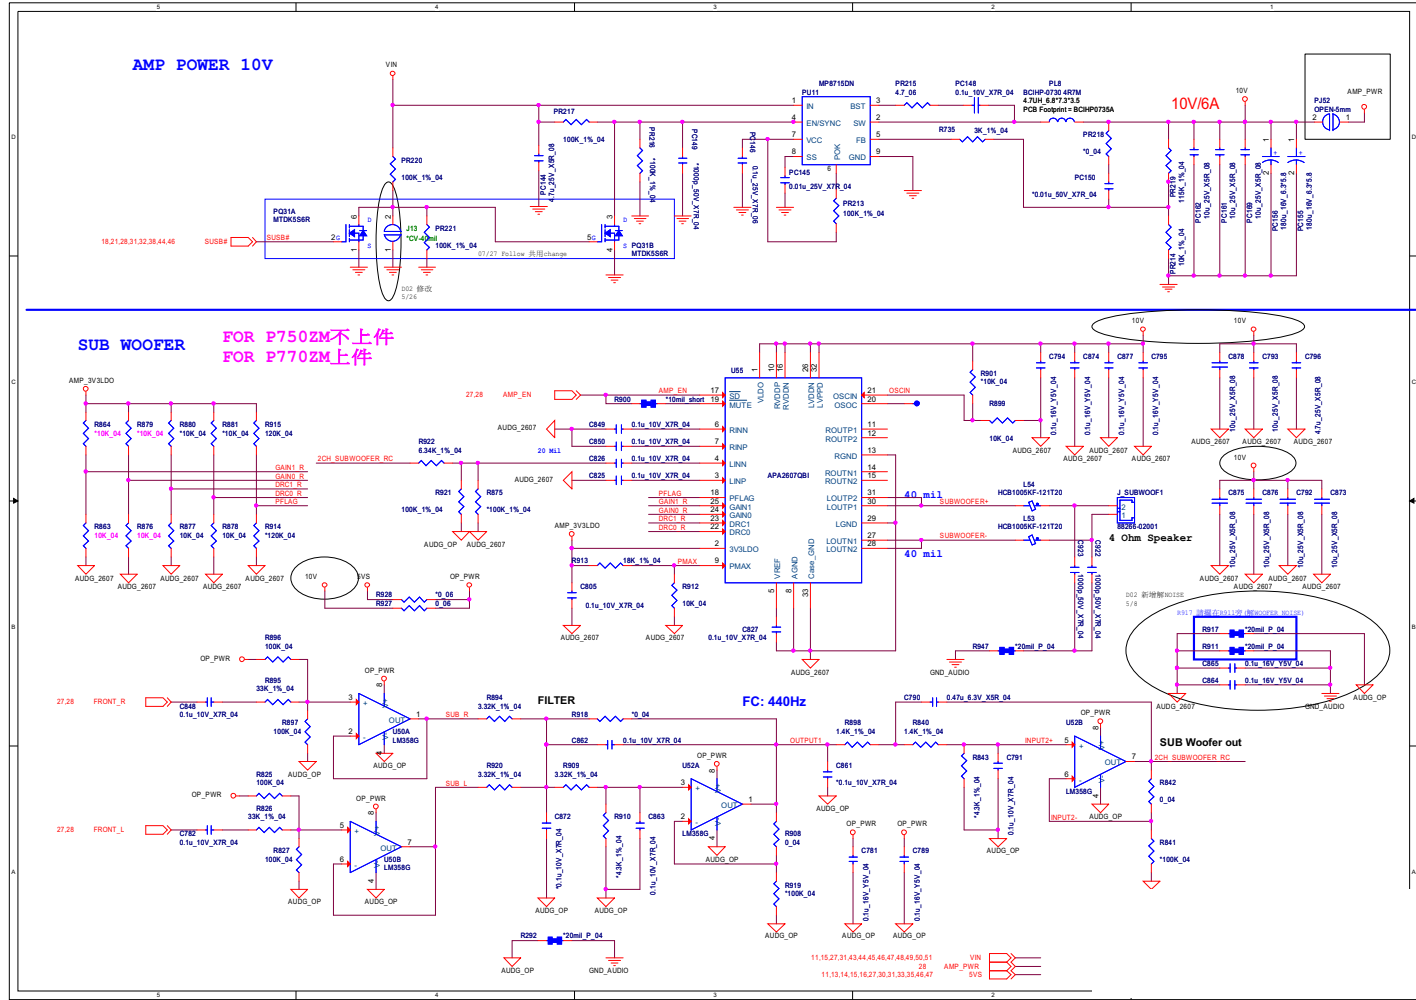

Sheet 29 of 62
Subwoofer

B.Schematic Diagrams

Audio Jack

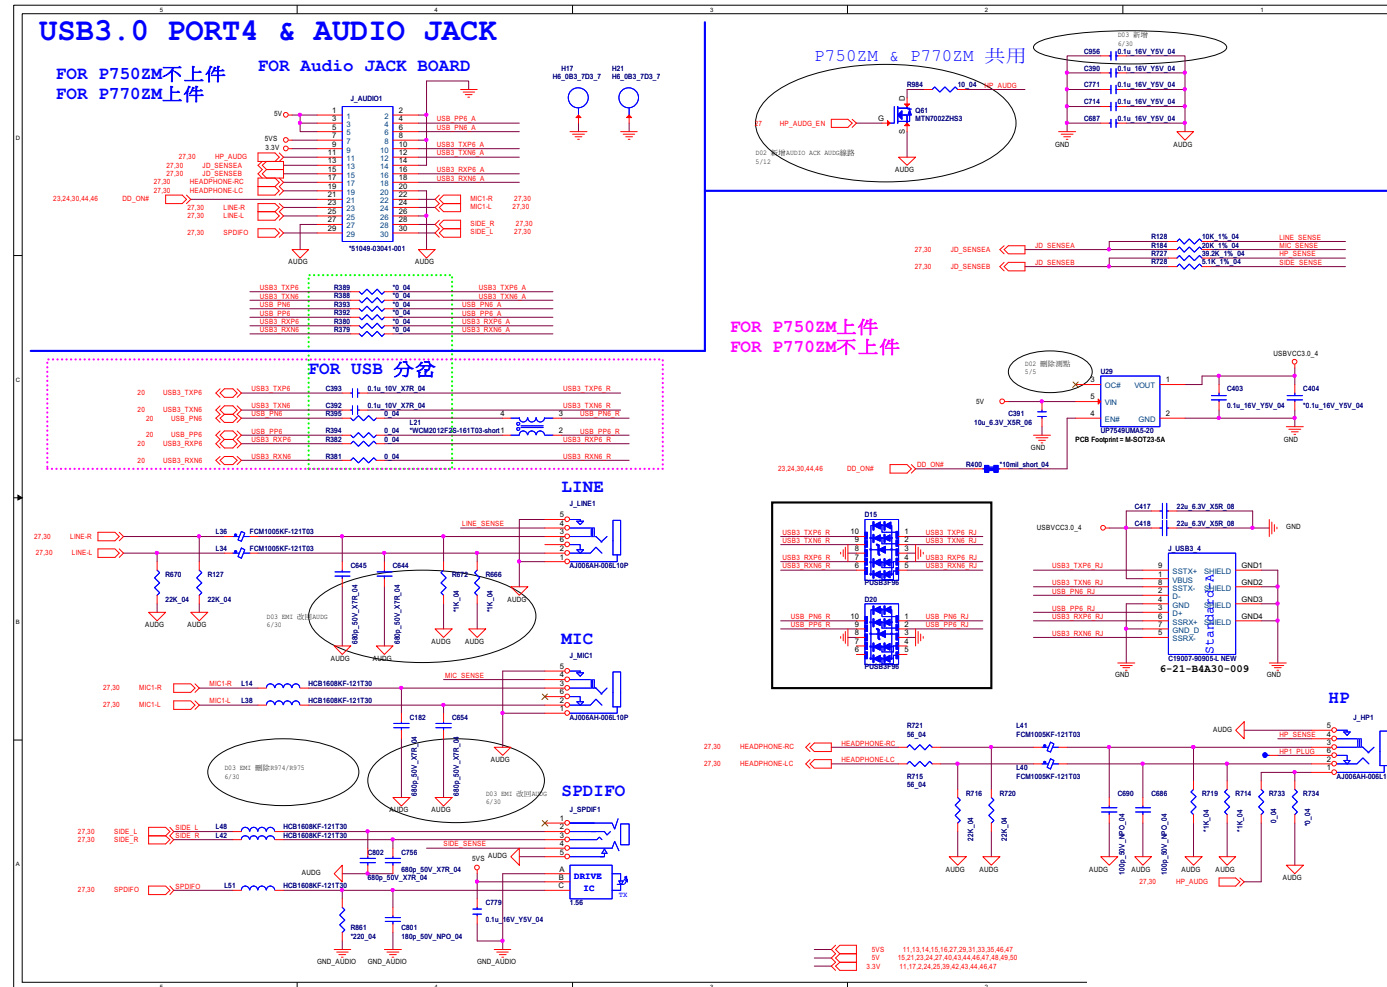


Sheet 30 of 62
Audio Jack

B.Schematic Diagrams

Second EC IT8587


B.Schematic Diagrams

Sheet 32 of 62
Second EC IT8587

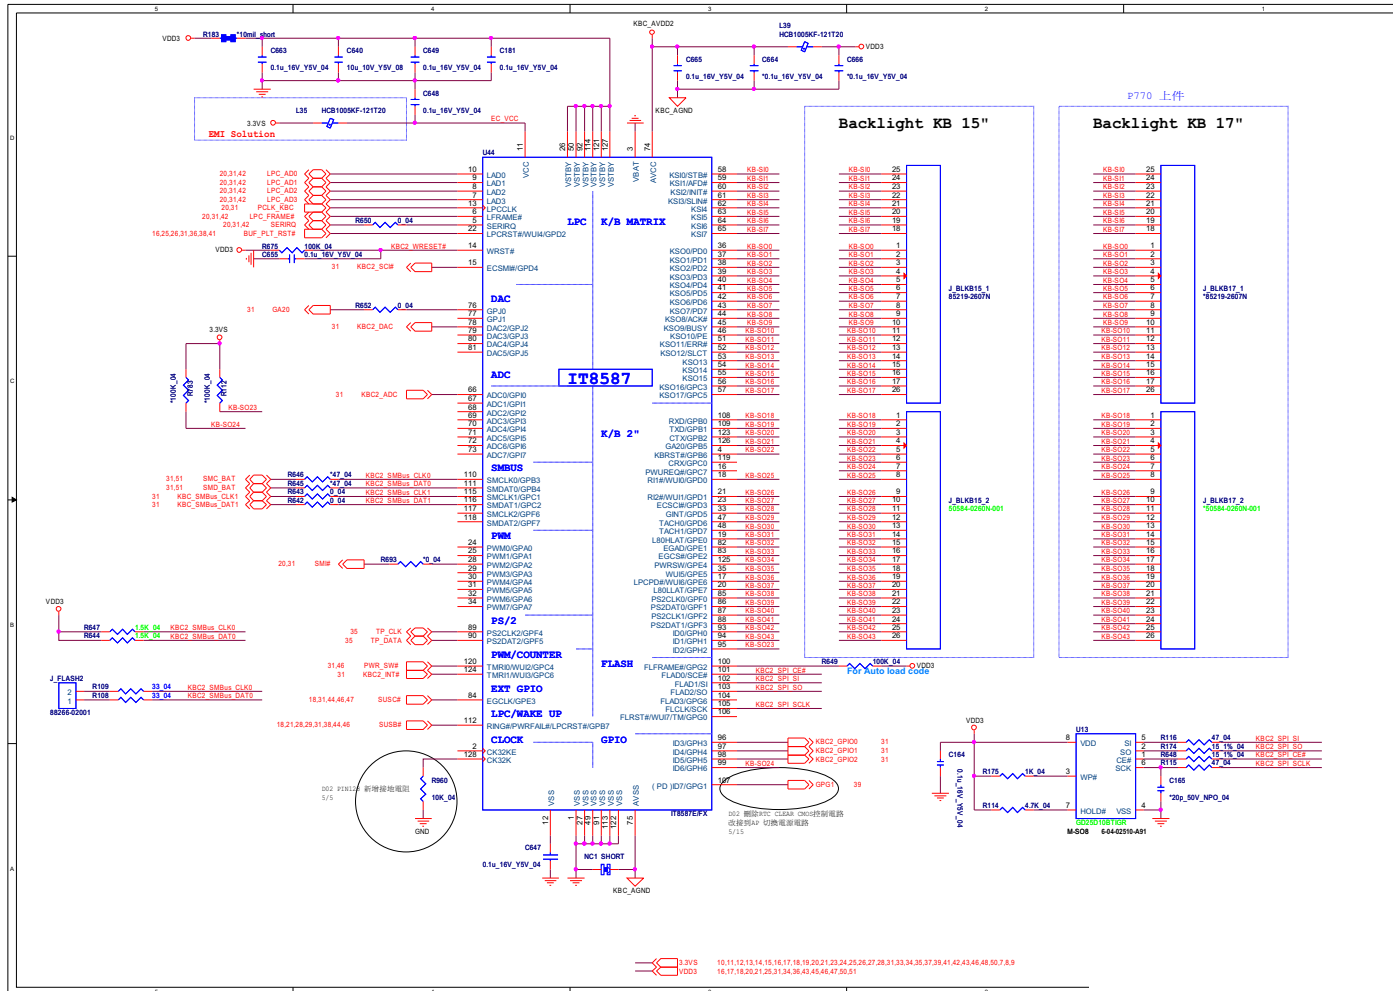


Backlight Keyboard

Sheet 33 of 62
Backlight
Keyboard

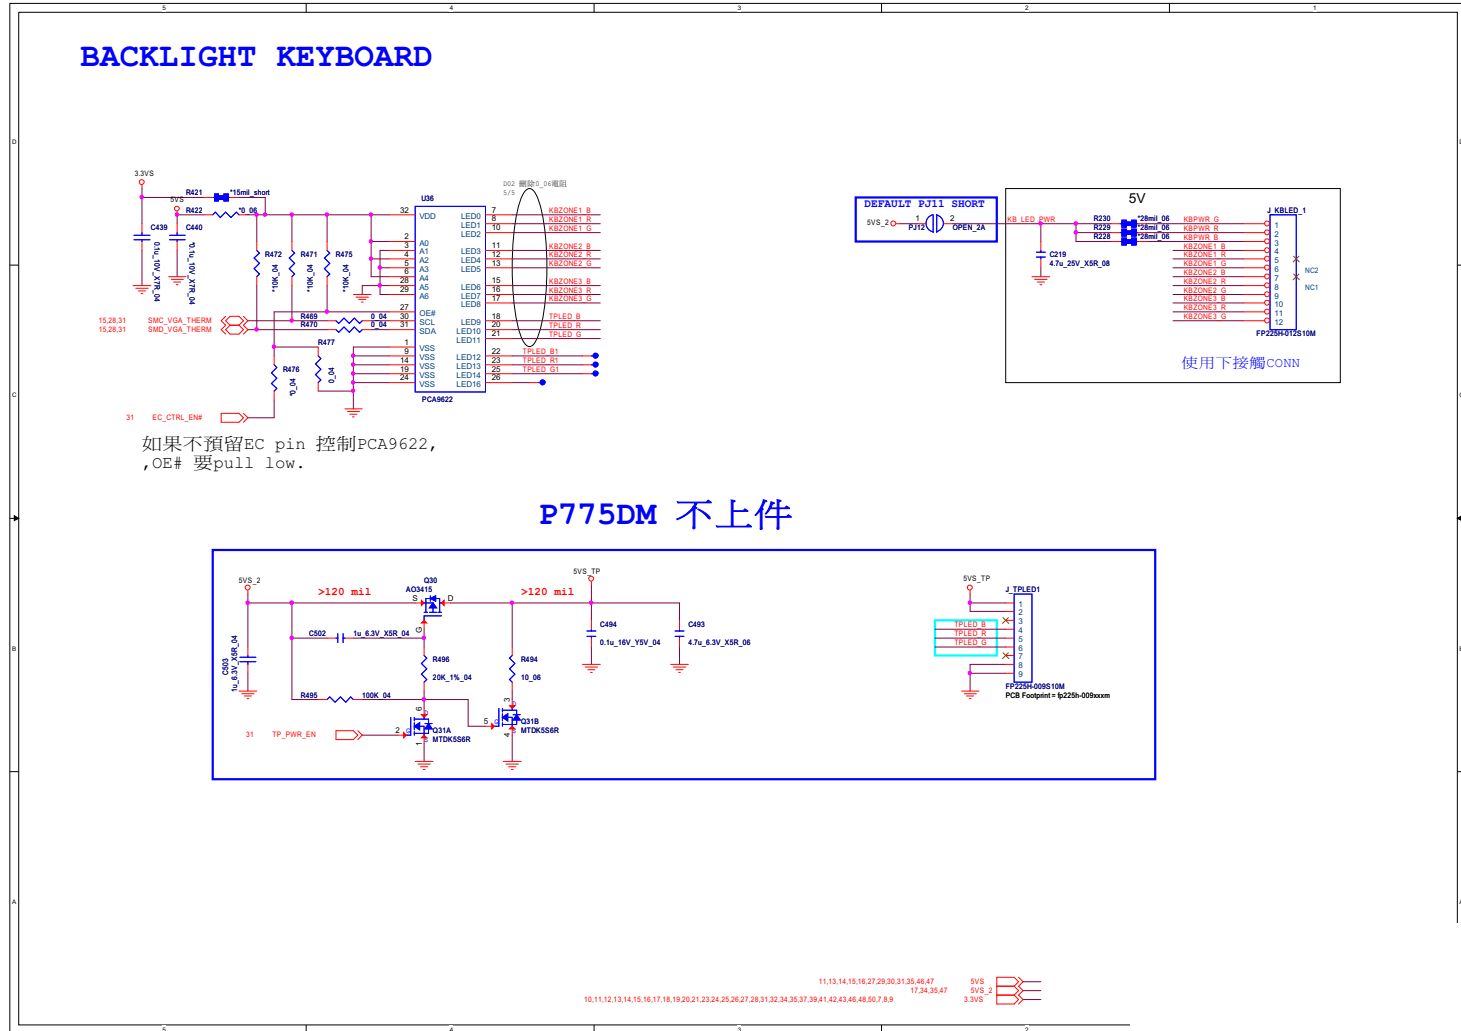

LID SW, Fan, LED Conn

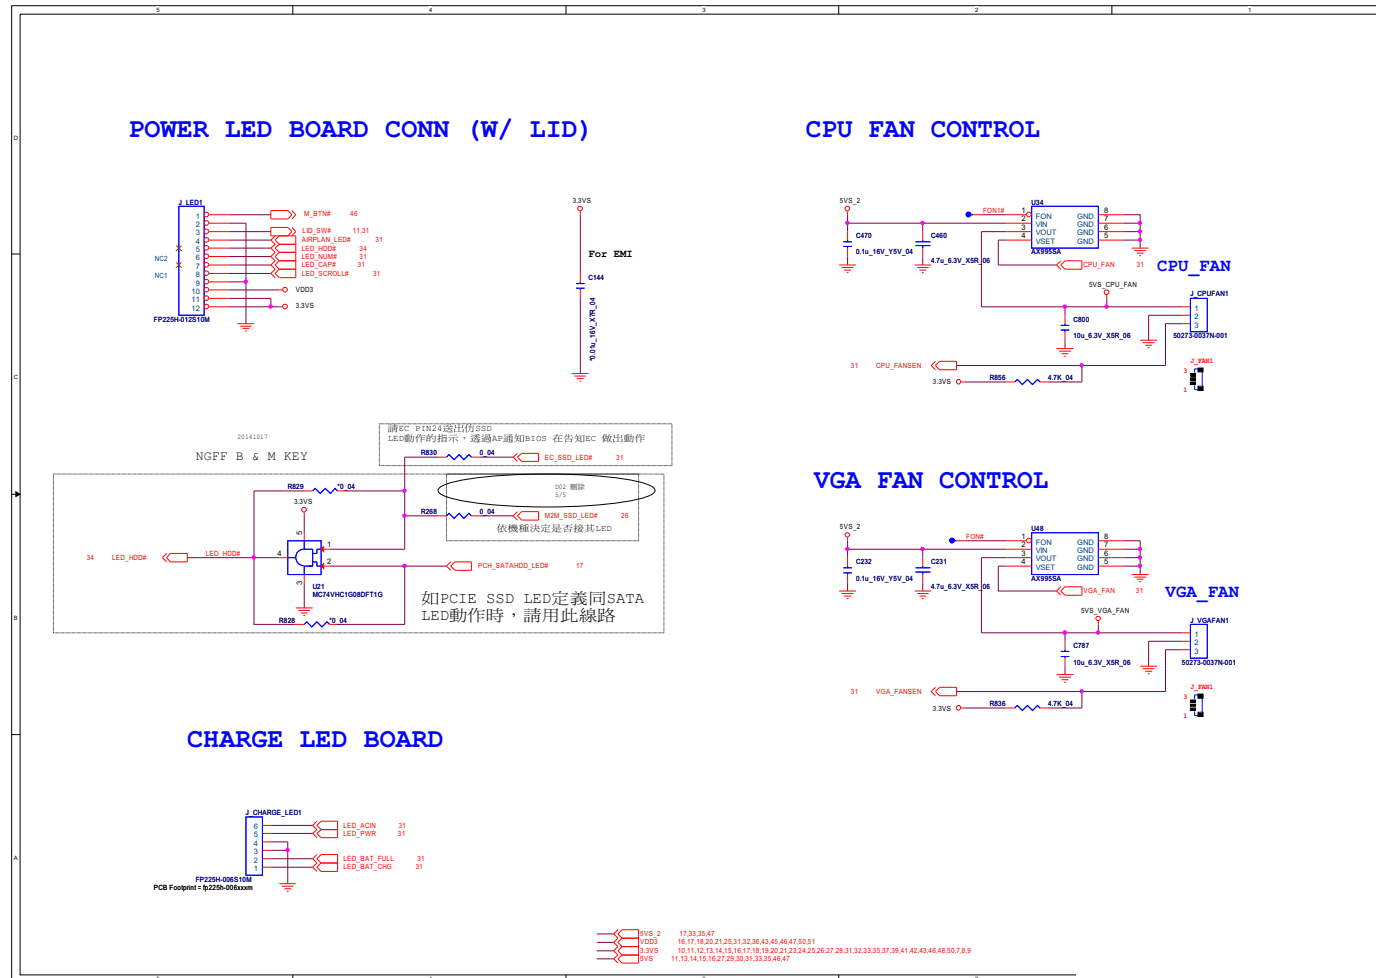


Sheet 34 of 62
LID SW, Fan,
LED Conn

B.Schematic Diagrams

TP, FP, Multi-Con


Sheet 35 of 62
TP, FP, Multi-Con

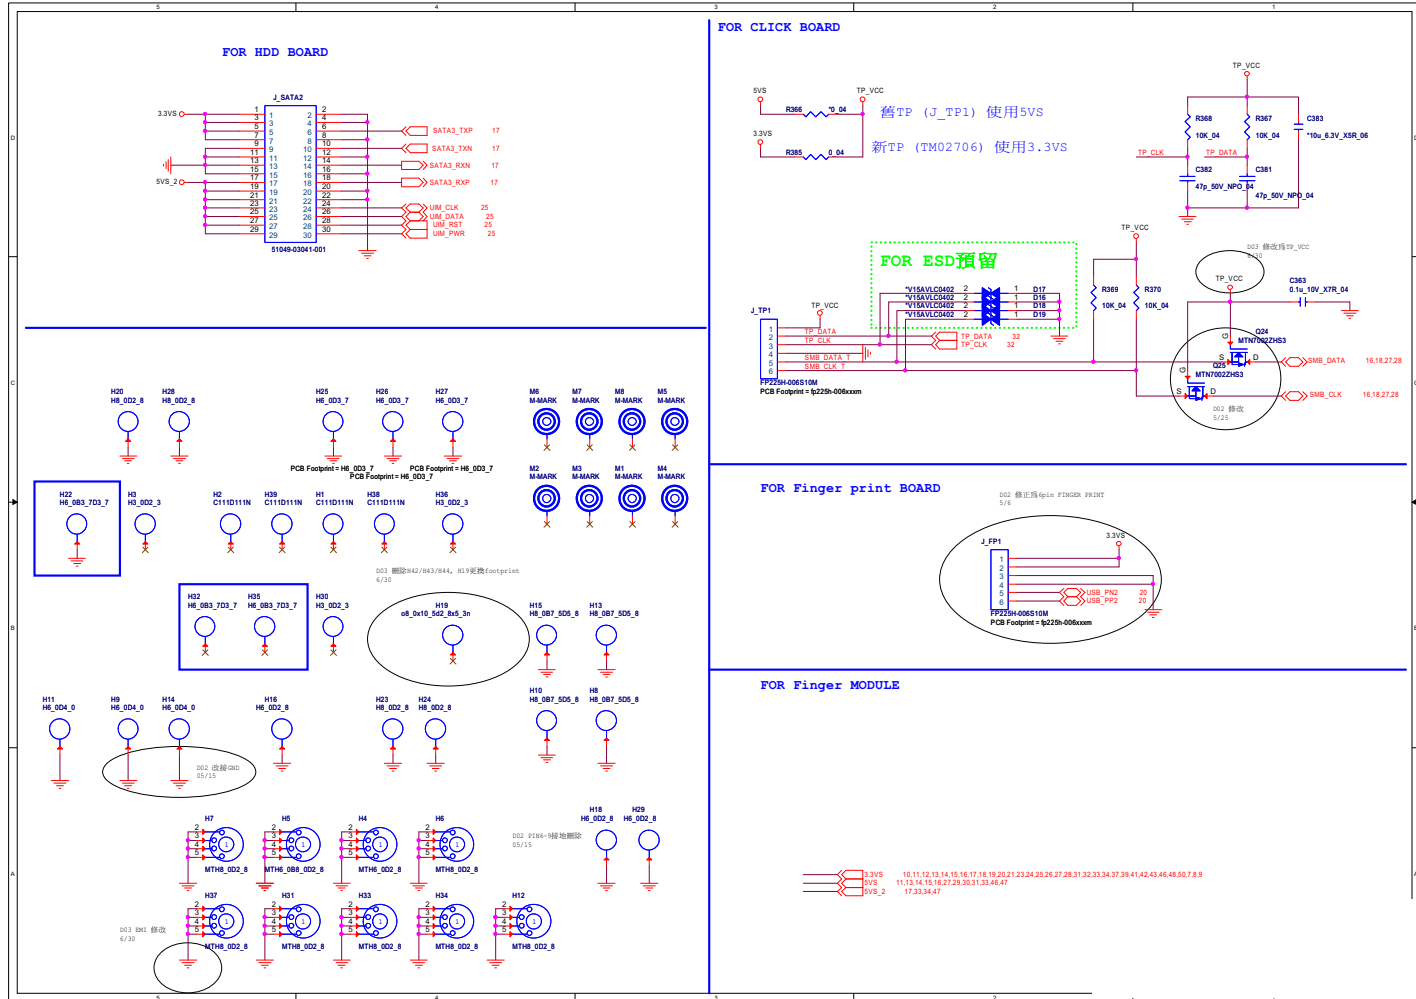

PS8338B + PS8330B


B.Schematic Diagrams

Sheet 37 of 62
PS8338B +
PS8330B

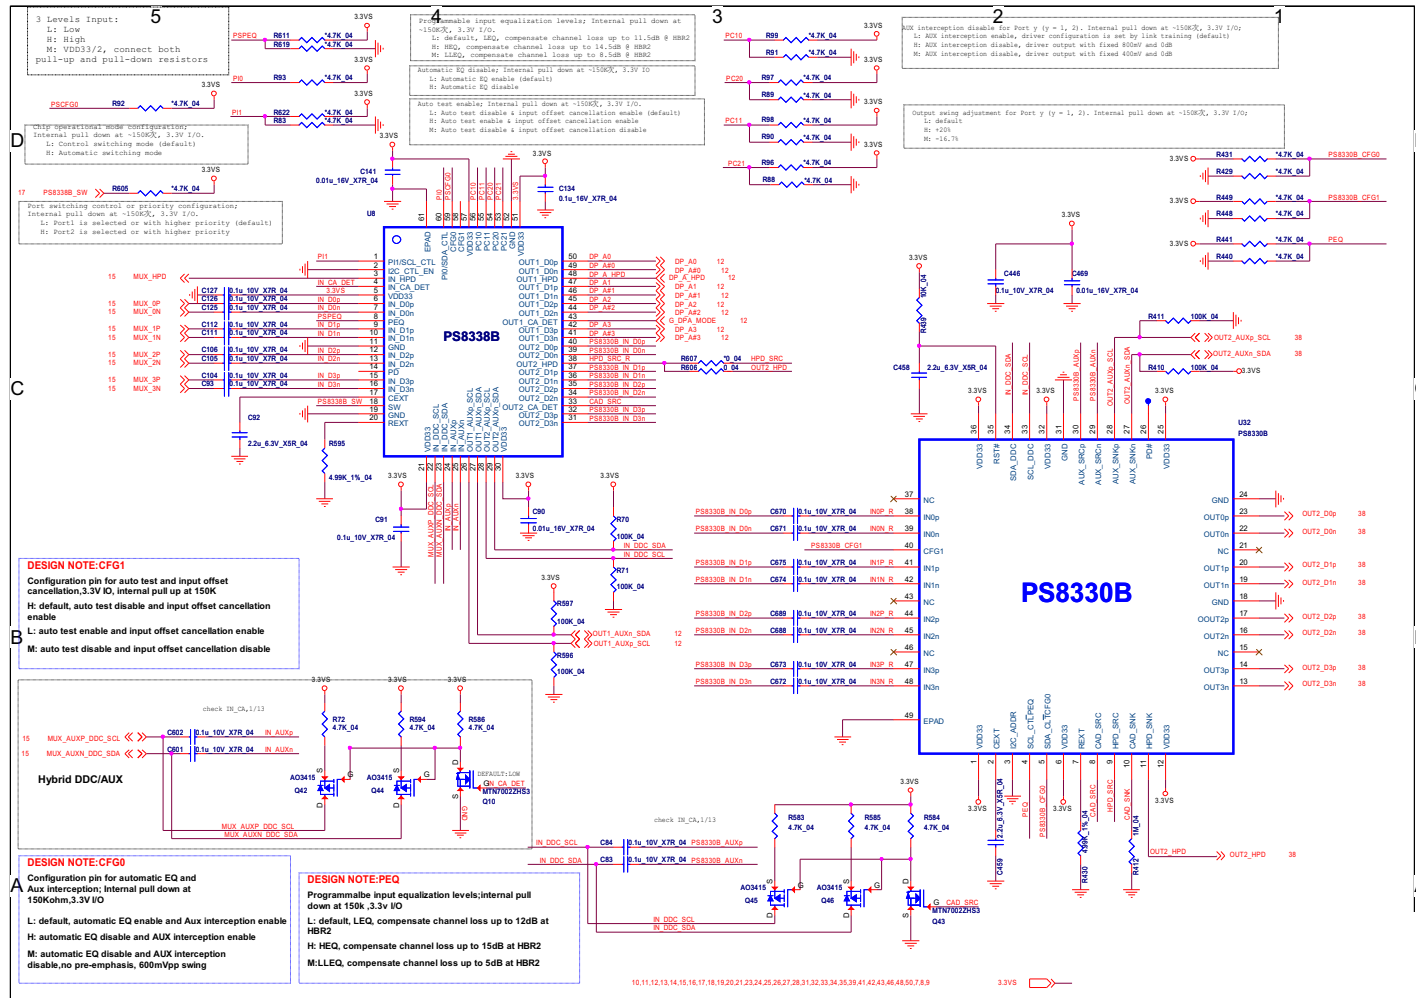

TBT

Sheet 38 of 62
TBT

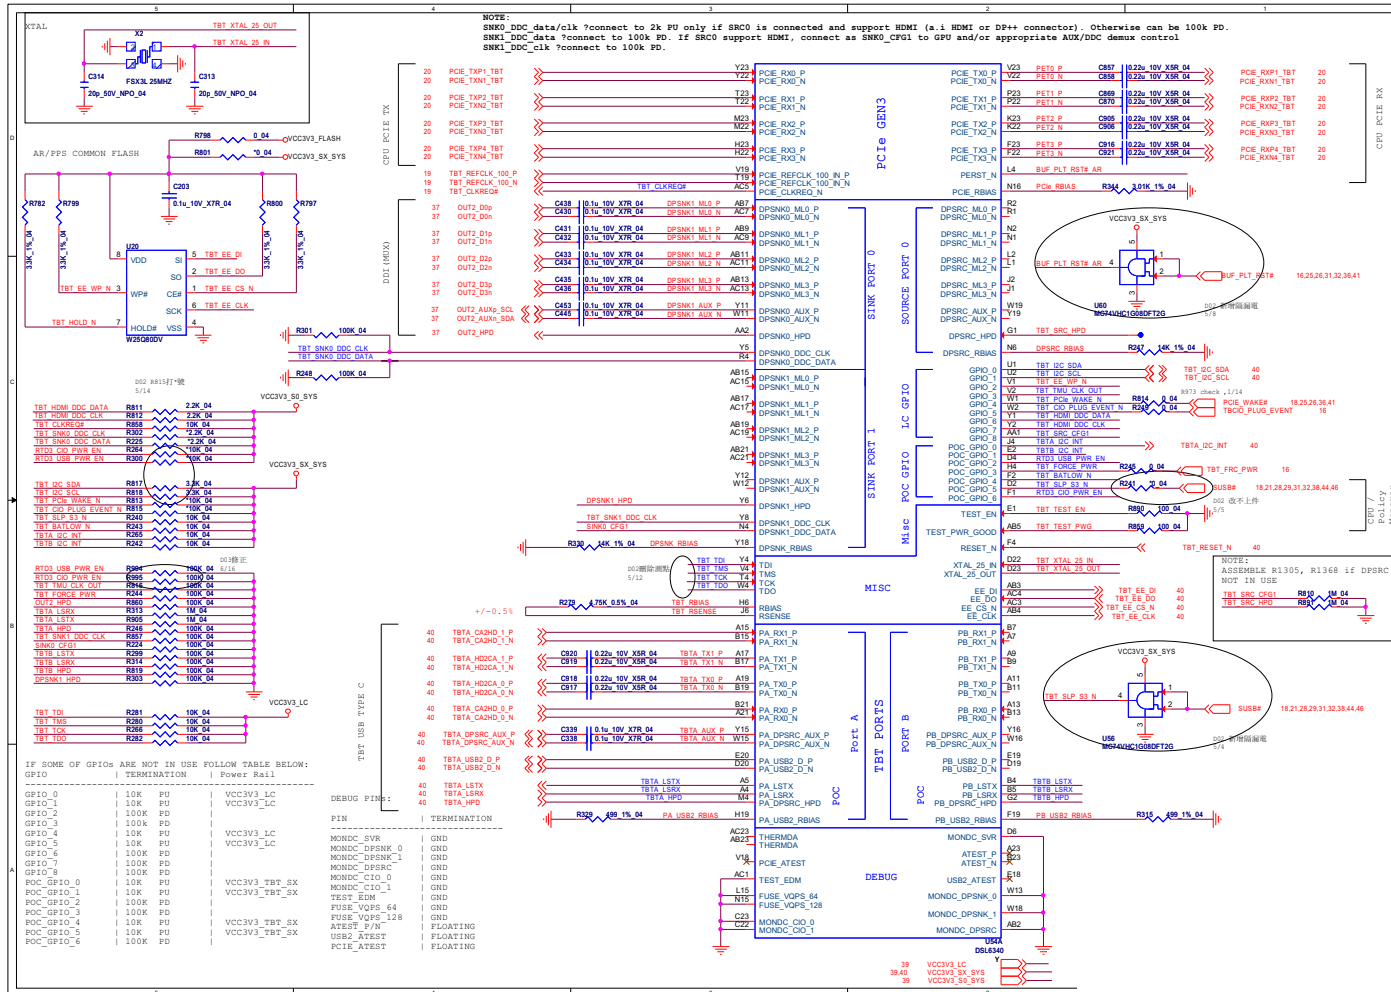


Schematic Diagrams


Power

B.Schematic Diagrams

Sheet 39 of 62
Power

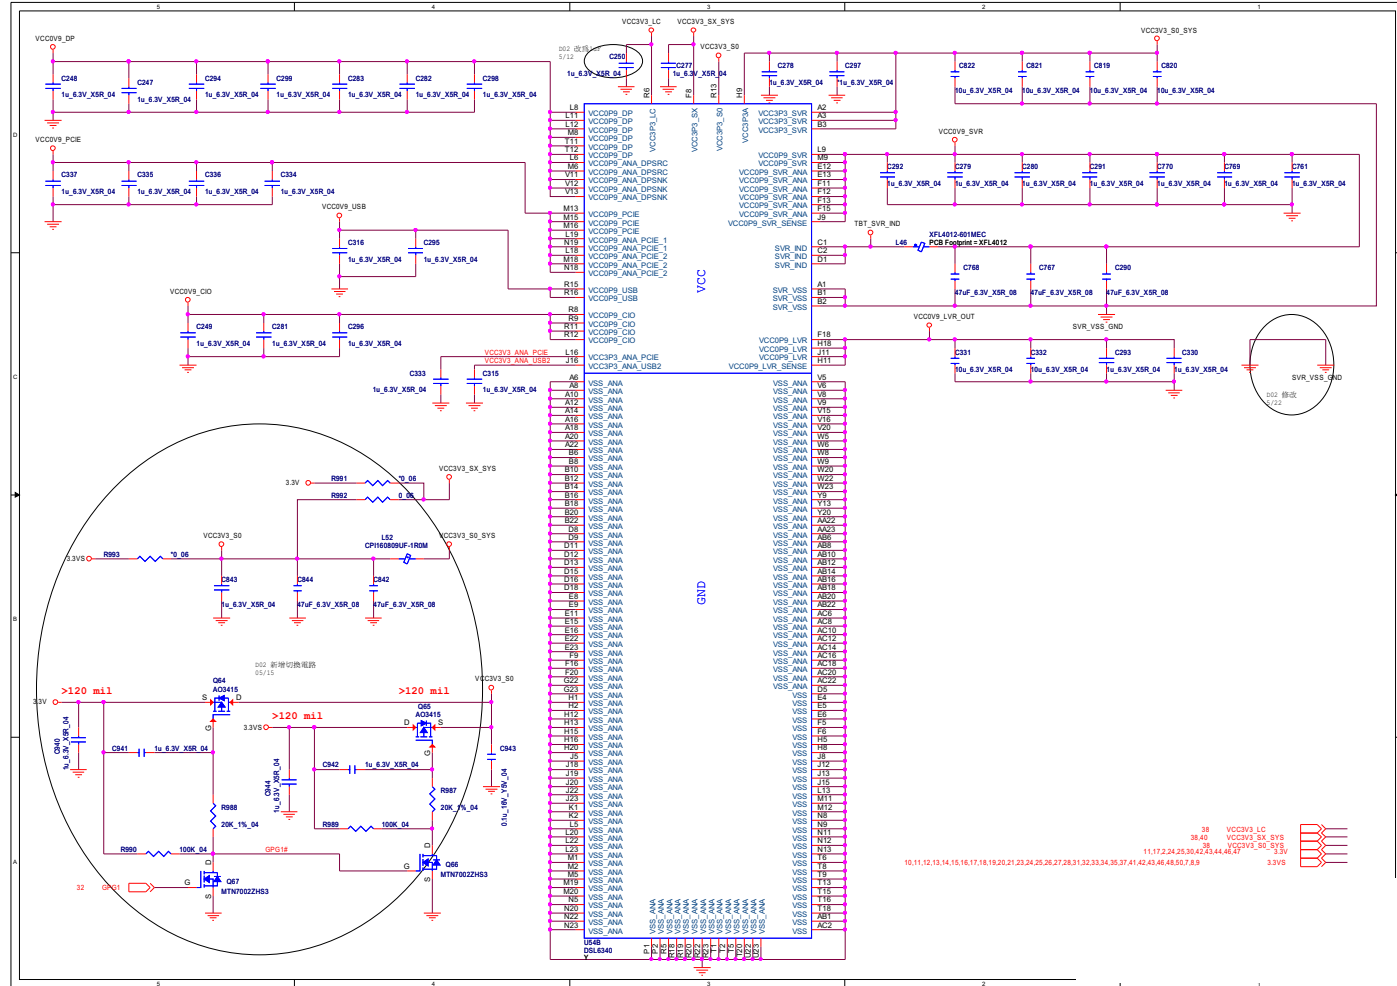

TPS65982

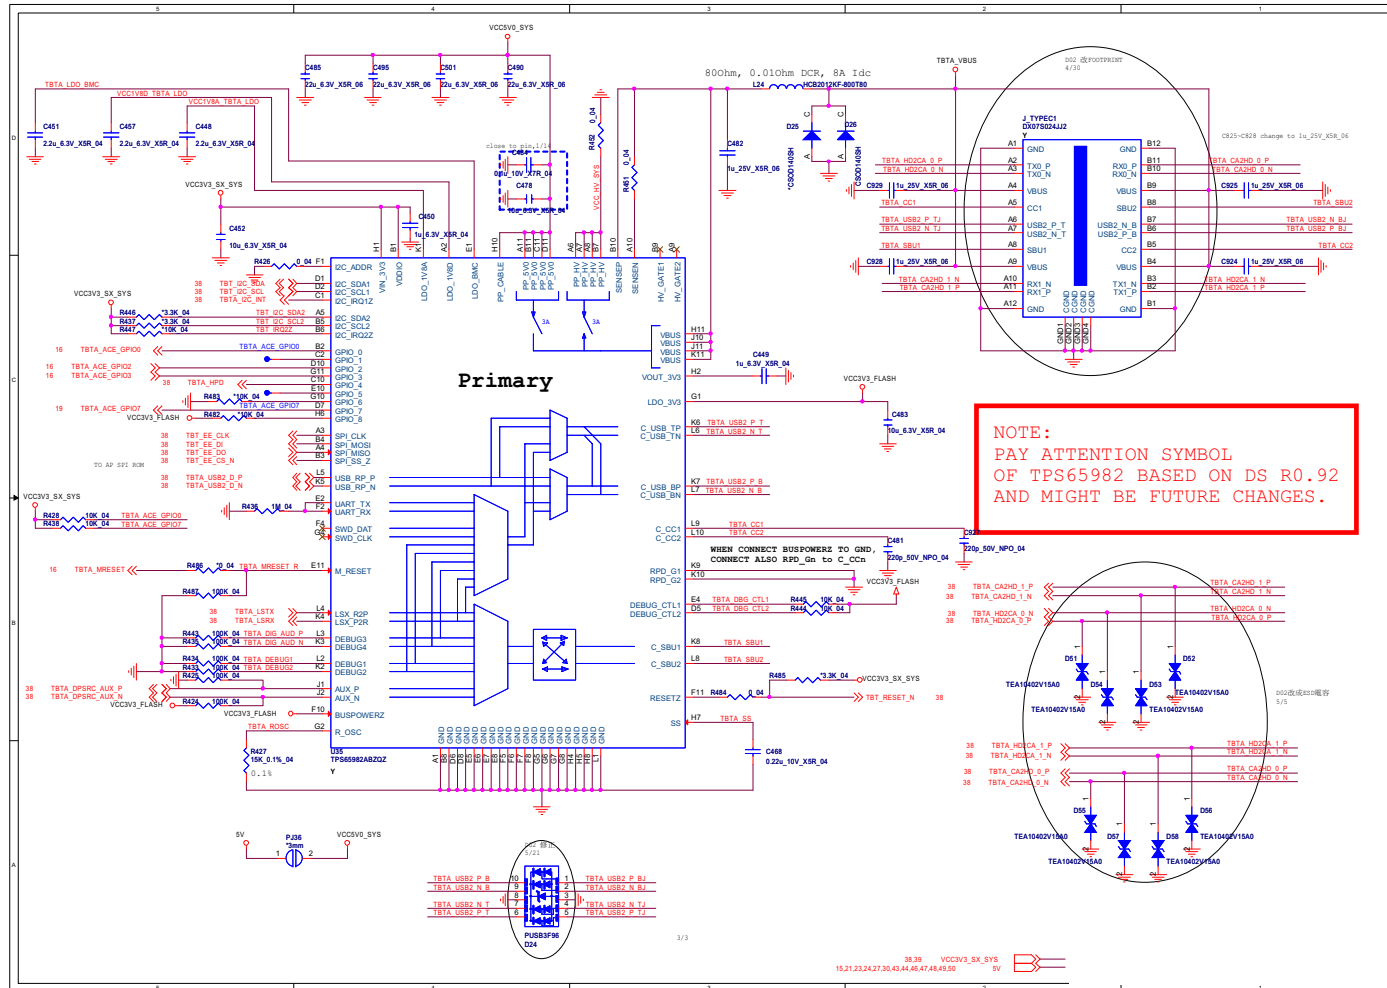


Sheet 40 of 62
TPS65982


B.Schematic Diagrams

Cardreader RTS5250

Sheet 41 of 62
Cardreader
RTS5250

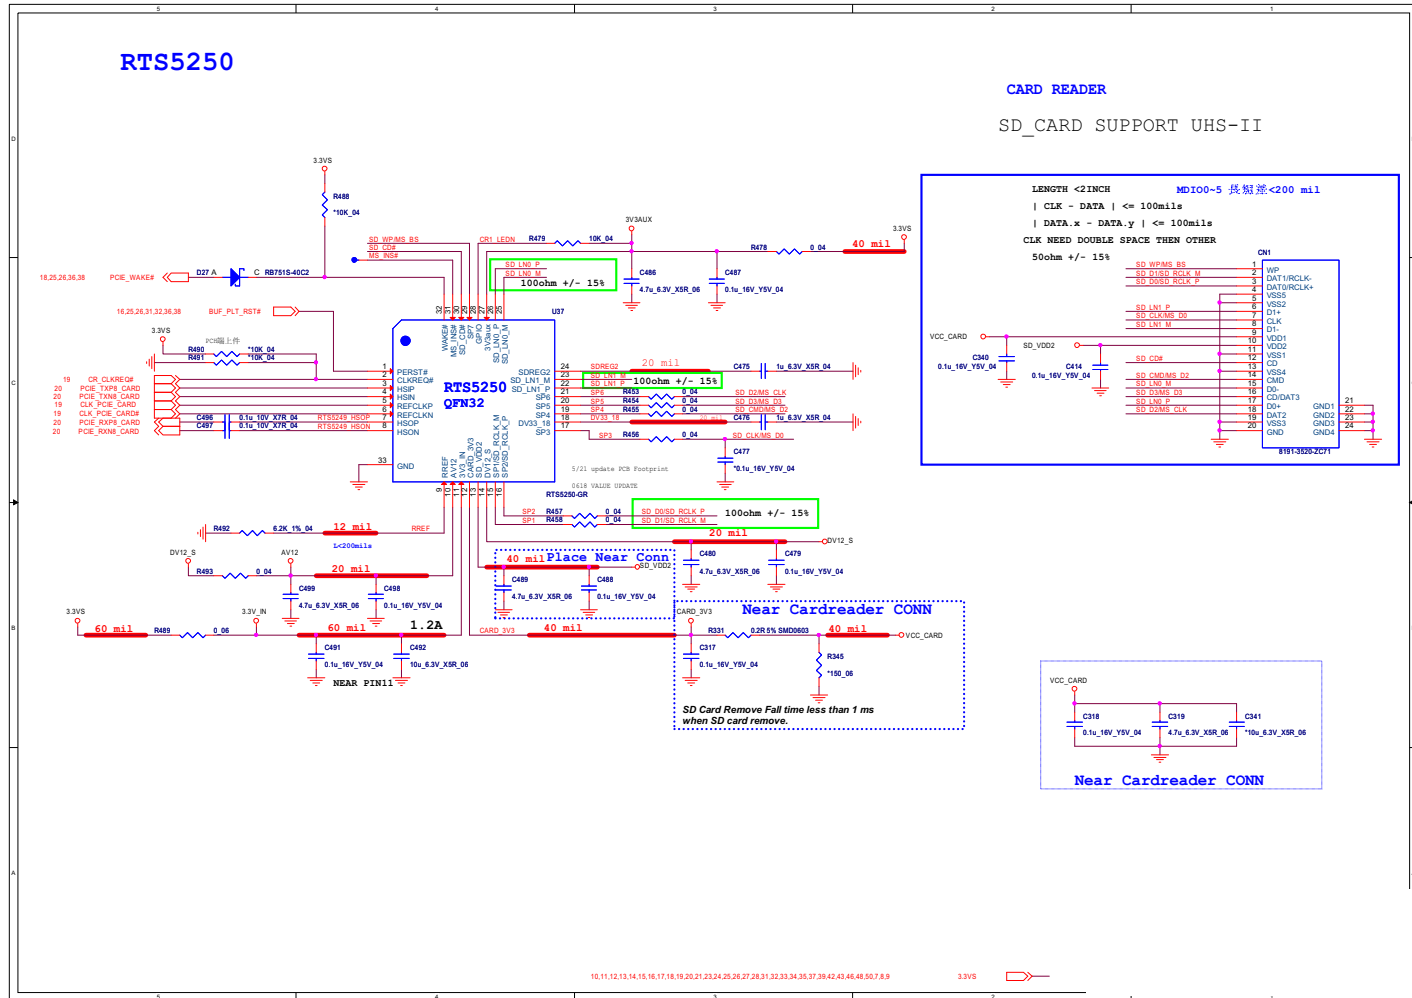


TPM SLB9655TT & NPCT420

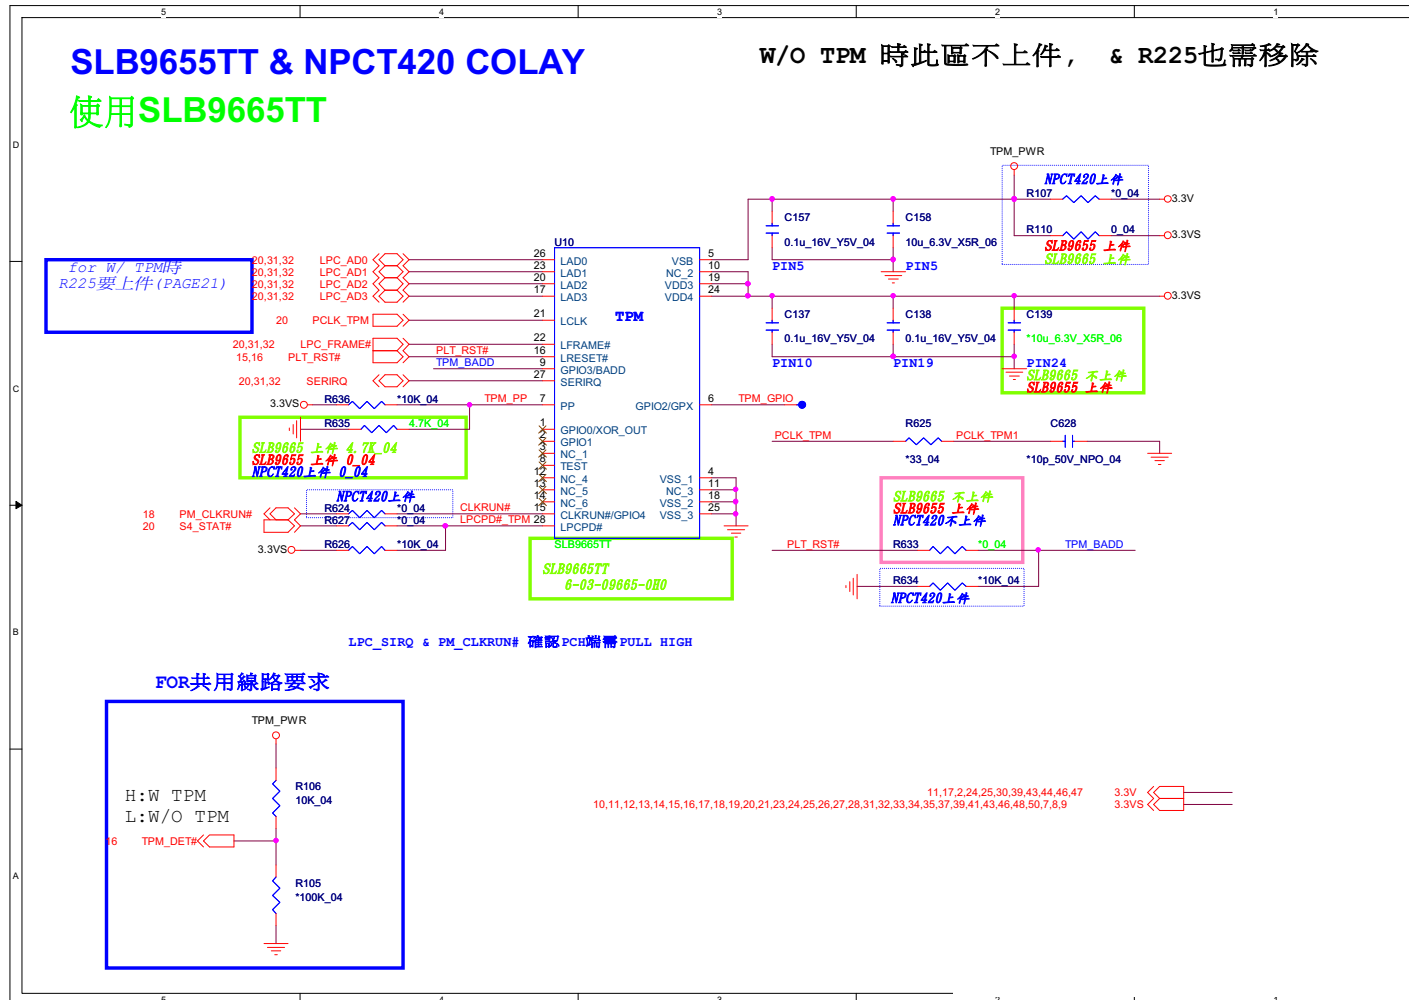

Sheet 42 of 62
 TPM SLB9655TT &
 NPCT420

DDR 1.2V/0.6VS/VCCPLL_OC

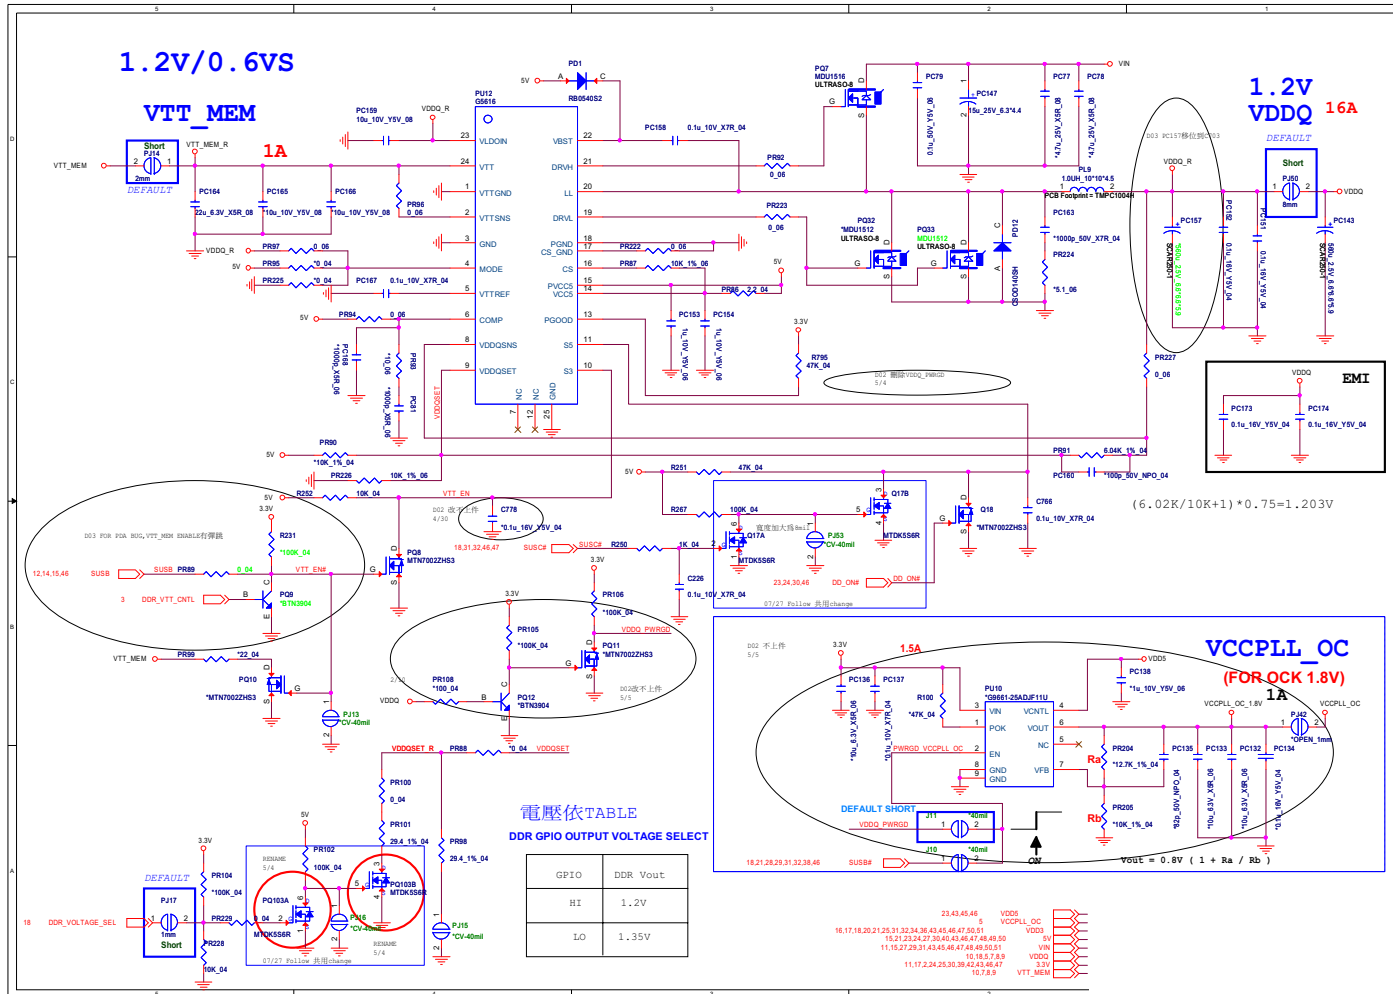


Sheet 44 of 62
DDR 1.2V/0.6VS/
VCCPLL_OC

B.Schematic Diagrams


Schematic Diagrams

VDD3, VDD5

Sheet 45 of 62
VDD3, VDD5

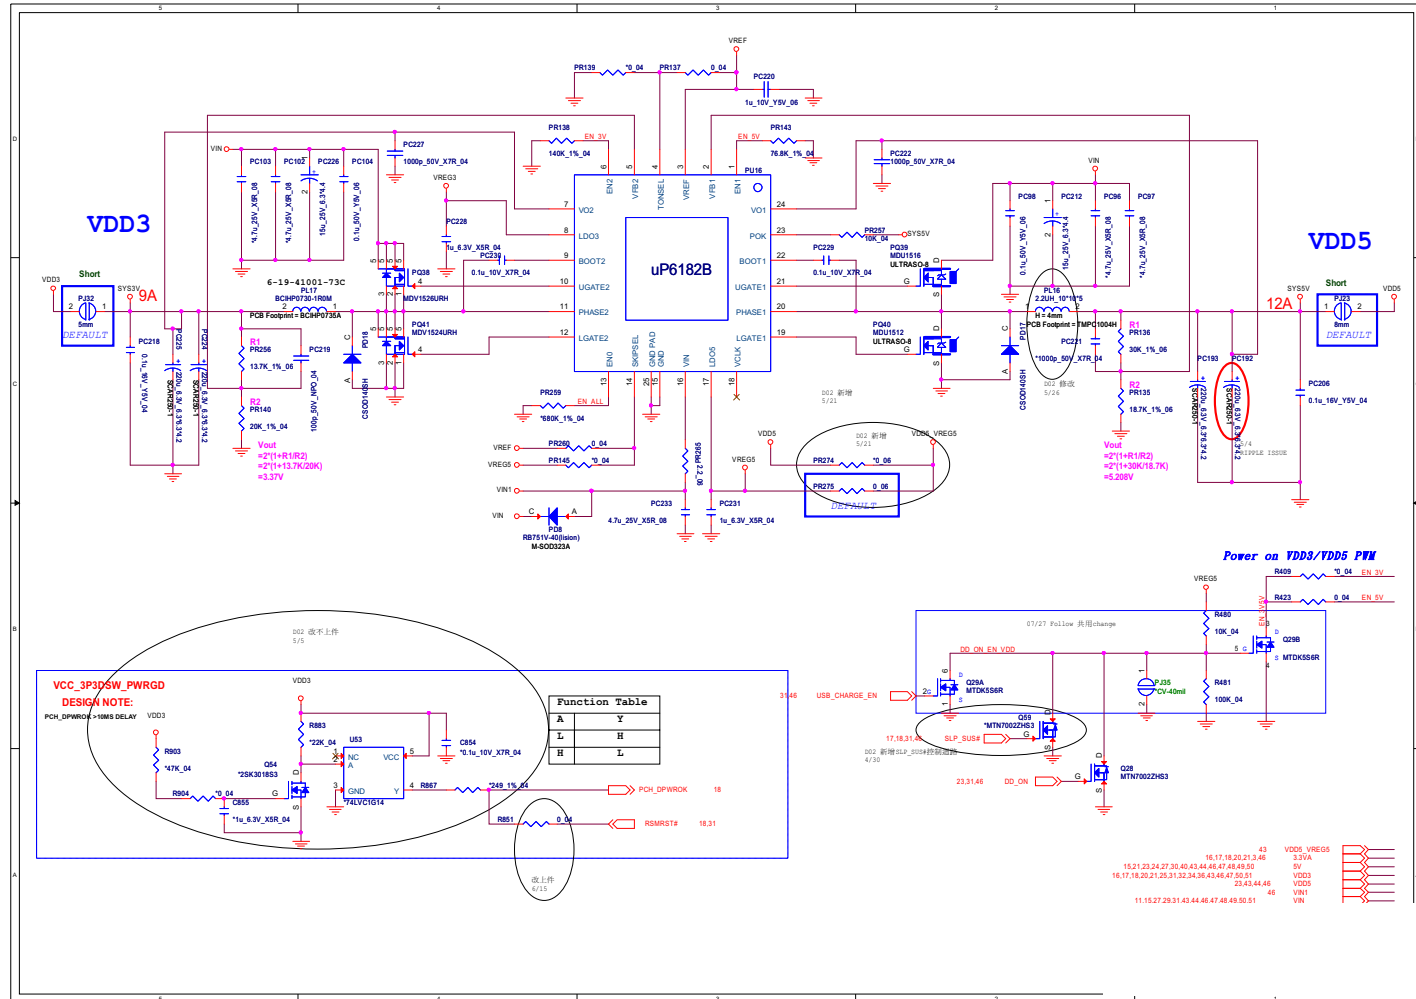

12V, 5VS, 3.3VS, 3.3VA

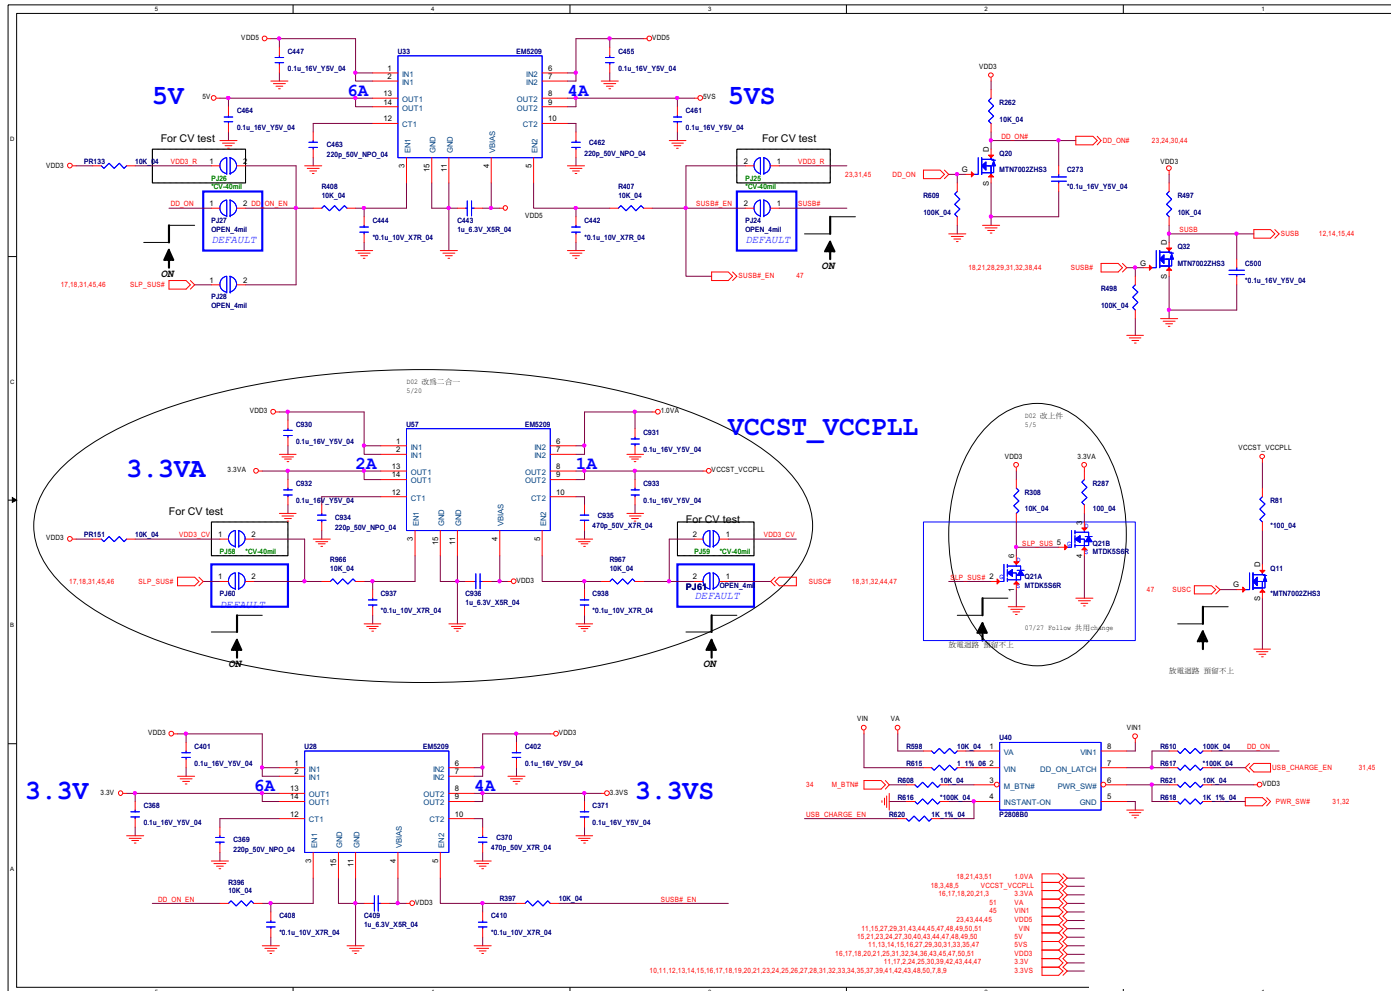


Sheet 46 of 62
12V, 5VS, 3.3VS,
3.3VA


Schematic Diagrams

5VS_2

Sheet 47 of 62
5VS_2

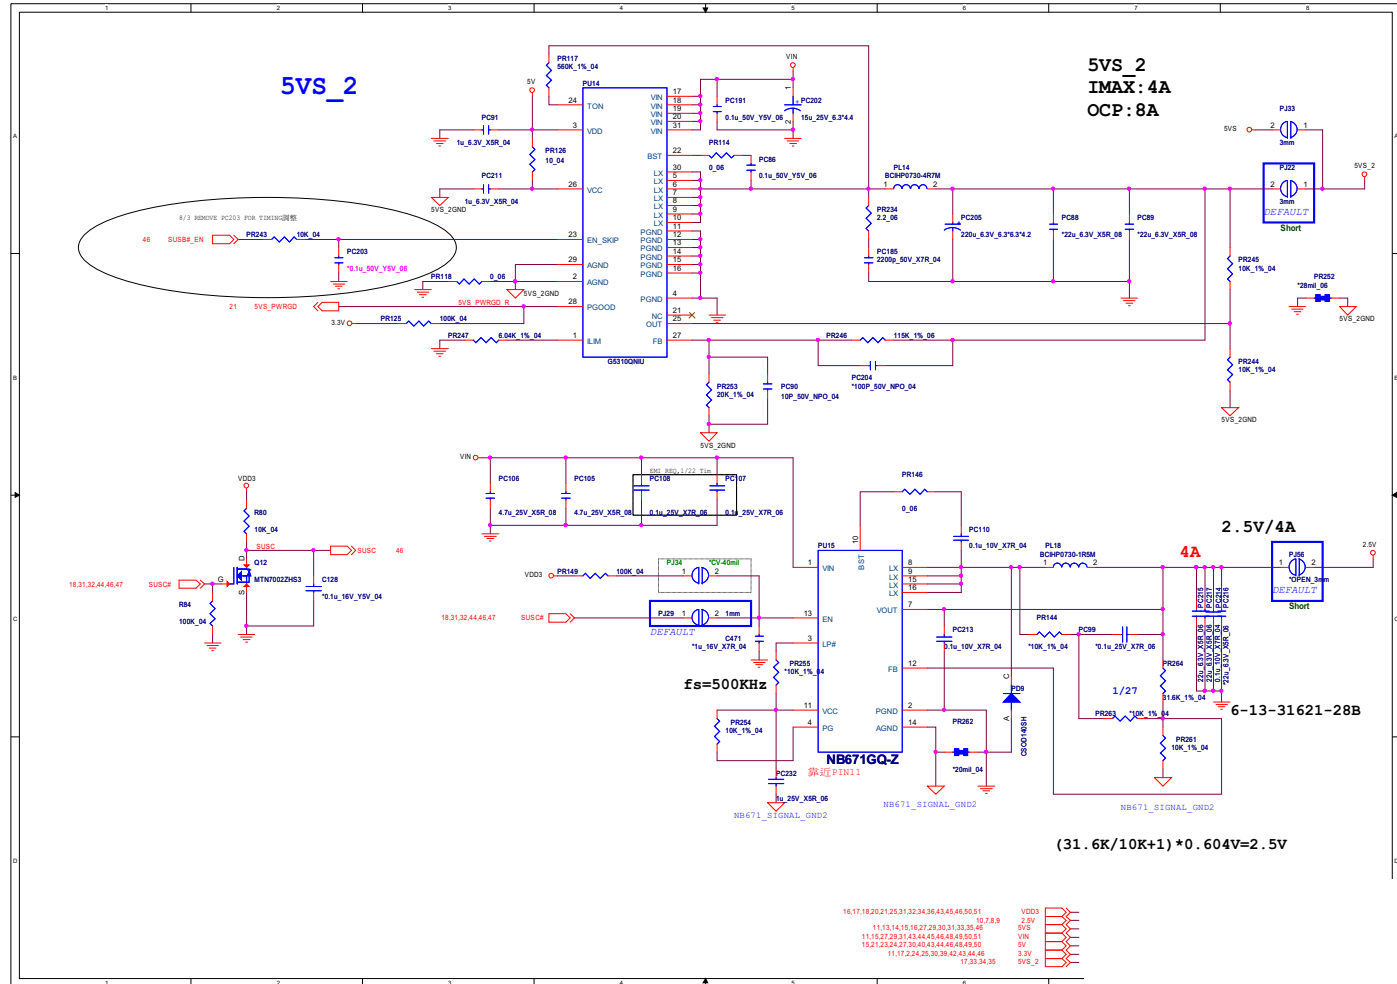

VCCSA / VCCGT

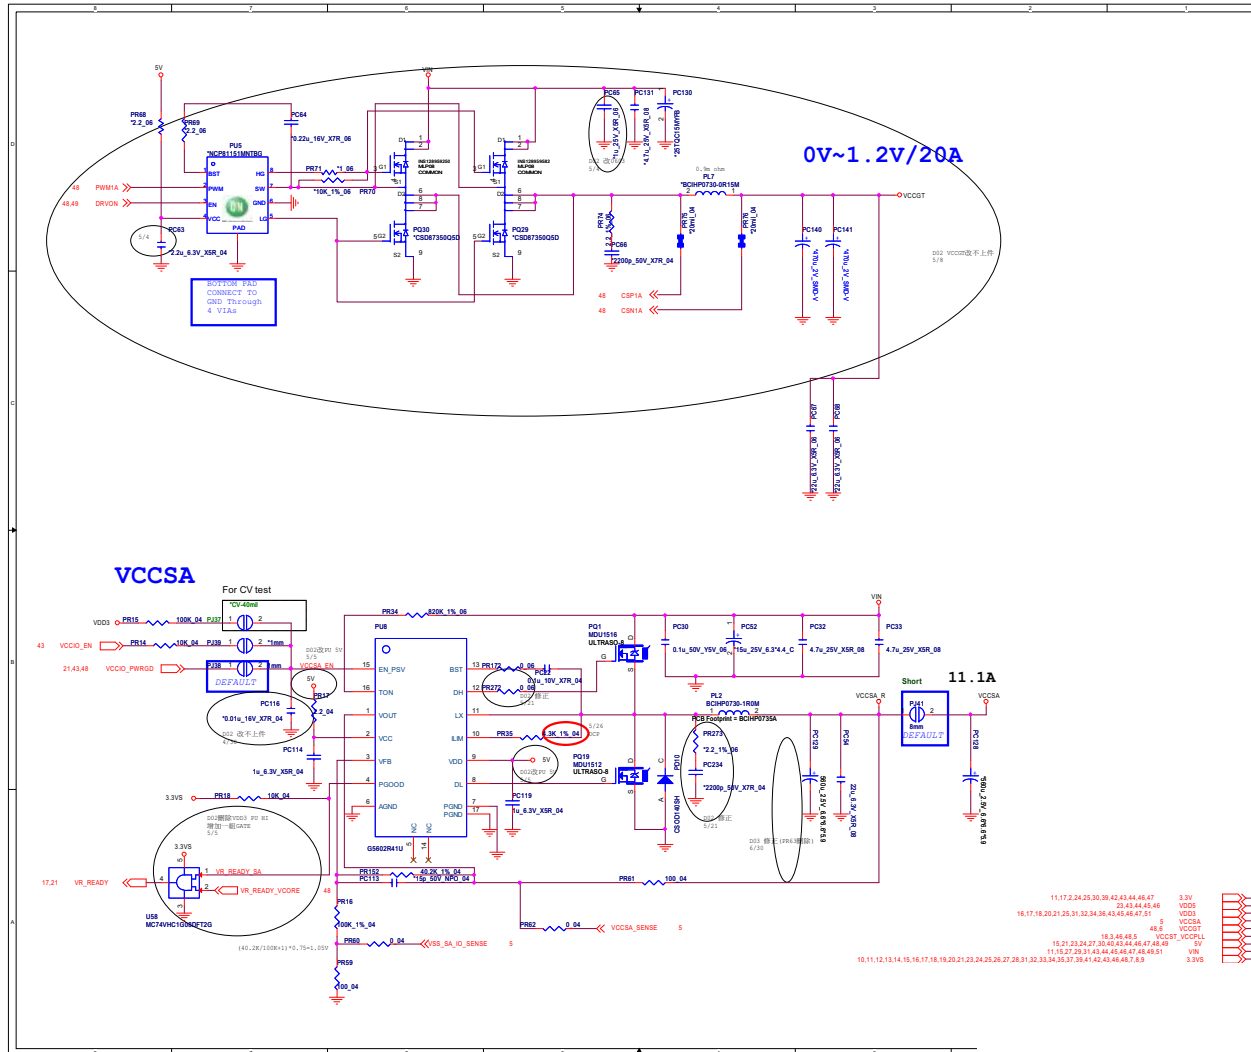


Sheet 50 of 62
VCCSA / VCCGT

B.Schematic Diagrams


P750DM Power LED Board

Sheet 53 of 62
P750DM Power
LED Board

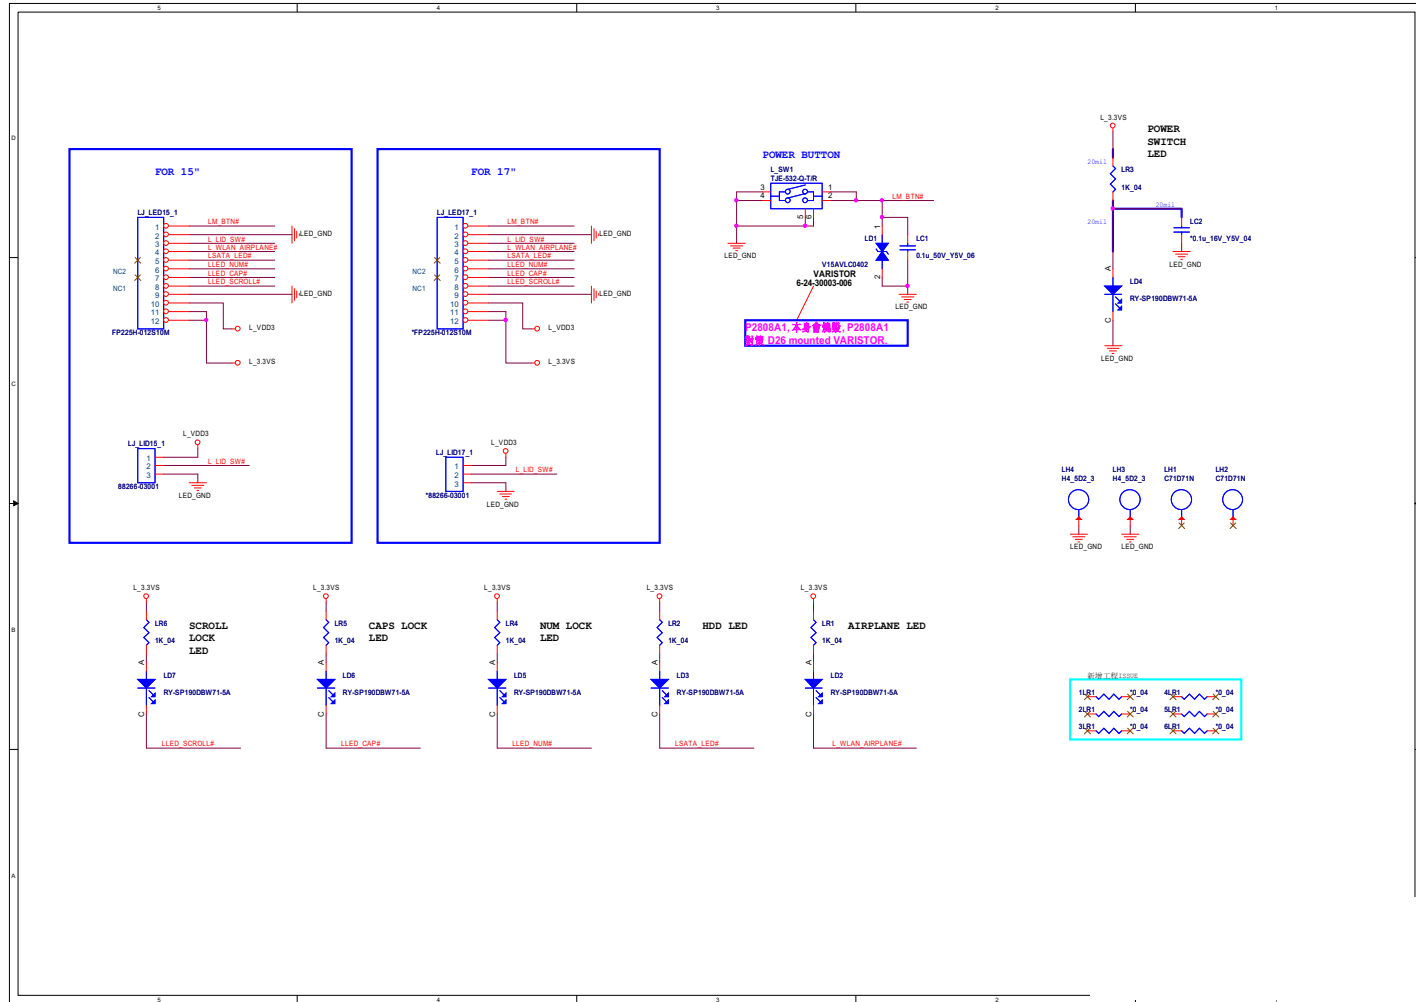


P750DM Audio Board

Sheet 55 of 62
P750DM Audio
Board

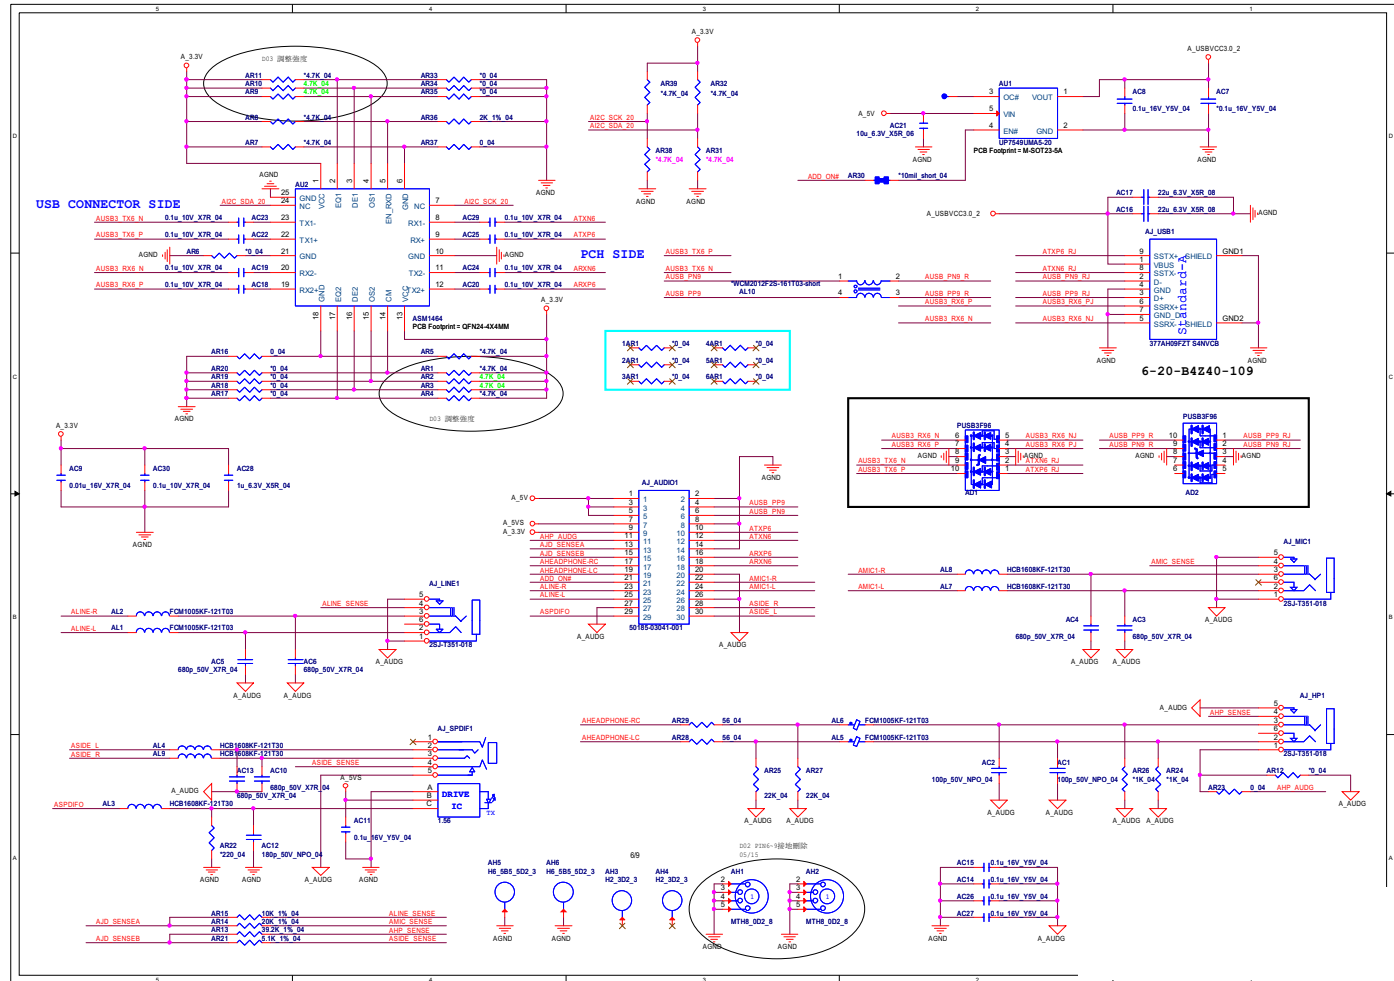


P750DM Charge LED Board

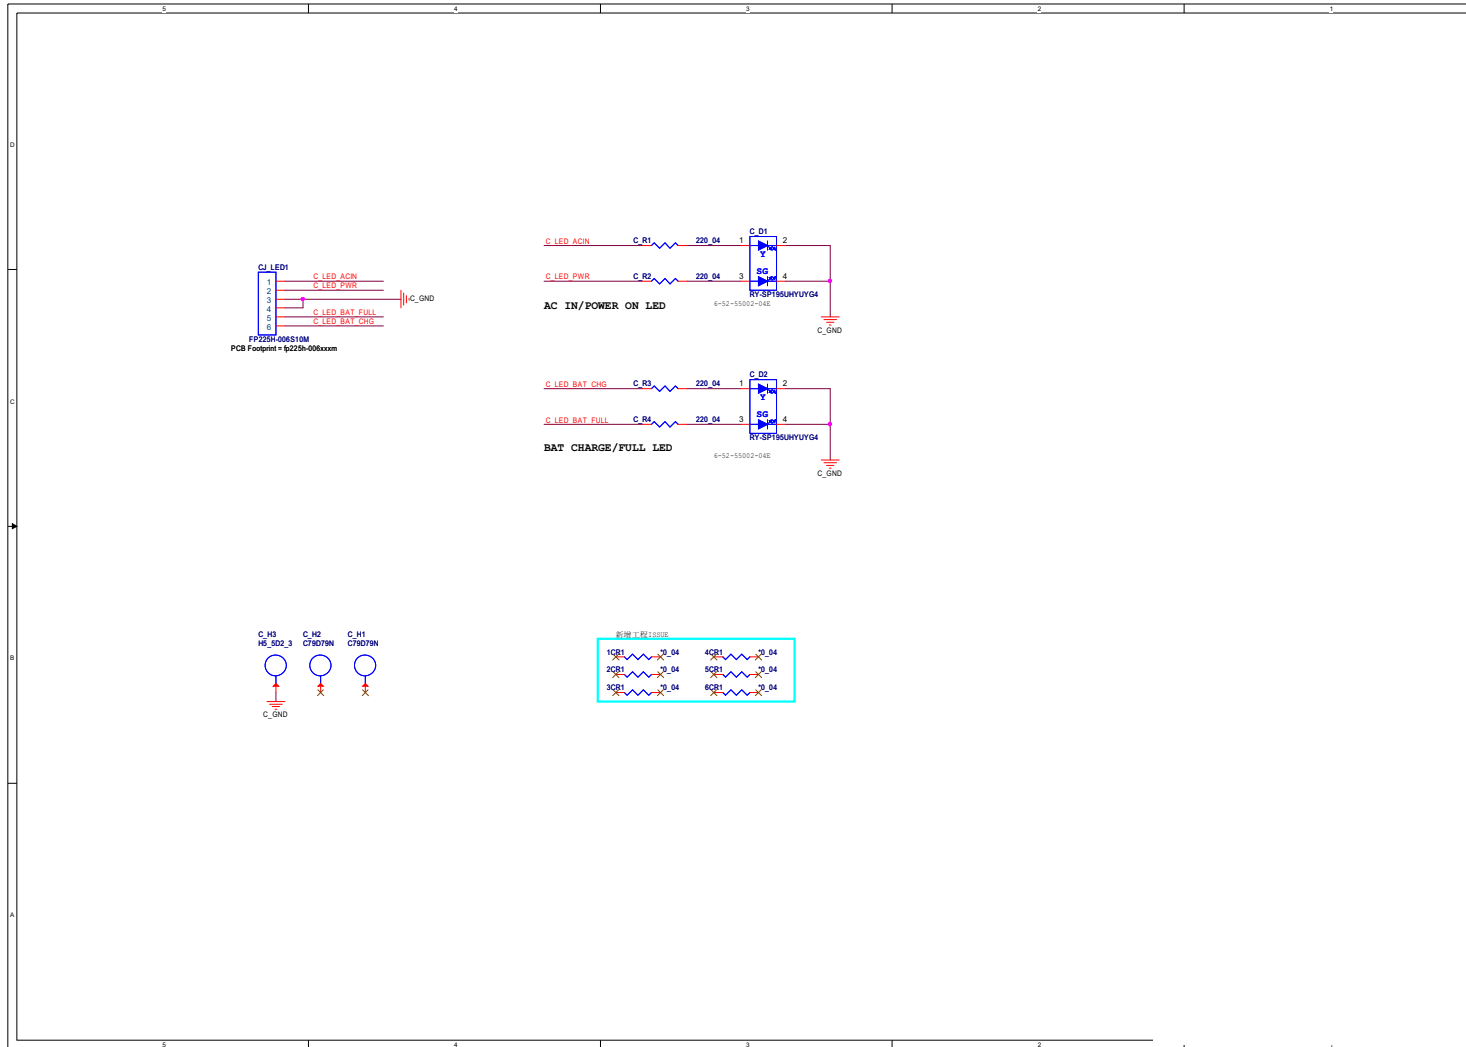

Sheet 56 of 62
P750DM Charge
LED Board

B.Schematic Diagrams


P750DM Finger Sensor Board

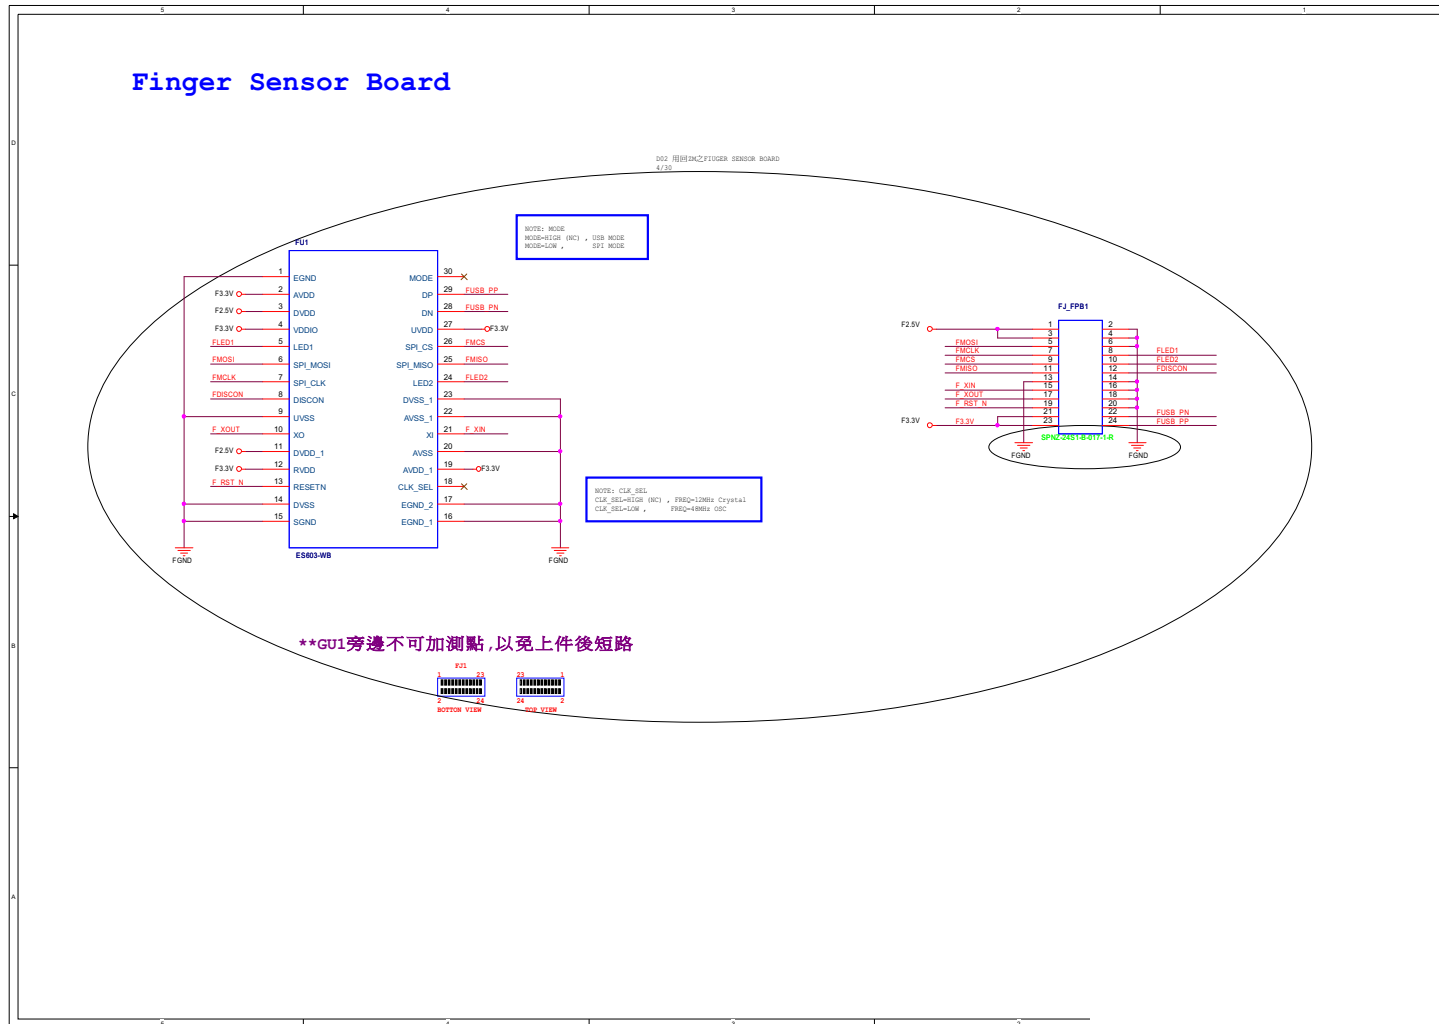


Sheet 58 of 62
P750DM Finger
Sensor Board

P770DM Charge LED Board

Sheet 59 of 62
P770DM Charge
LED Board

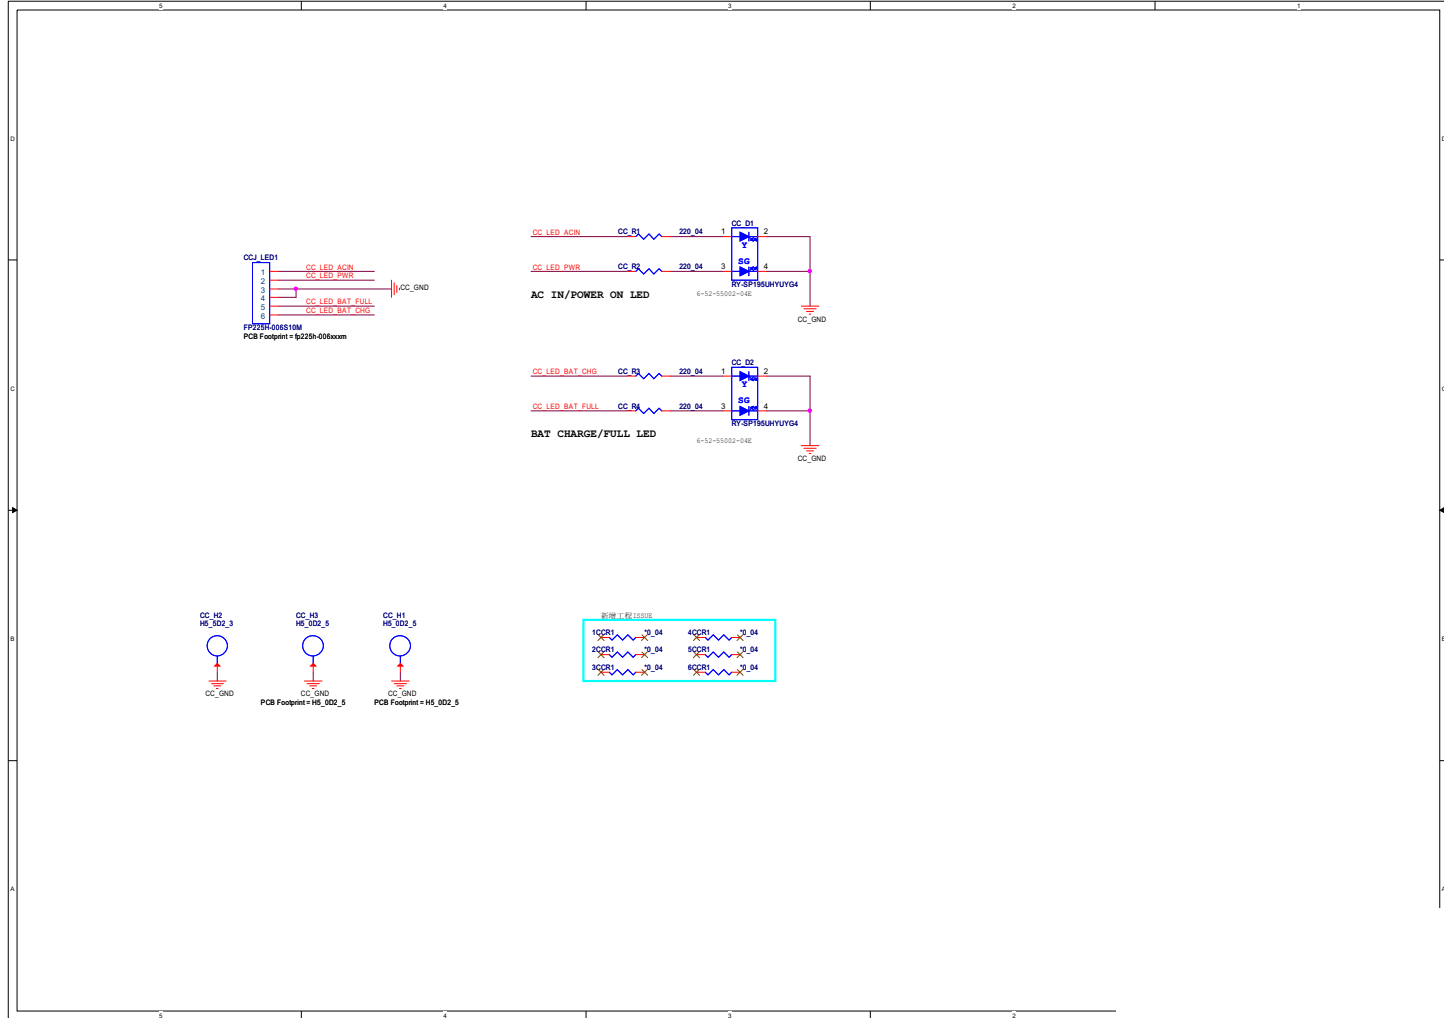

P750DM BOT LED Board

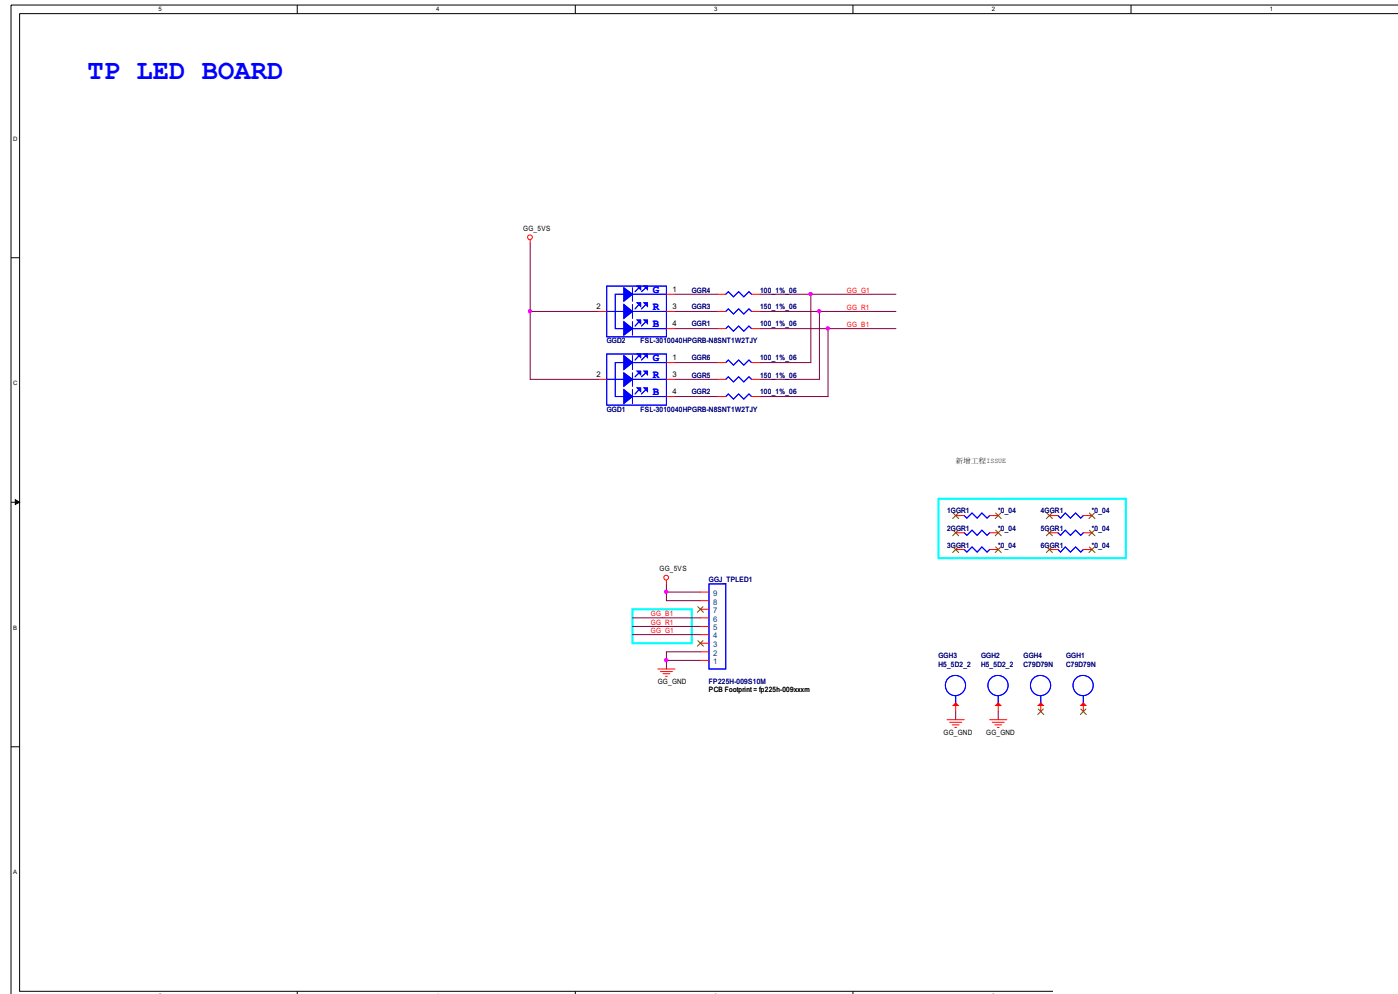


Sheet 60 of 62
P750DM BOT LED
Board


B.Schematic Diagrams

P775DM Power LED Board

Sheet 61 of 62
P775DM Power LED Board

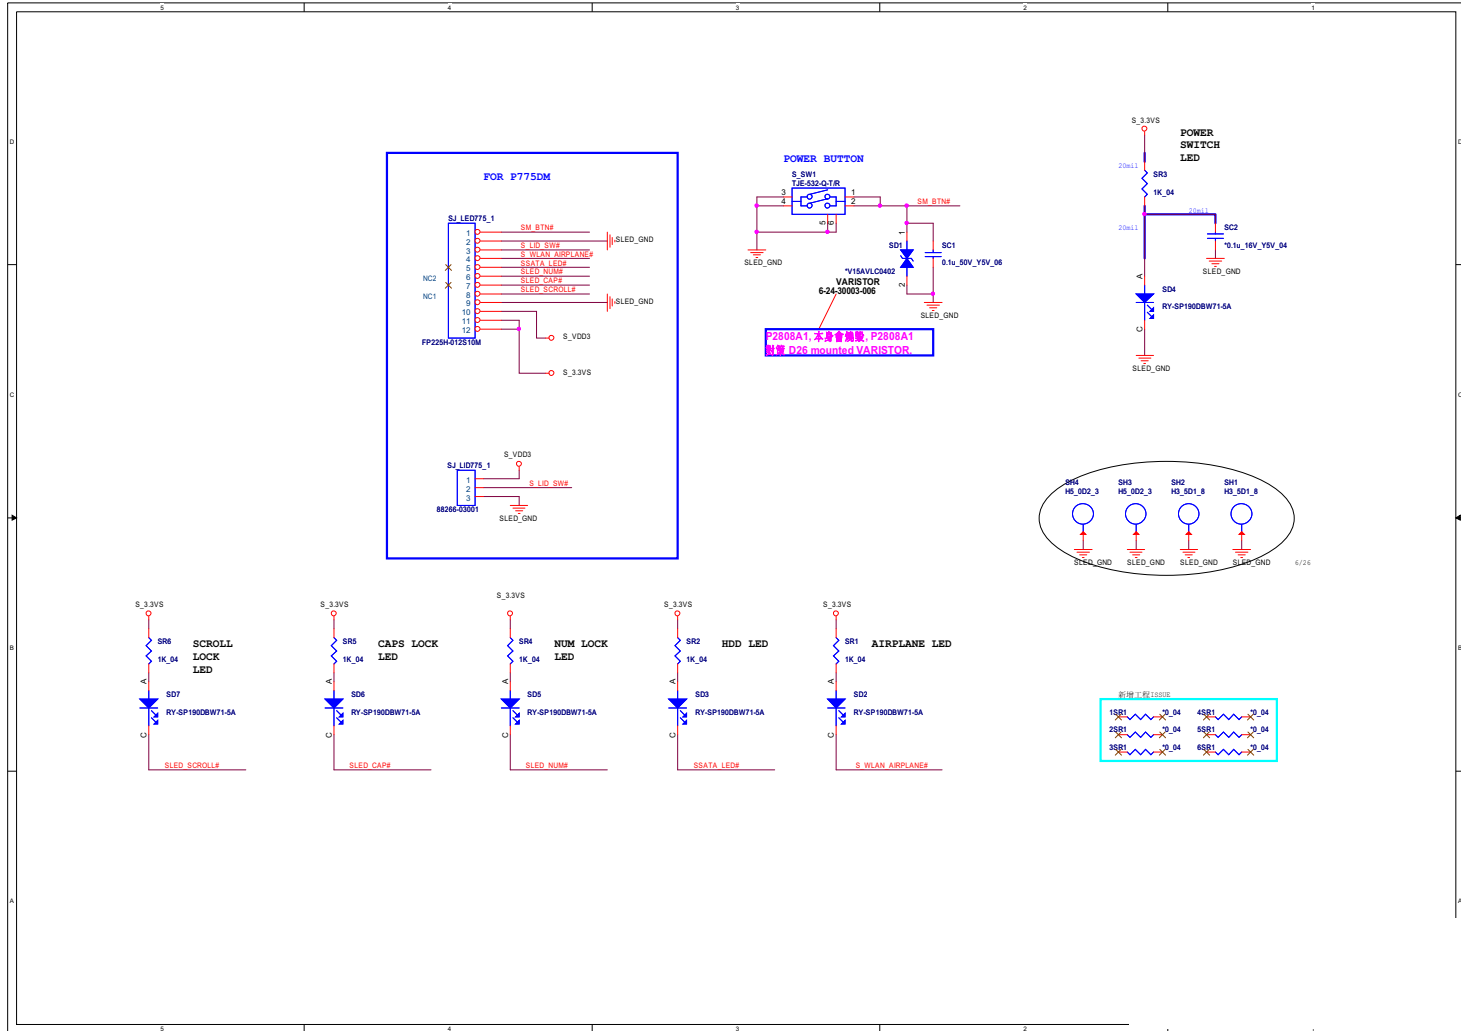

Power On Sequence

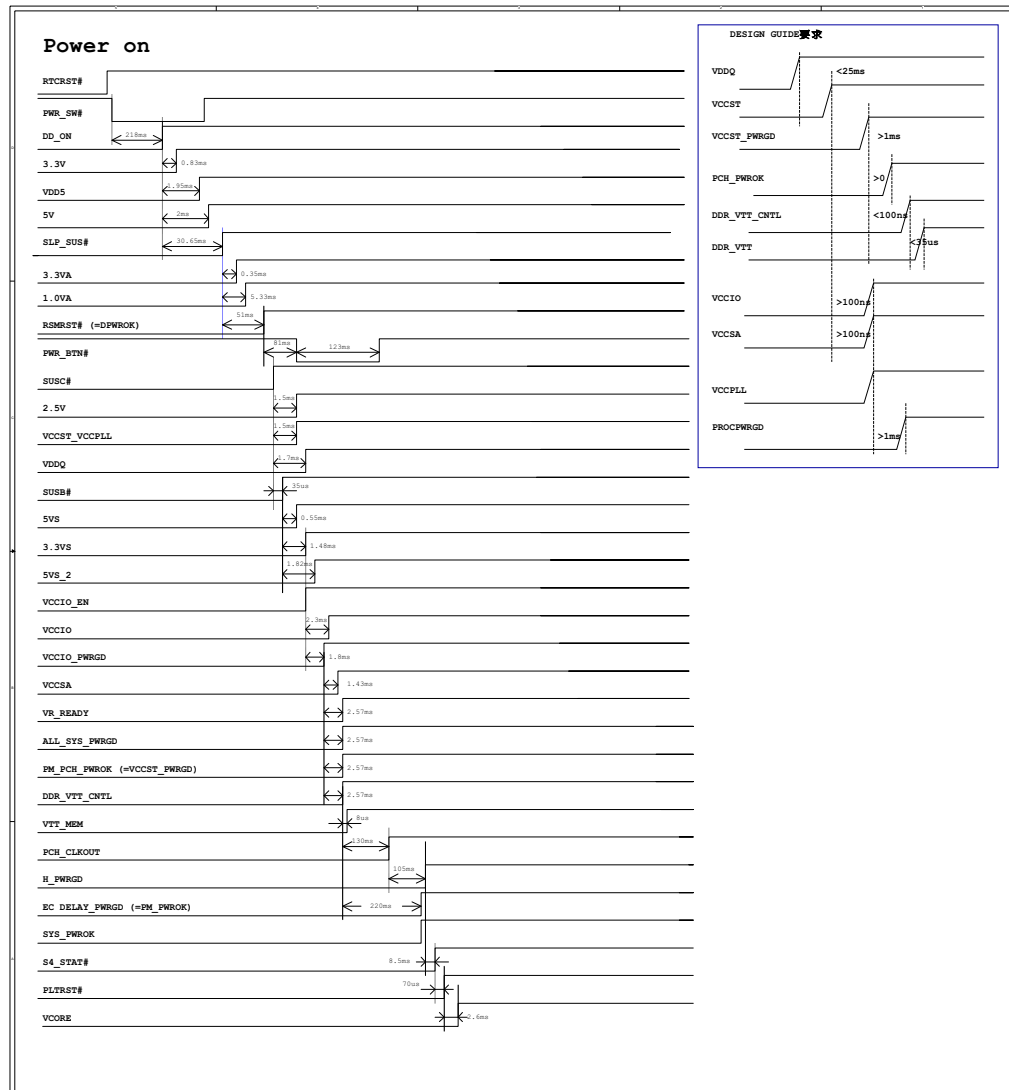

Sheet 62 of 62
Power On
Sequence

Schematic Diagrams

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are **V1.01.XX or higher** as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt e.g: DISK C:\> (C is the designated drive letter for the CD/DVD drive/USB flash drive).
3. **Type the following command** at the DOS prompt:

C:\> Flash.bat

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.